



CABINET ASSEMBLY INSTRUCTIONS

JARVIN
CABINETS

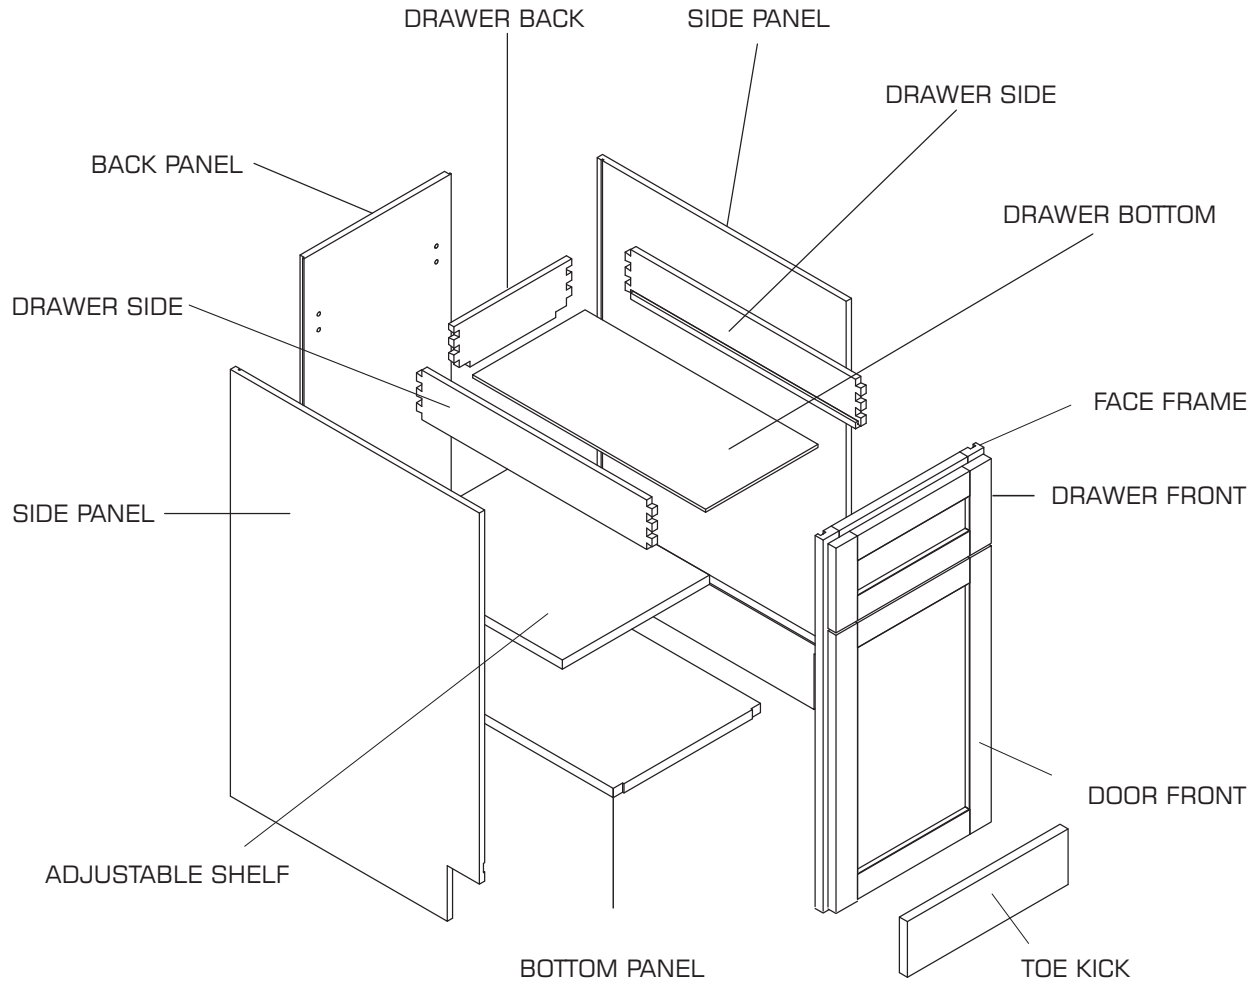


TABLE OF CONTENTS

Assembling Instructions - Base Cabinet	3-6
Assembling Instructions - Lazy Susan Corner Base Cabinet	7-12
Assembling Instructions - Blind Corner Base Cabinet	13-18
Assembling Instructions - Base 3 Drawers Cabinet.	19-24
Assembling Instructions - Wall Cabinet	25-27
Assembling Instructions - Wall Diagonal Corner Cabinet	28-32
Assembling Instructions - Pantry	33-38
Assembling Instructions - Oven Cabinet	39-45
Assembling Instructions - Vanity	46-51

ASSEMBLING INSTRUCTIONS - BASE CABINET

BASE CABINET



<p>GLIDES</p>	<p>METAL BRACKETS</p>	<p>SCREWS</p>	<p>SHELF CLIPS</p>	<p>GLIDE SUPPORTS</p>
---------------	-----------------------	---------------	--------------------	-----------------------

TOOLS


<p>WOOD GLUE</p>	<p>SCREW DRIVER</p>	<p>RUBBER Mallet</p>	<p>NAIL GUN</p>	<p>STAPLER</p>	<p>SPOTNAILS XC1008</p>
------------------	---------------------	----------------------	-----------------	----------------	-------------------------

JARLIN


CABINETY

BASE CABINET


STEP 1

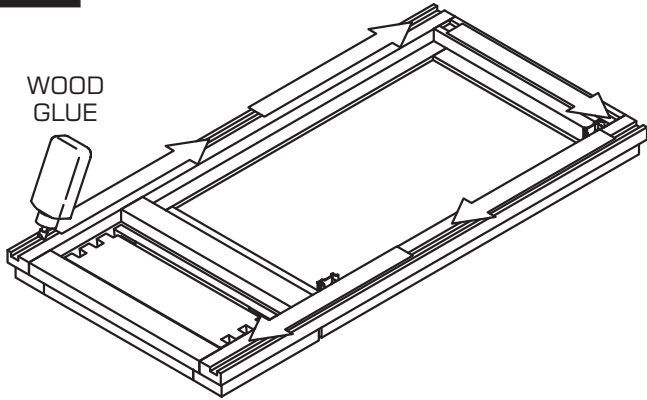


STEP 2

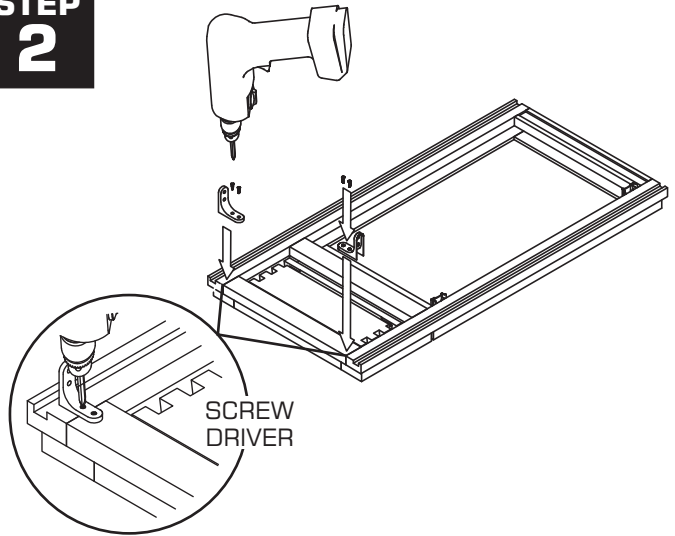


STEP 3

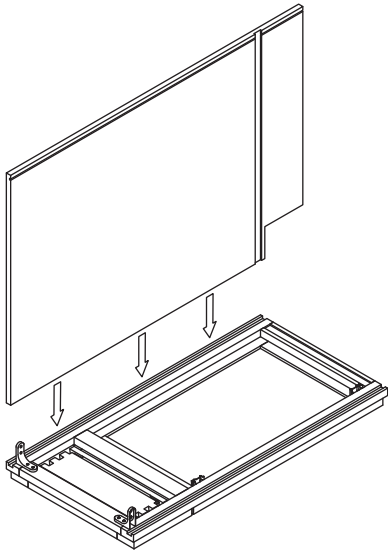


STEP 4

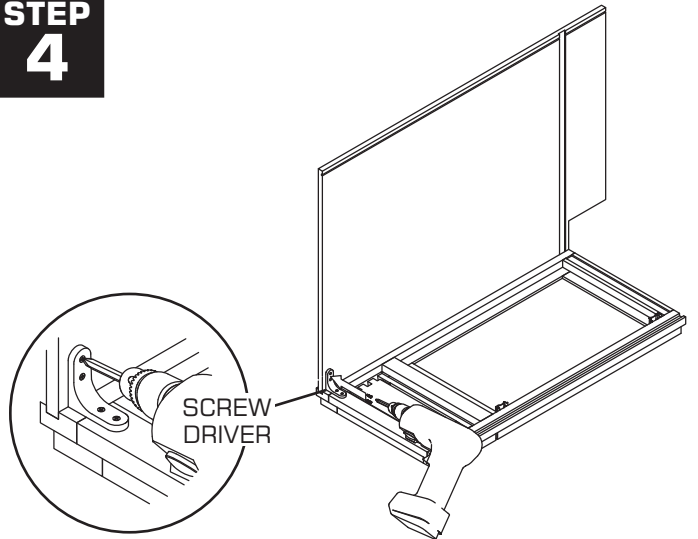

STEP 5

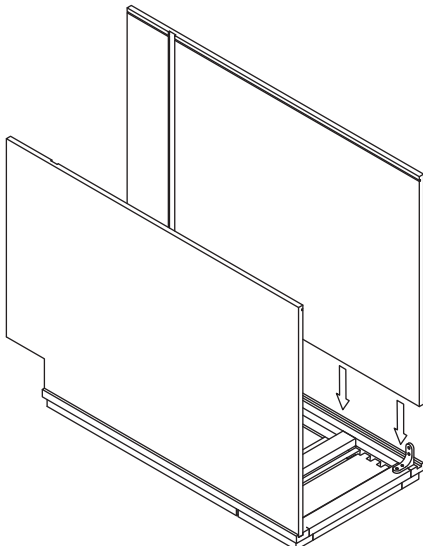

STEP 6

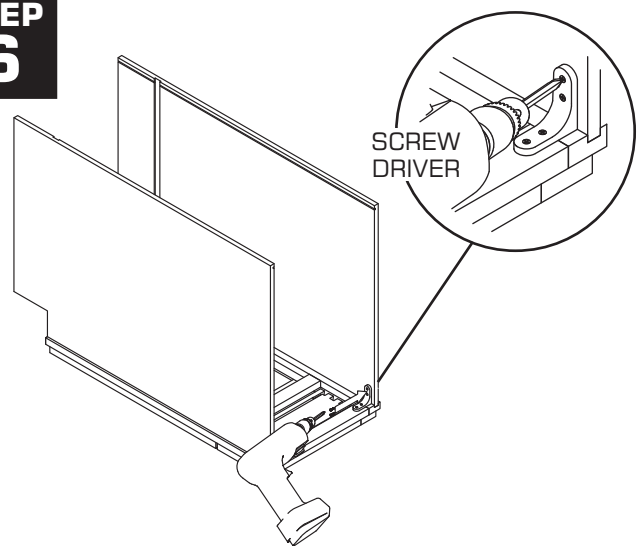


JARLIN


CABINETS

BASE CABINET


STEP 7

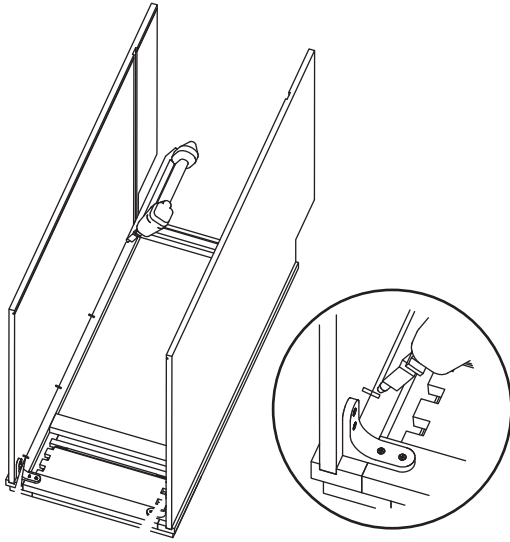


STEP 8

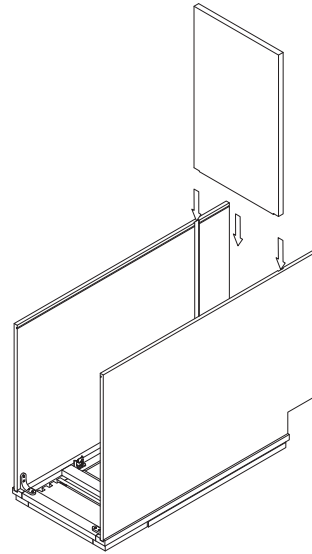


STEP 9

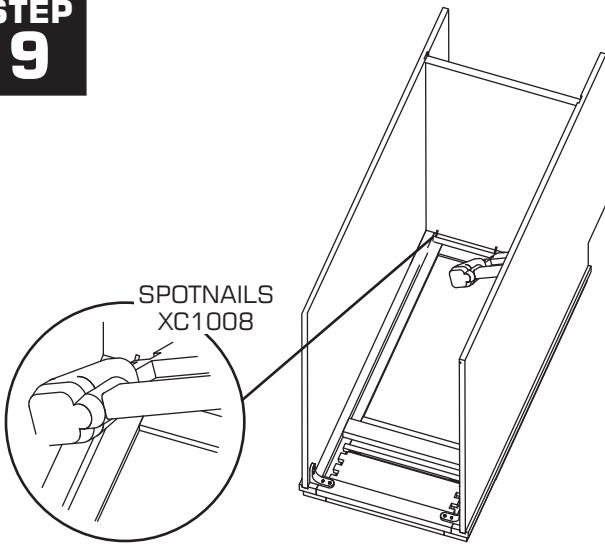

STEP 10

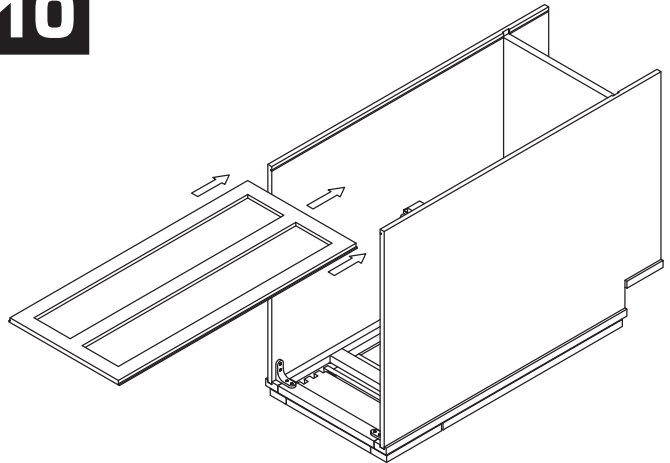

STEP 11

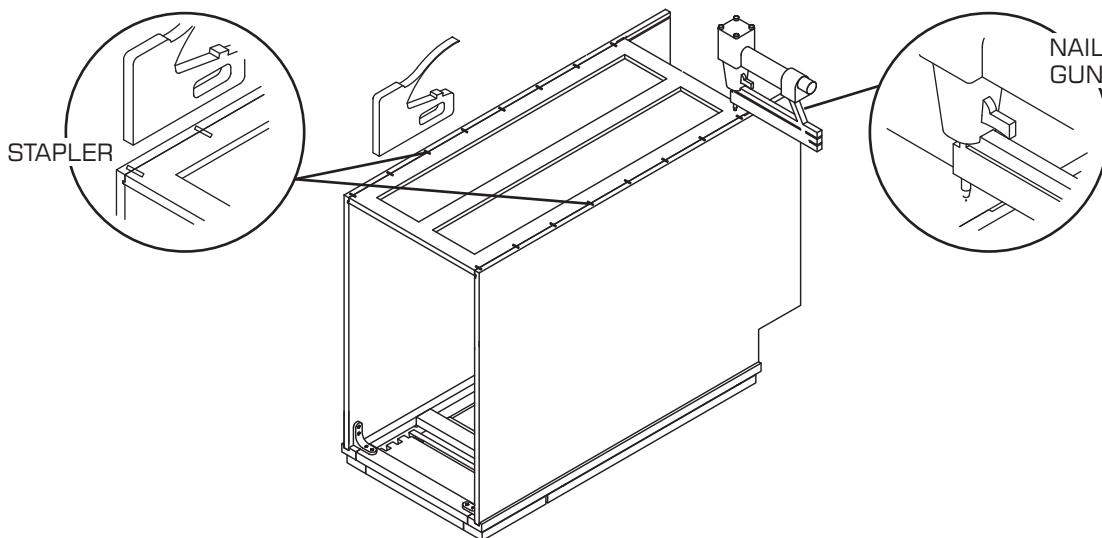


JARLIN


CABINETY

BASE CABINET


STEP 12

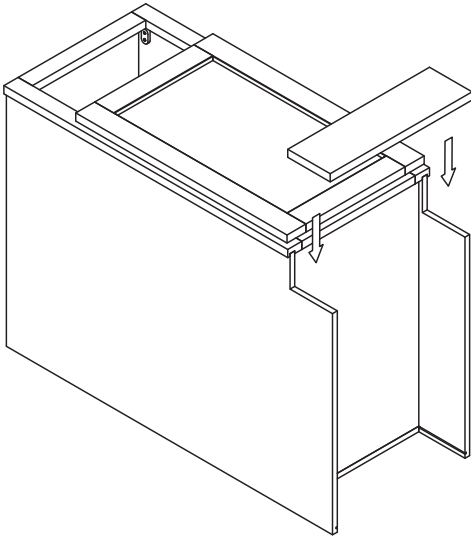


STEP 13

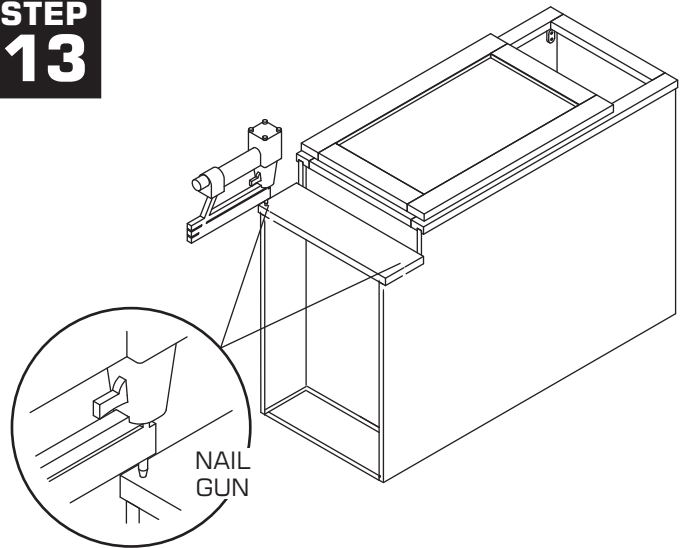


STEP 14

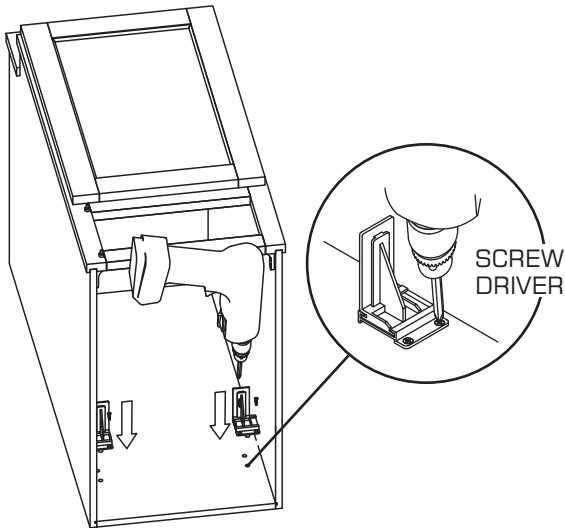


STEP 15

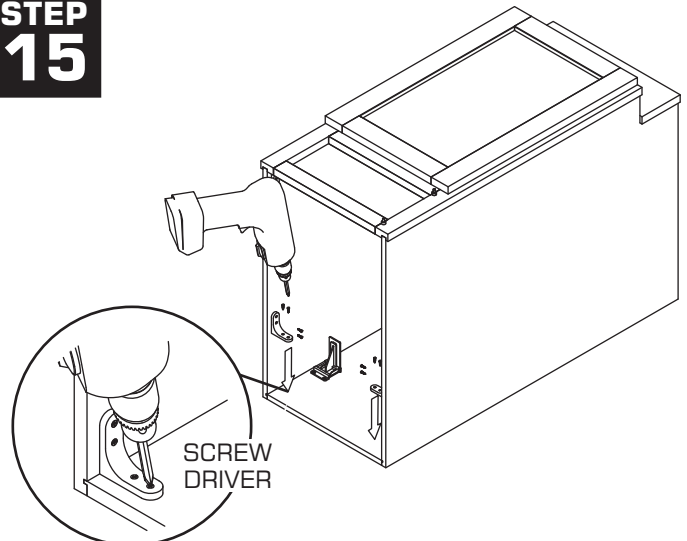

STEP 16

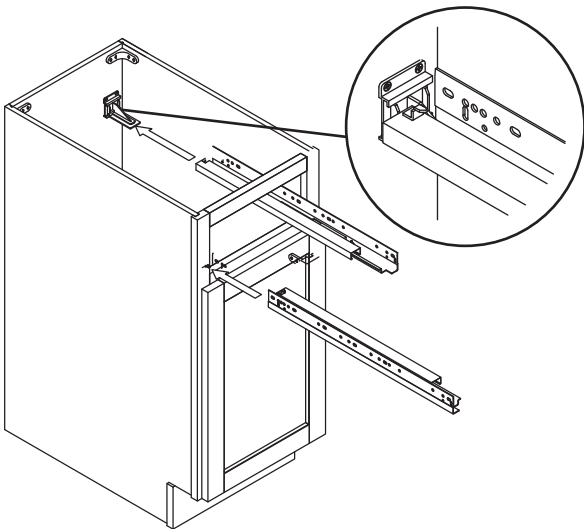


STEP 17

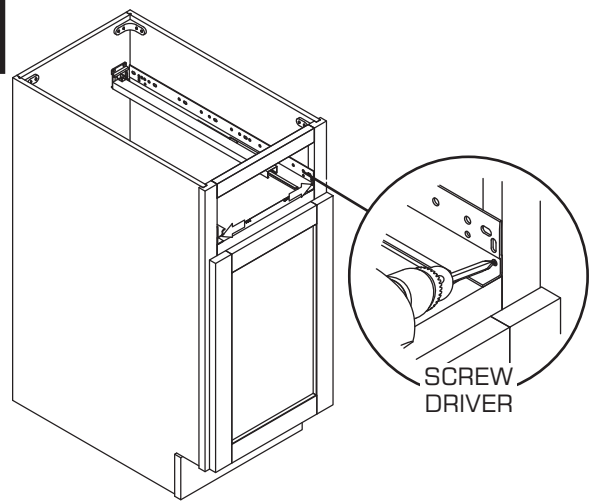


JARLIN CABINETS


**STEP
18**

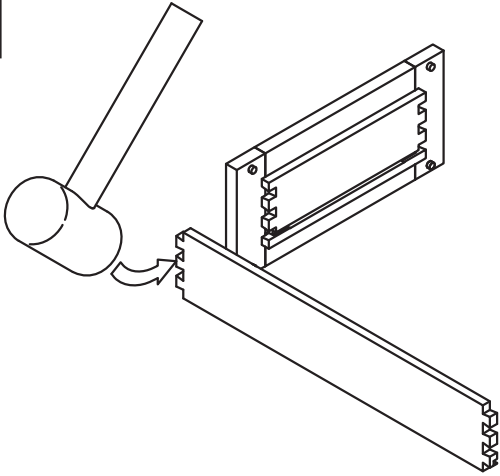


**STEP
19**

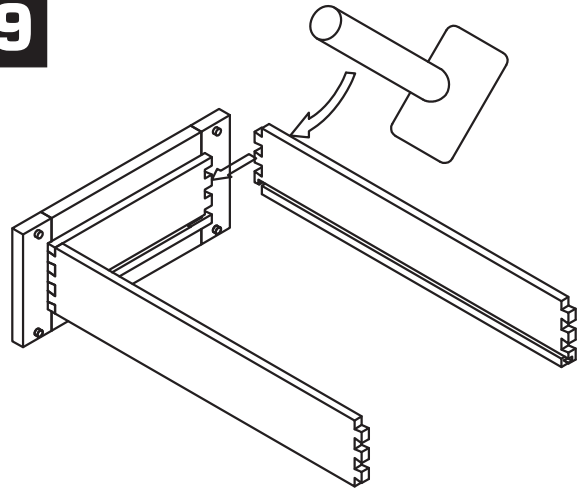


**STEP
20**

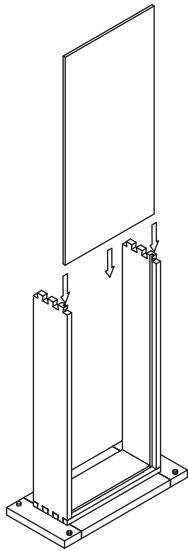


**STEP
21**

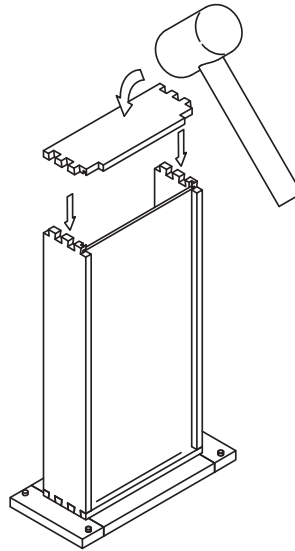

**STEP
22**

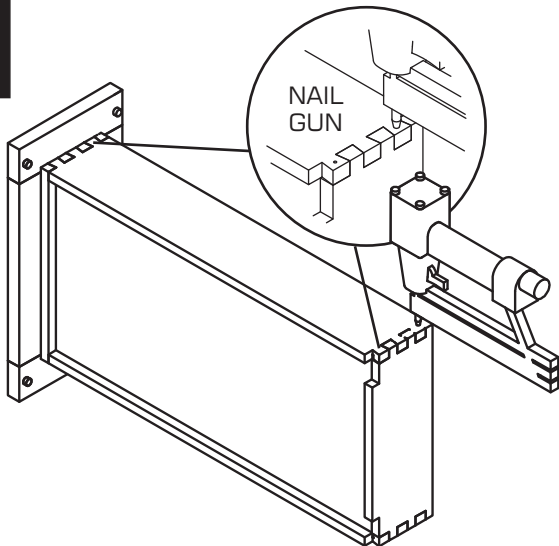

**STEP
23**

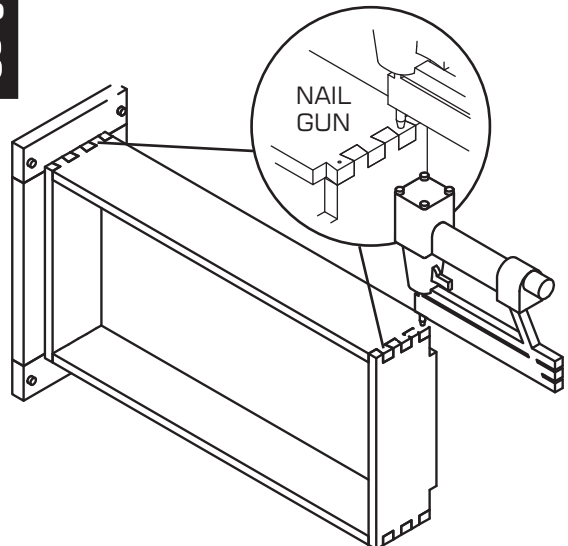


BASE CABINET


JARLIN

CABINETS

**STEP
24**

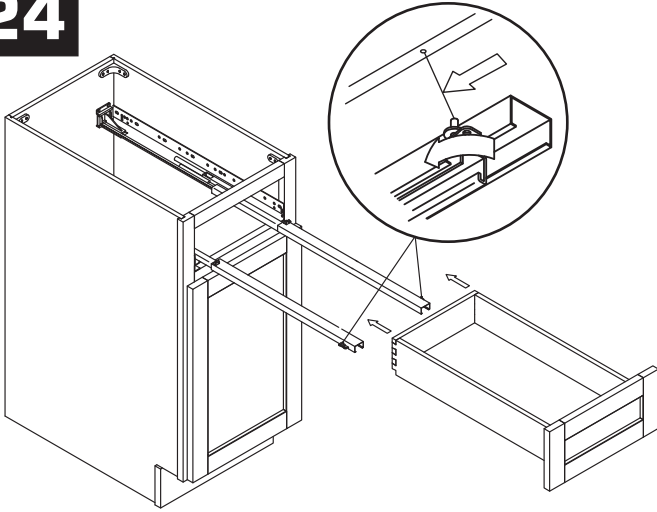


**STEP
25**

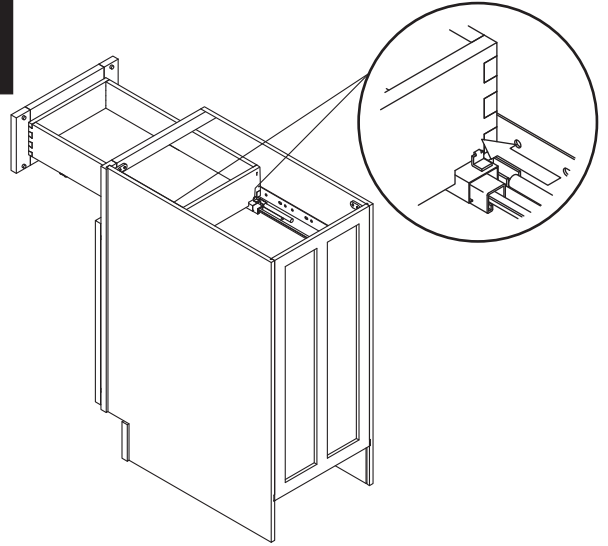


BASE CABINET

**STEP
26**

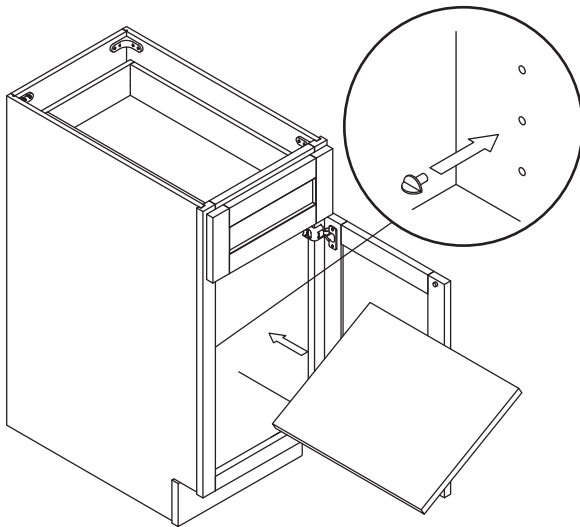


**STEP
27**

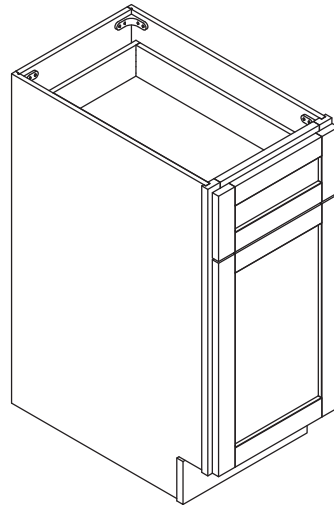

ASSEMBLING INSTRUCTIONS - LAZY SUSAN CABINET

LAZY SUSAN CABINET

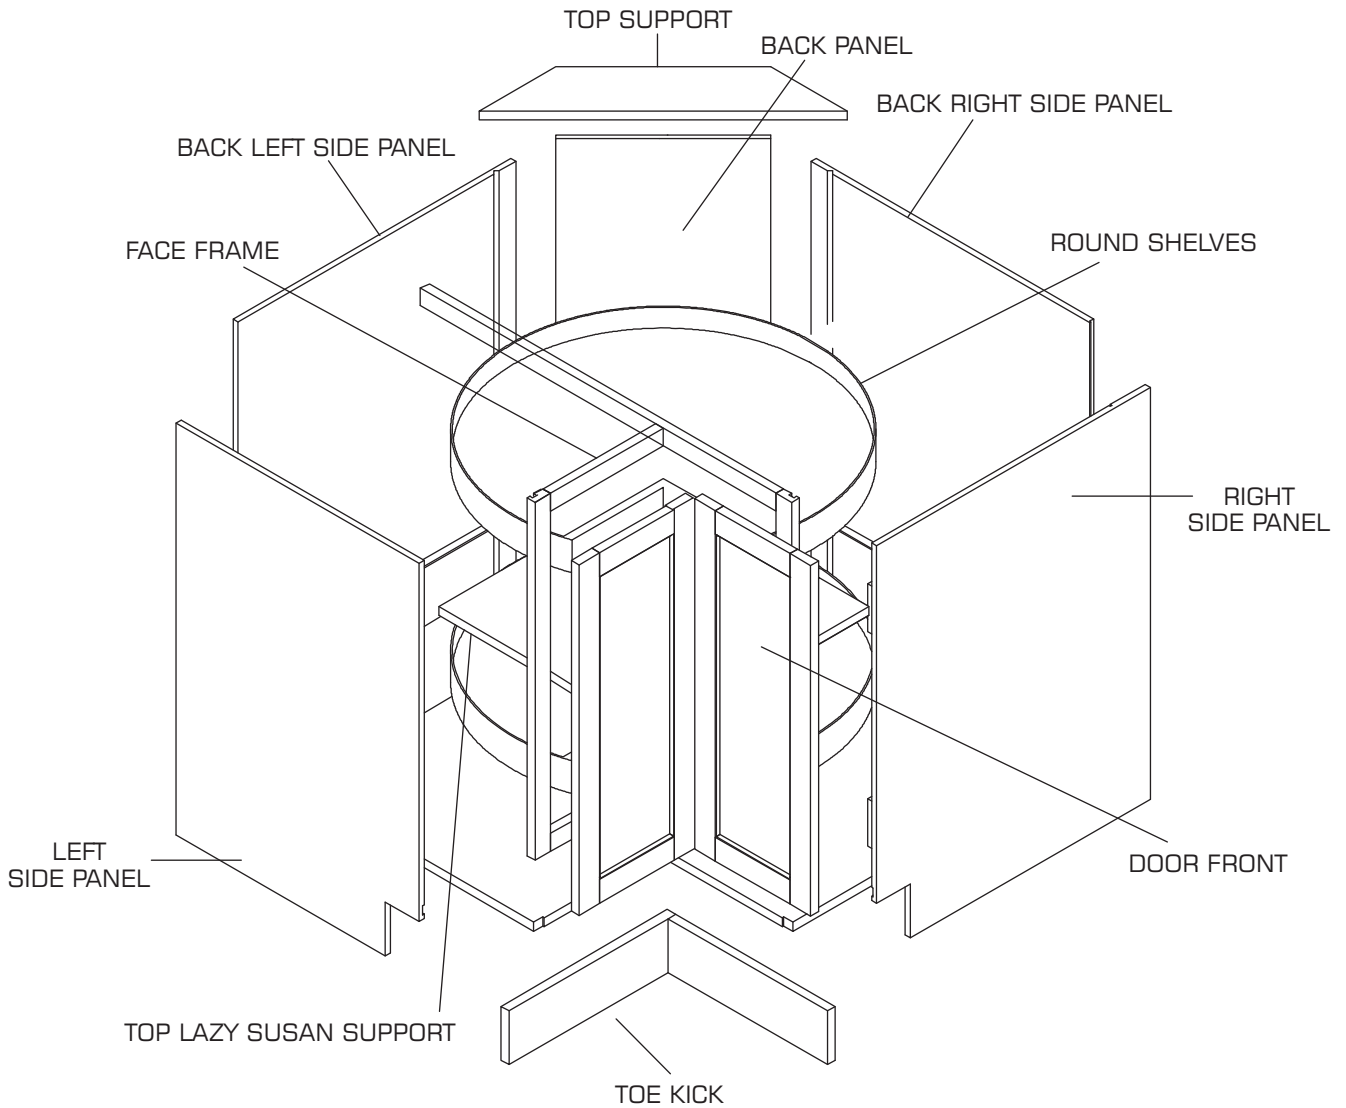

<p>METAL BRACKETS</p>	<p>SHELF CLIPS</p>	<p>BIFOLD HINGE</p> <p>ES/DS/SG CT/PE/NT/AL</p>	<p>170 HINGE</p>	<p>SCREWS</p>
-----------------------	--------------------	---	------------------	---------------


TOOLS					
<p>WOOD GLUE</p>	<p>SCREW DRIVER</p>	<p>RUBBER Mallet</p>	<p>NAIL GUN</p>	<p>STAPLER</p>	<p>SPOTNAILS XC1008</p>

JARLIN


CABINETS

LAZY SUSAN CABINET


STEP 1

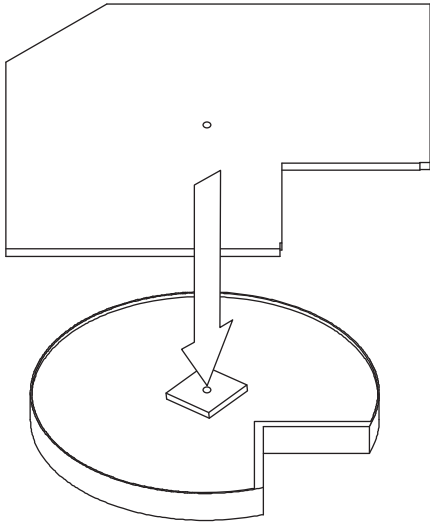


STEP 2

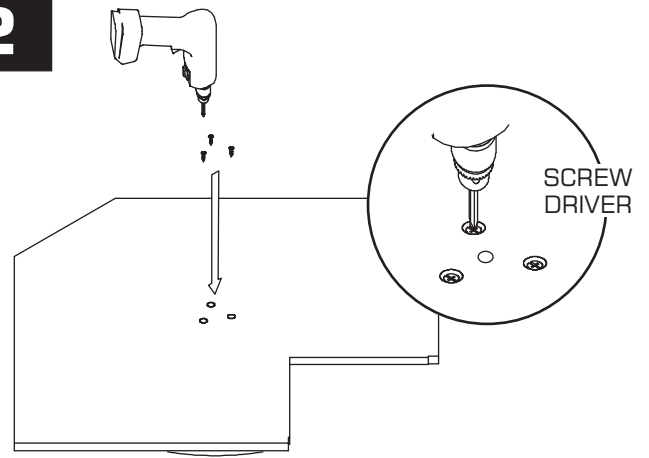


STEP 3

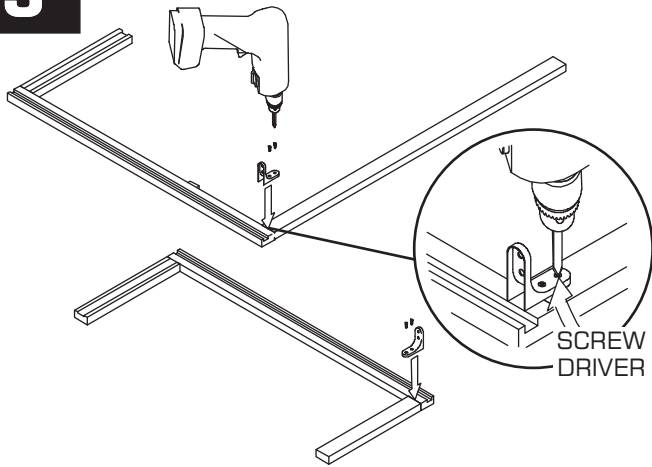


STEP 4

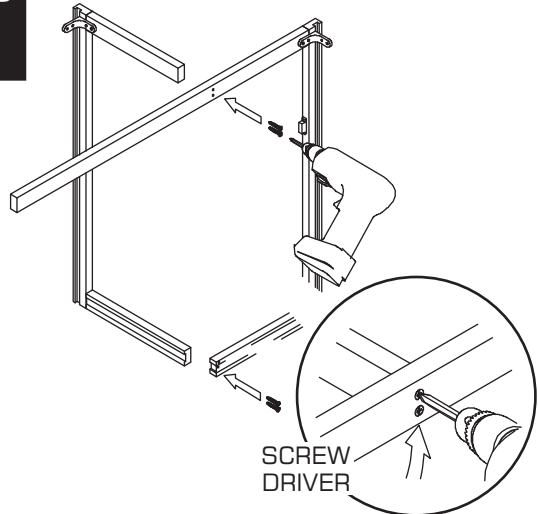

STEP 5

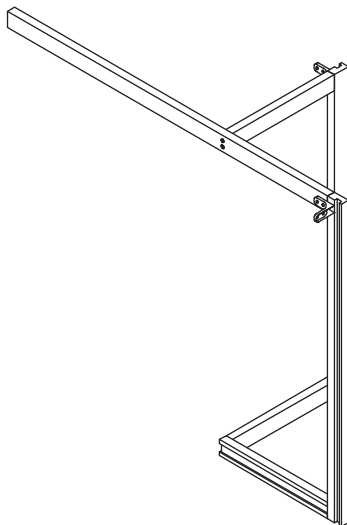


STEP 6

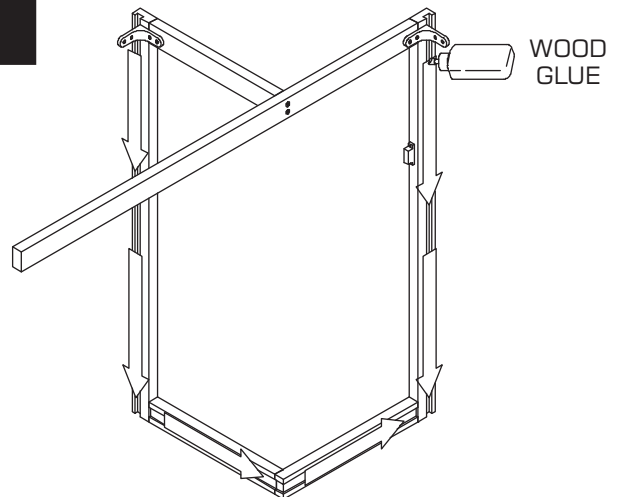


JARLIN CABINETS

LAZY SUSAN CABINET


STEP 7

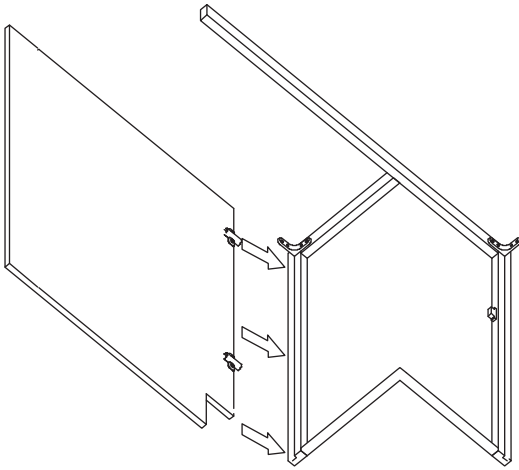


STEP 8

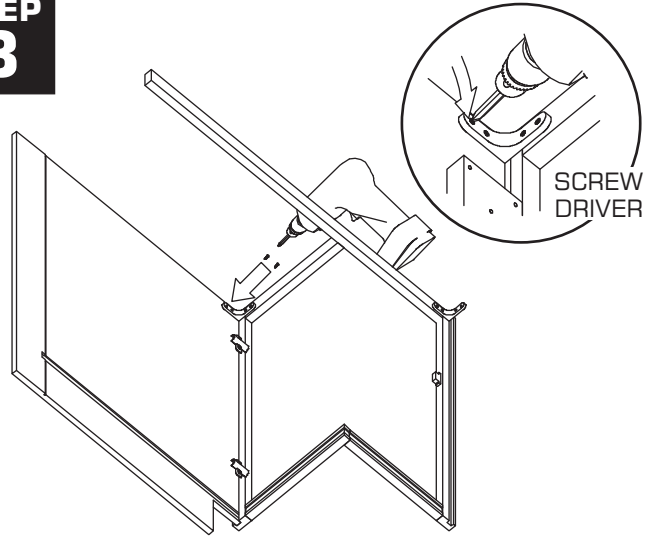


STEP 9

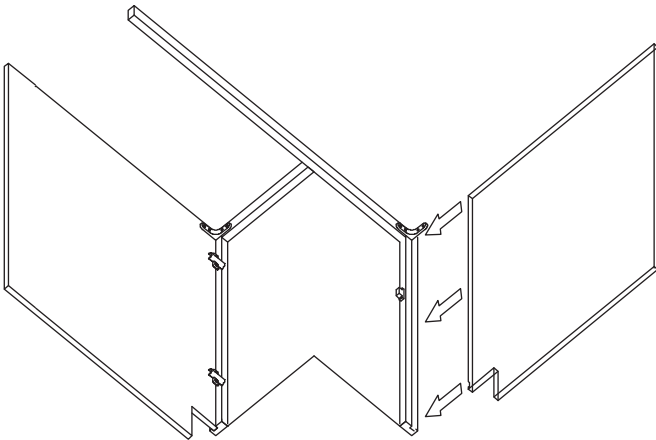


STEP 10

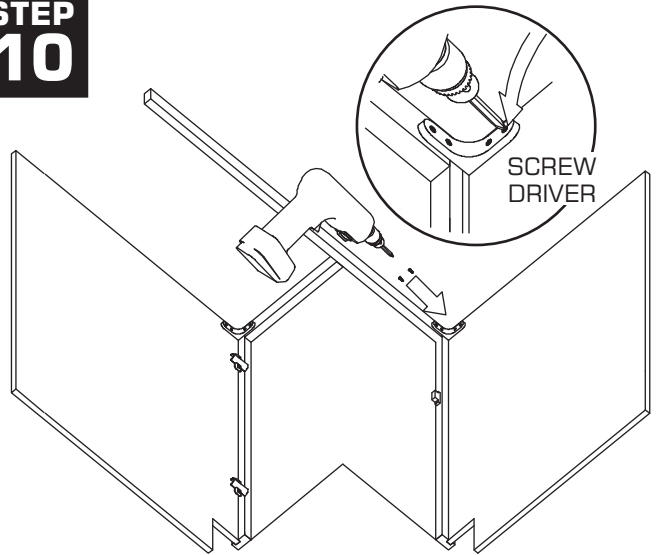


STEP 11

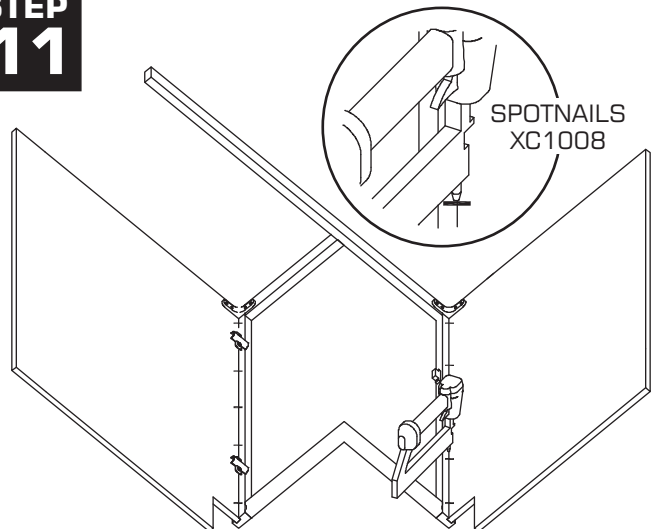


STEP 12

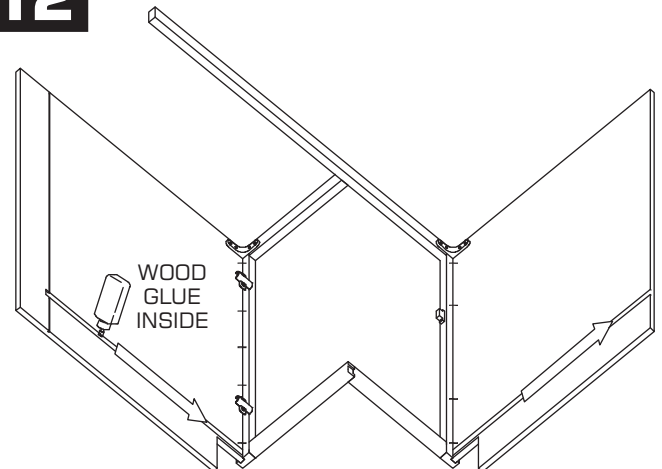

STEP
13

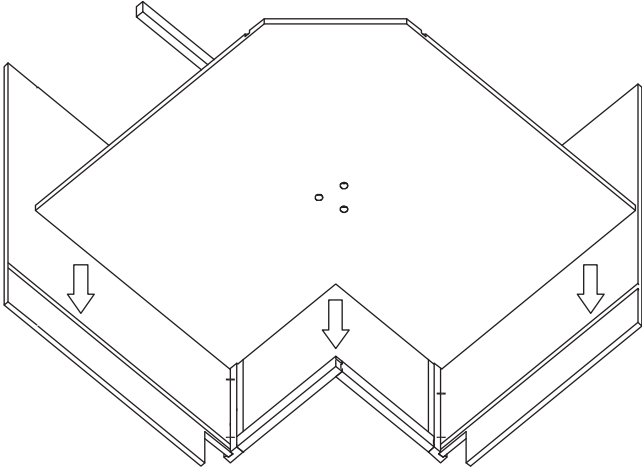


STEP
14

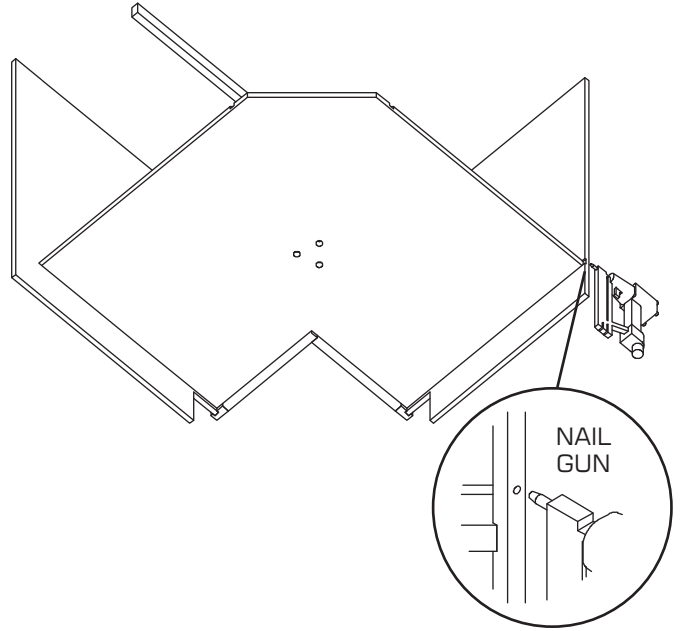


LAZY SUSAN CABINET

STEP
15

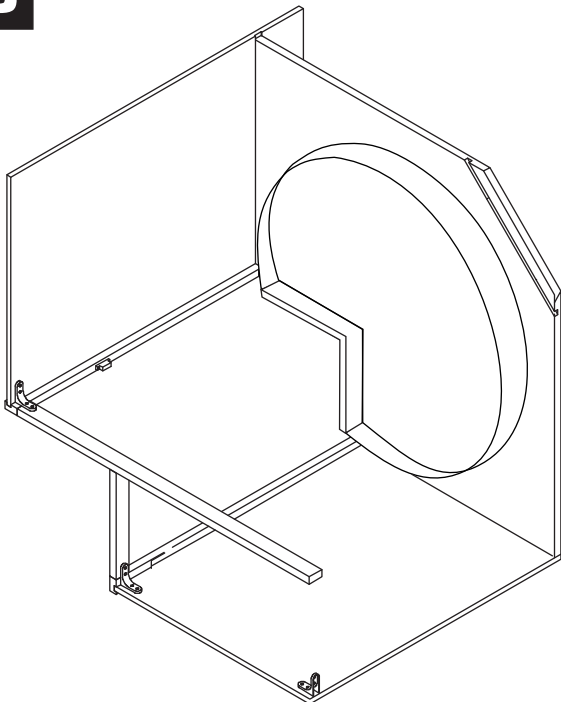


STEP
16

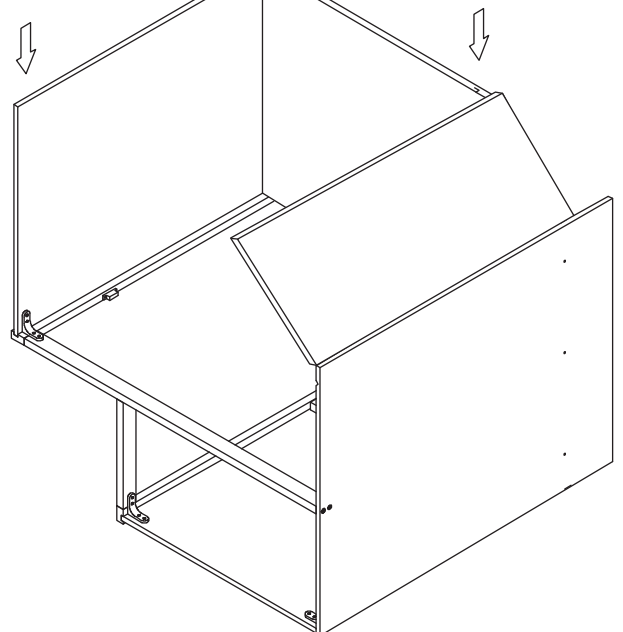


JARLIN CABINETS


**STEP
17**

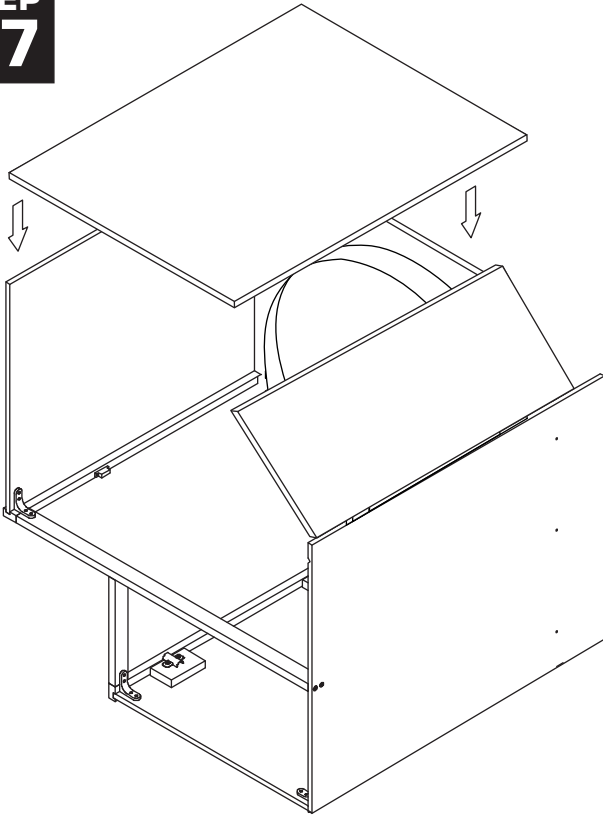


**STEP
18**

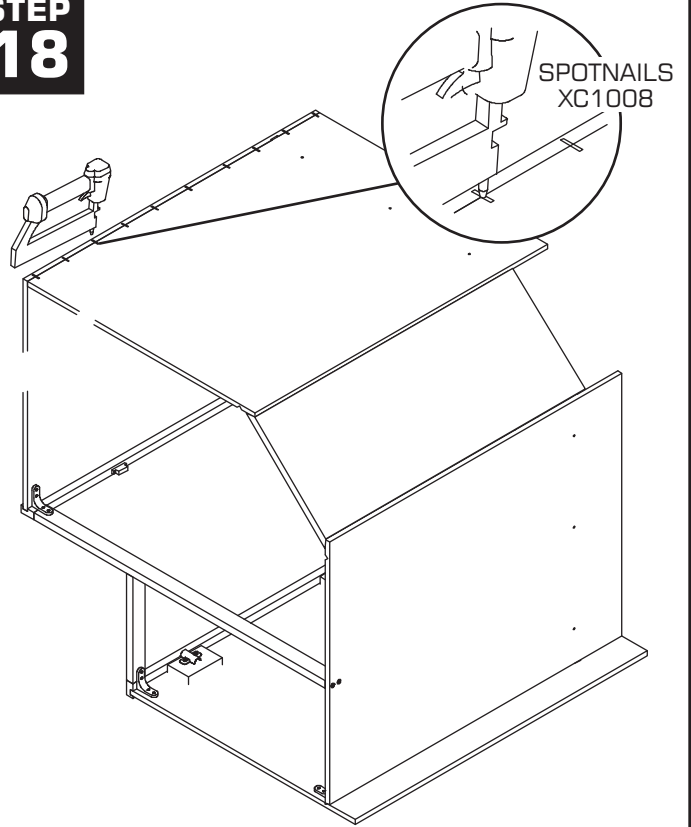

**STEP
19**

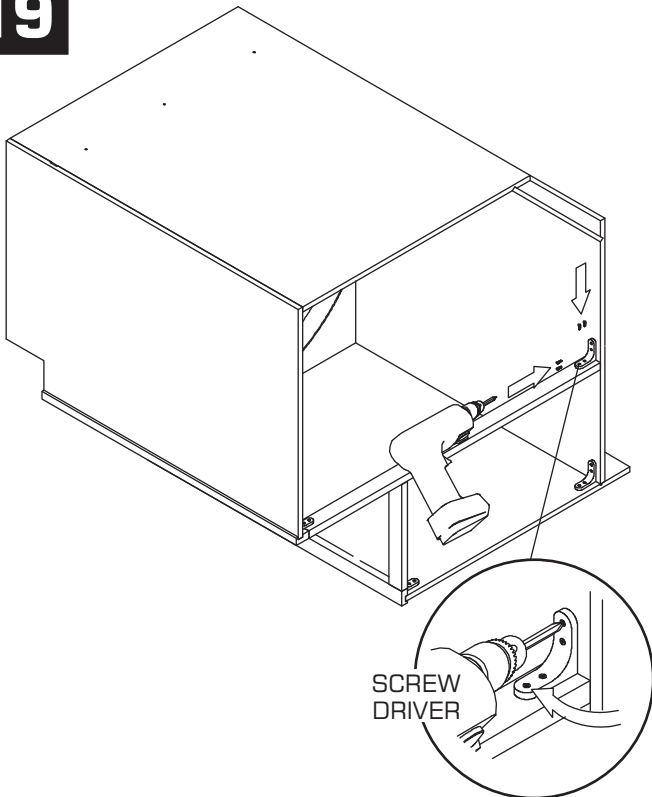


**STEP
20**

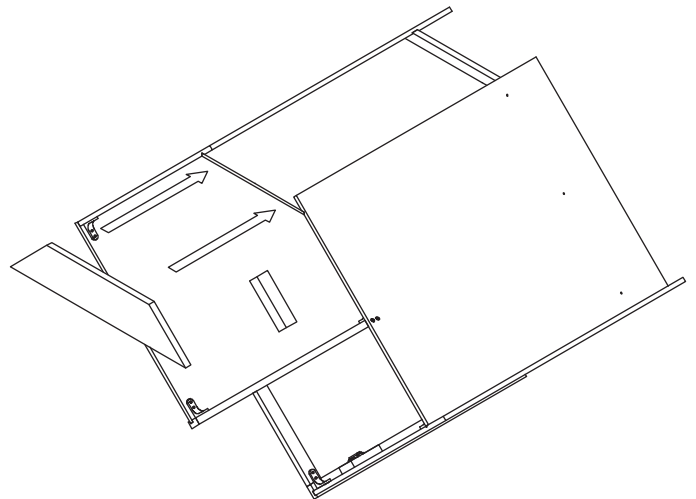


LAZY SUSAN CABINET

JARLIN CABINETS


**STEP
21**

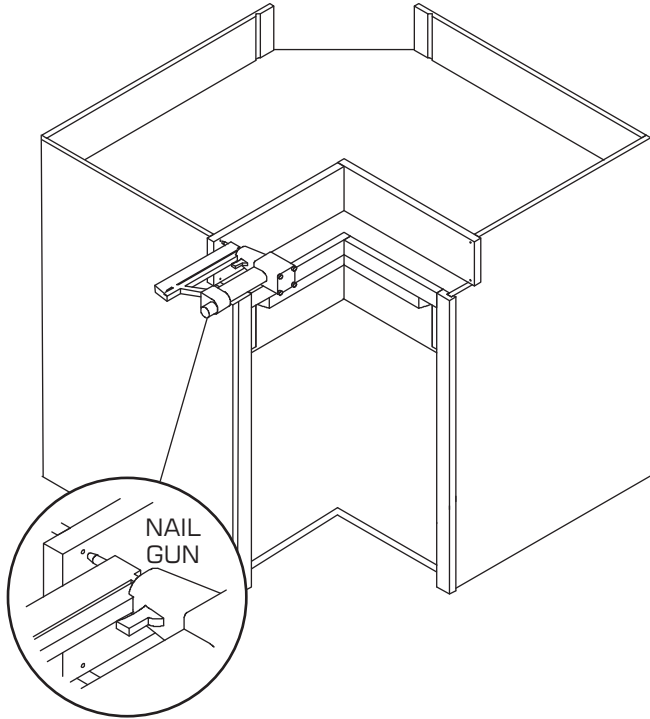


**STEP
22**

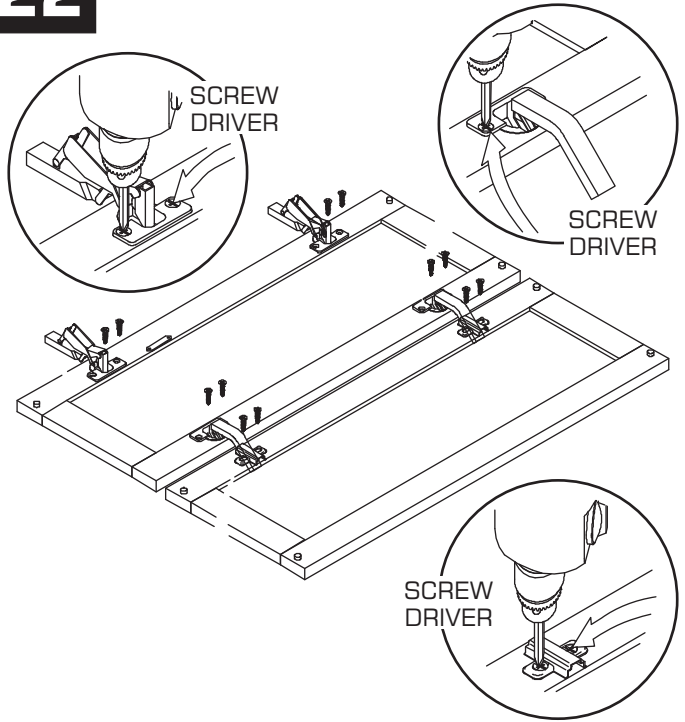

**STEP
23**

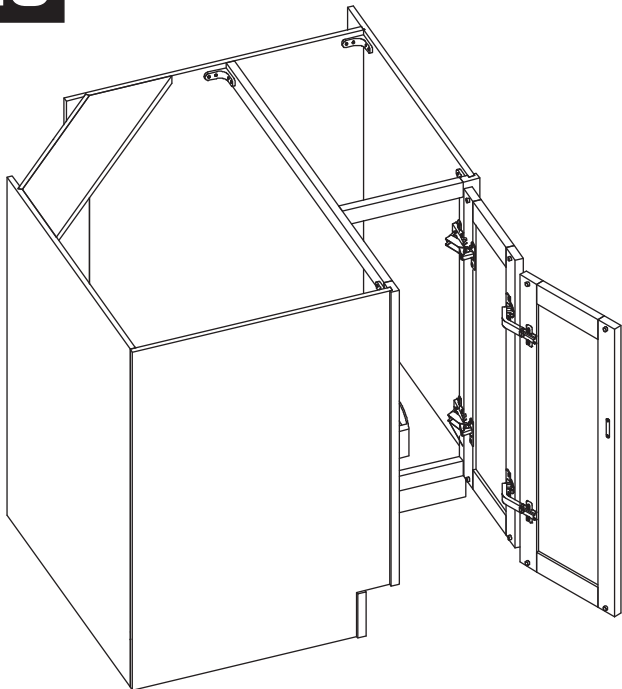


**STEP
24**





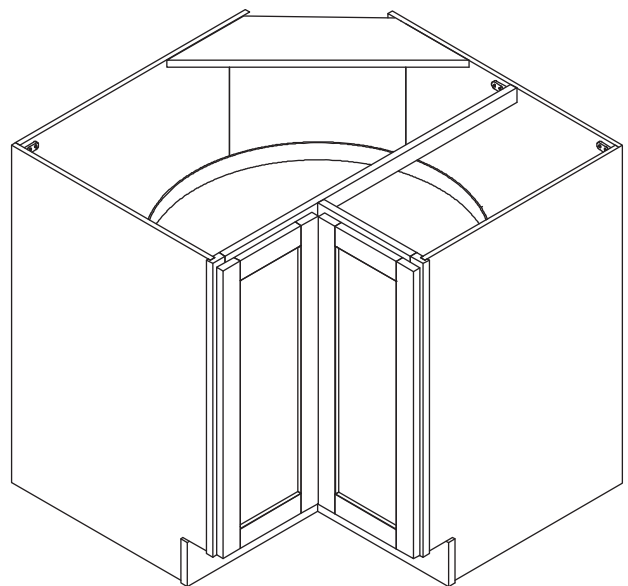


LAZY SUSAN CABINET

ASSEMBLING INSTRUCTIONS - BLIND CORNER BASE CABINET

BLIND CORNER BASE CABINET

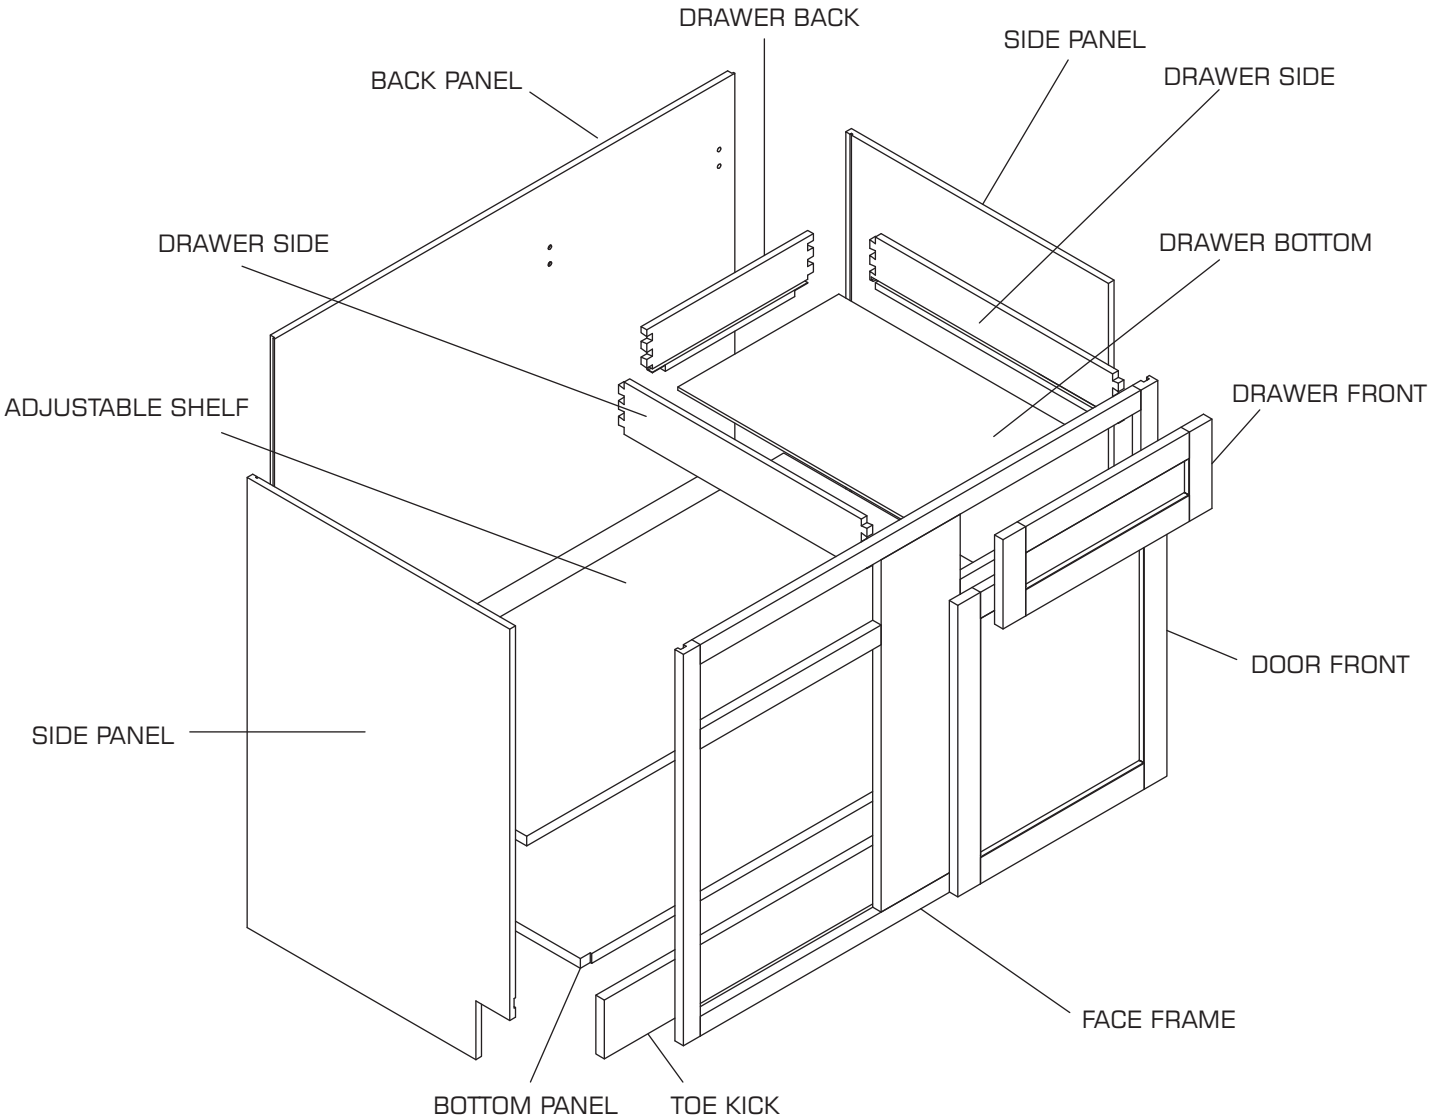
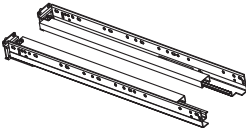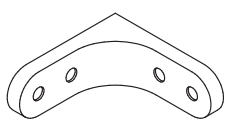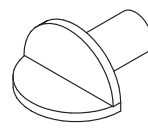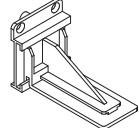
<p>GLIDES</p> 	<p>METAL BRACKETS</p> 	<p>SCREWS</p> 	<p>SHELF CLIPS</p> 	<p>GLIDE SUPPORTS</p> 
---	---	---	--	---

TOOLS


 <p>WOOD GLUE</p>	 <p>SCREW DRIVER</p>	 <p>RUBBER Mallet</p>	 <p>NAIL GUN</p>	 <p>STAPLER</p>	 <p>SPOTNAILS XC1008</p>
--	---	--	---	---	---

JARLIN CABINETY


BLIND CORNER BASE CABINET

STEP
1


WOOD
GLUE

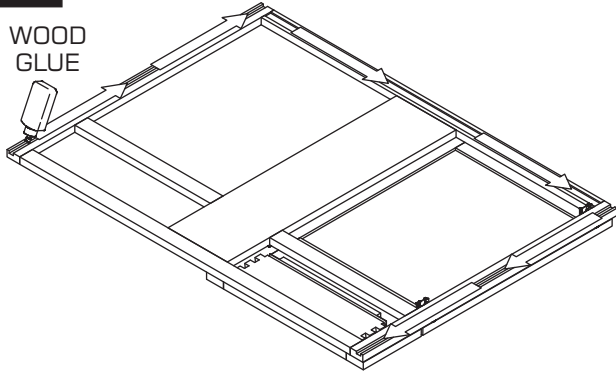


STEP
2

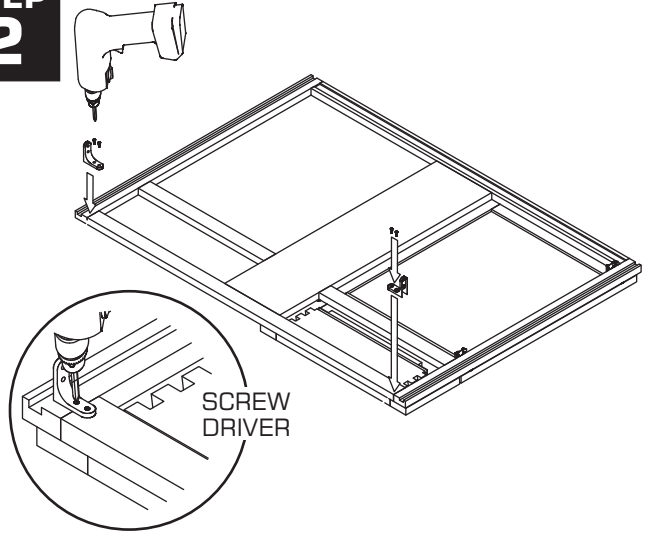


STEP
3

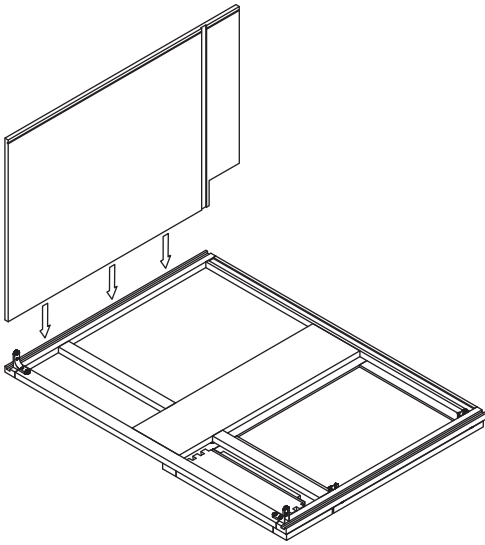


STEP
4

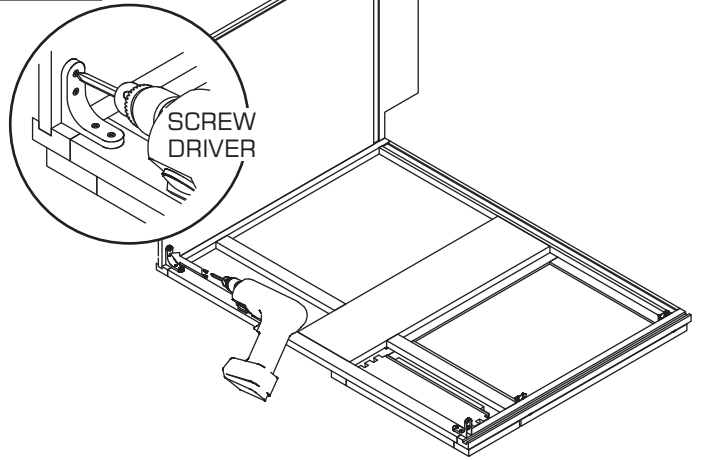

STEP
5

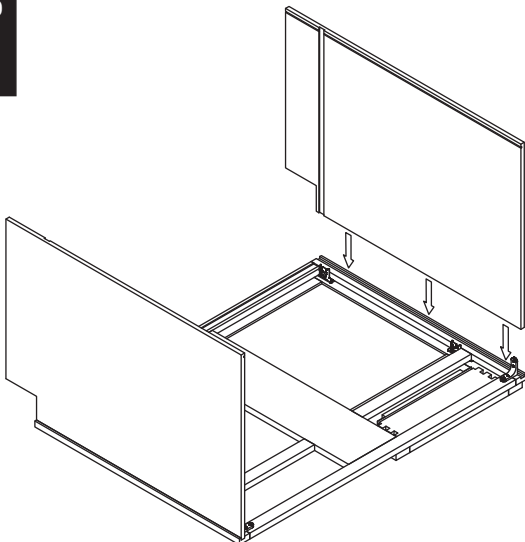


STEP
6

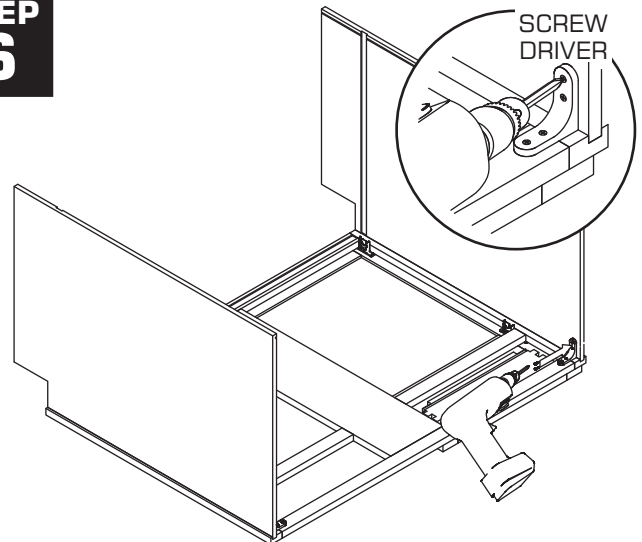


JARLIN CABINETS

BLIND CORNER BASE CABINET


STEP
7

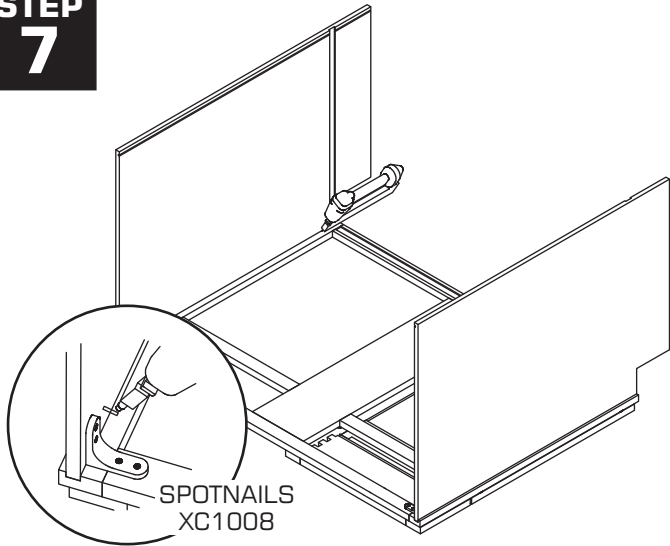


STEP
8

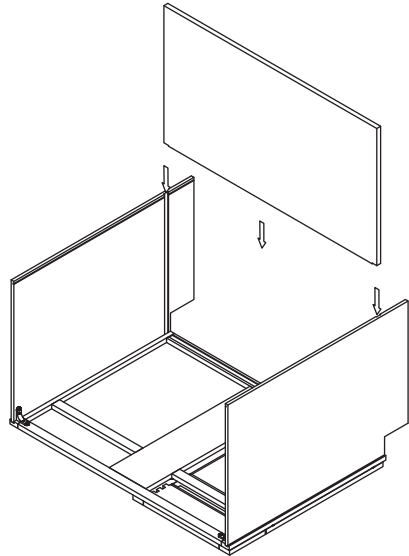


STEP
9

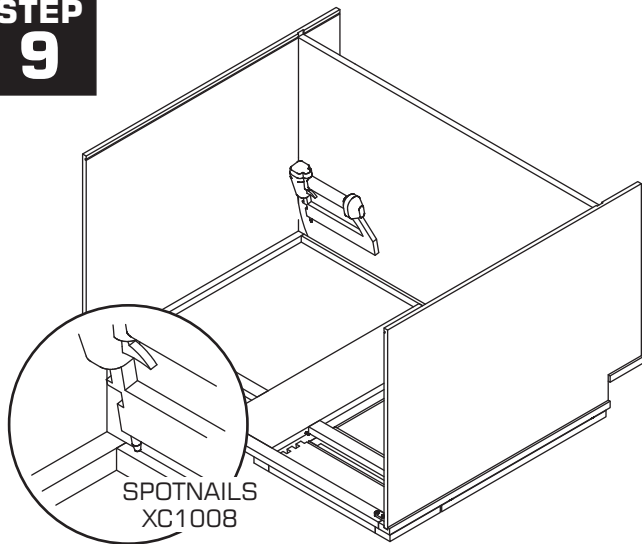

STEP
10

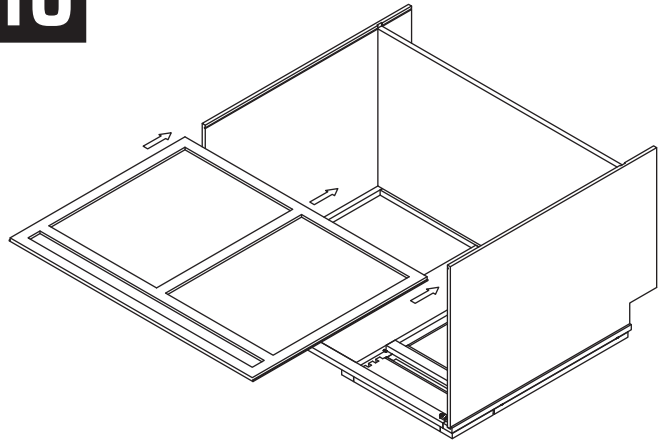

STEP
11

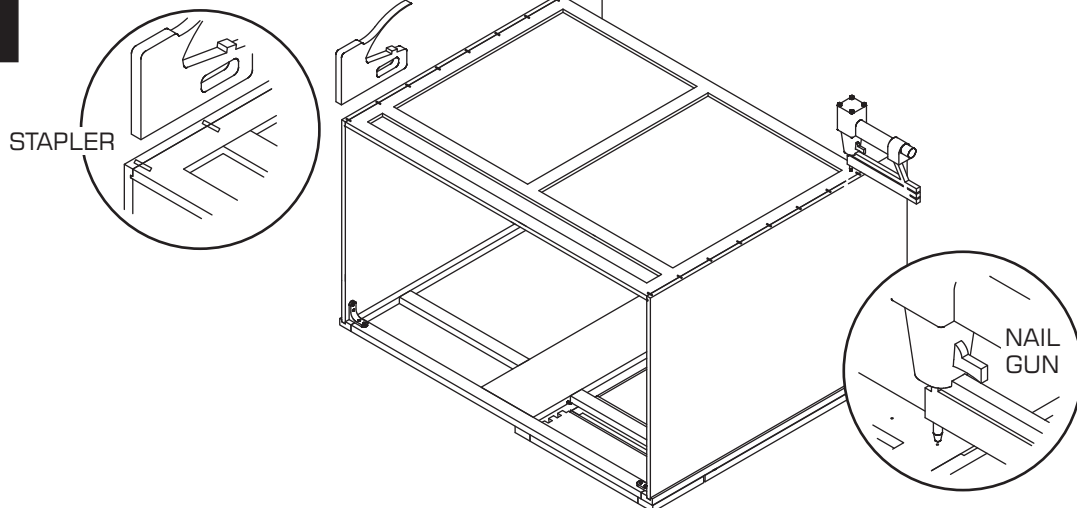


JARLIN


CABINETY

BLIND CORNER BASE CABINET


STEP 12

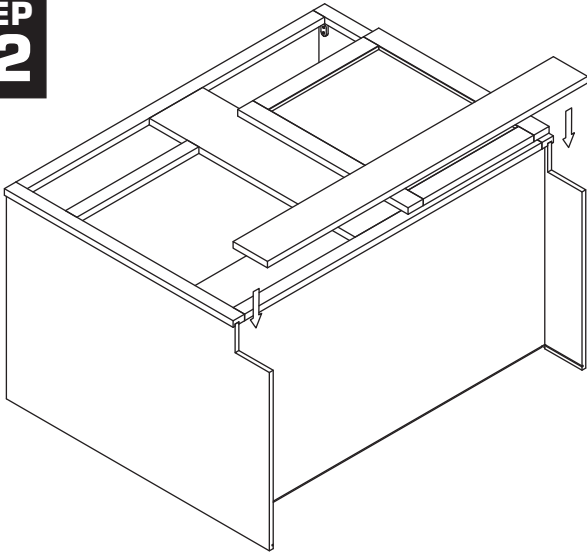


STEP 13

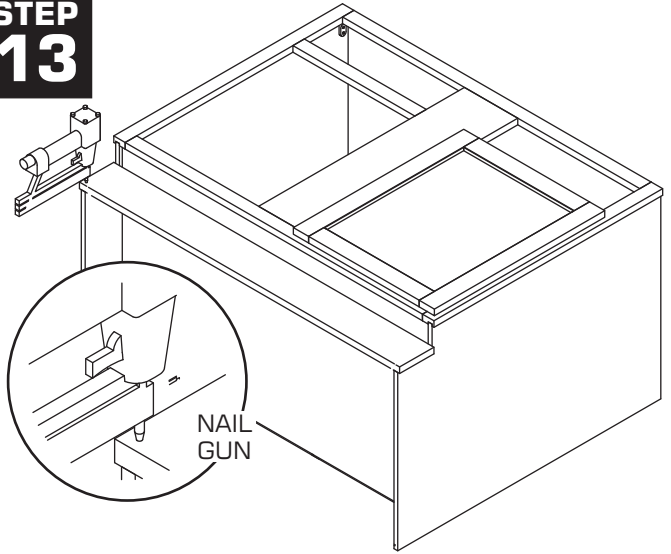


STEP 14

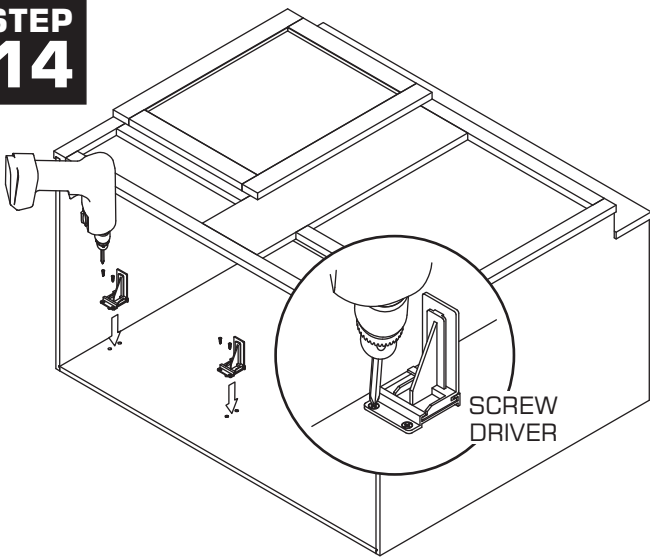


STEP 15

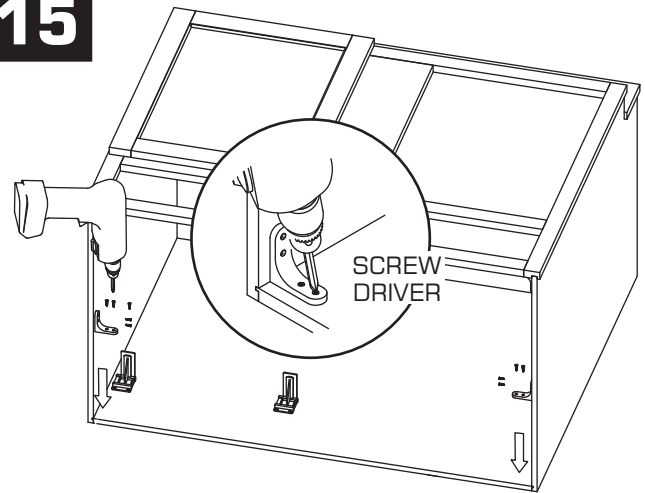

STEP 16

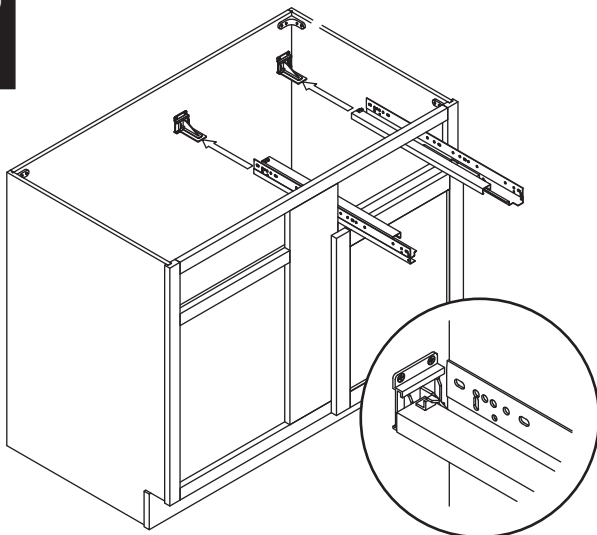


STEP 17

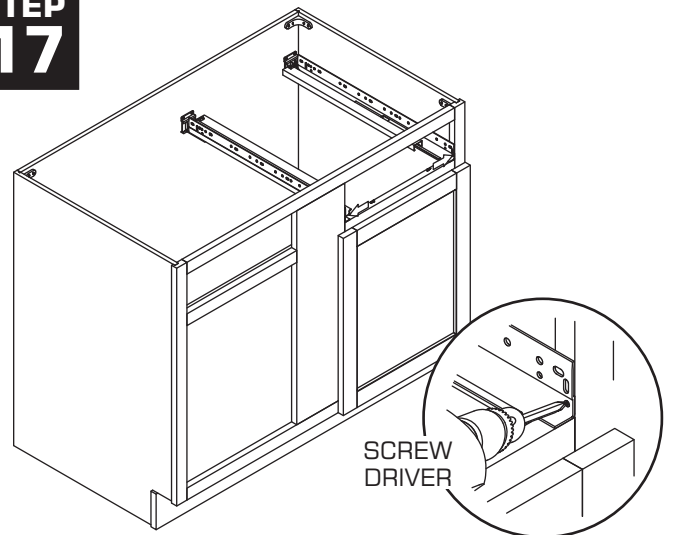


JARLIN CABINETS


**STEP
18**

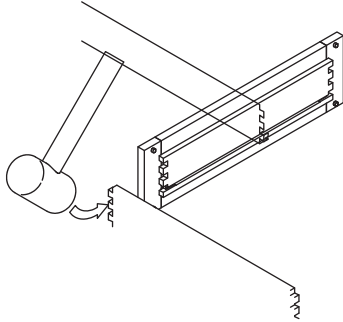


**STEP
19**

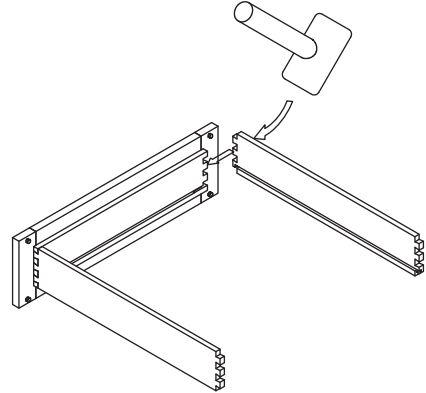


**STEP
20**

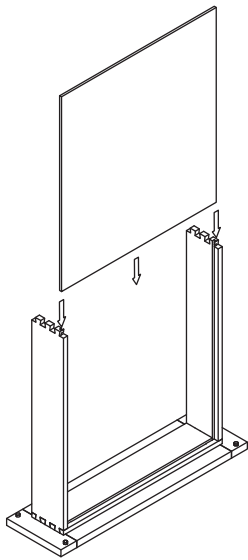

**STEP
21**

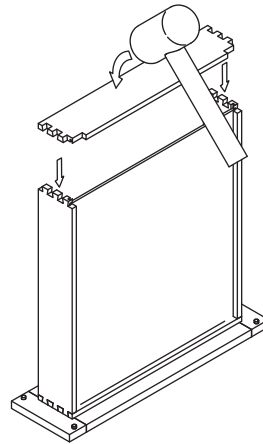


**STEP
22**

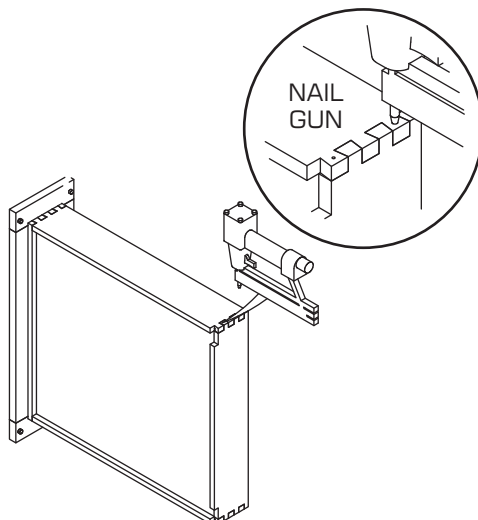


BLIND CORNER BASE CABINET

JARLIN CABINETS

**STEP
23**

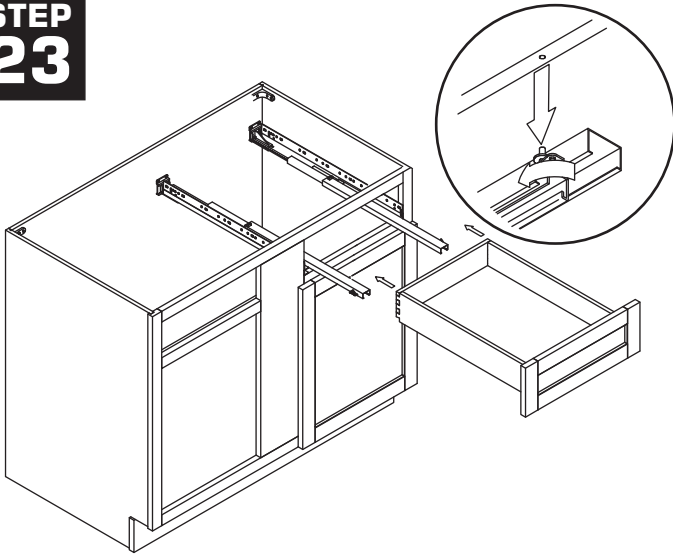


**STEP
24**

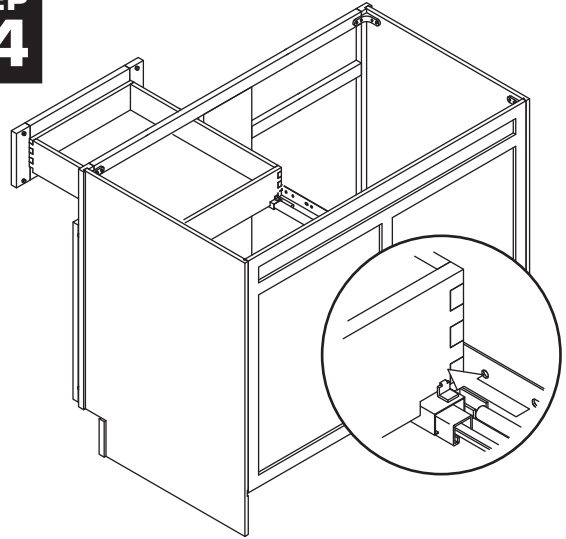


BLIND CORNER BASE CABINET

**STEP
25**

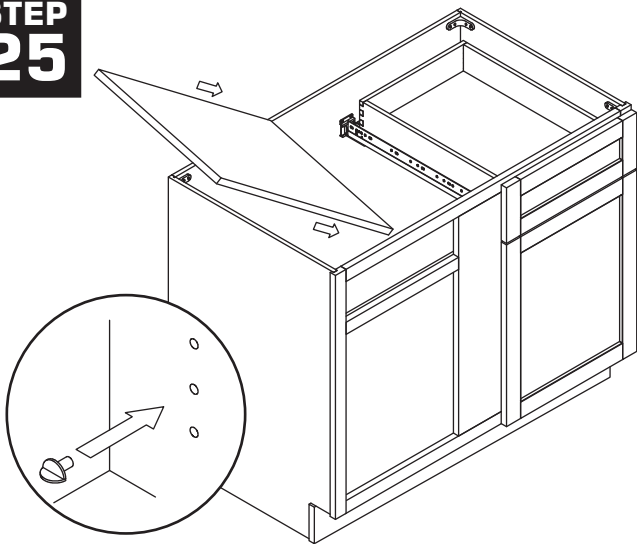


**STEP
26**

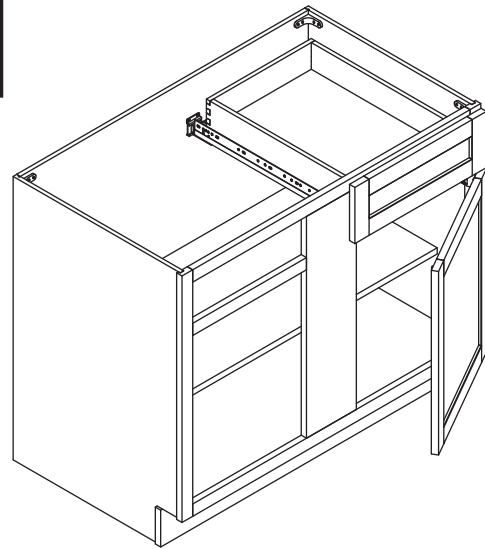

ASSEMBLING INSTRUCTIONS - BASE 3 DRAWERS

BASE 3 DRAWERS

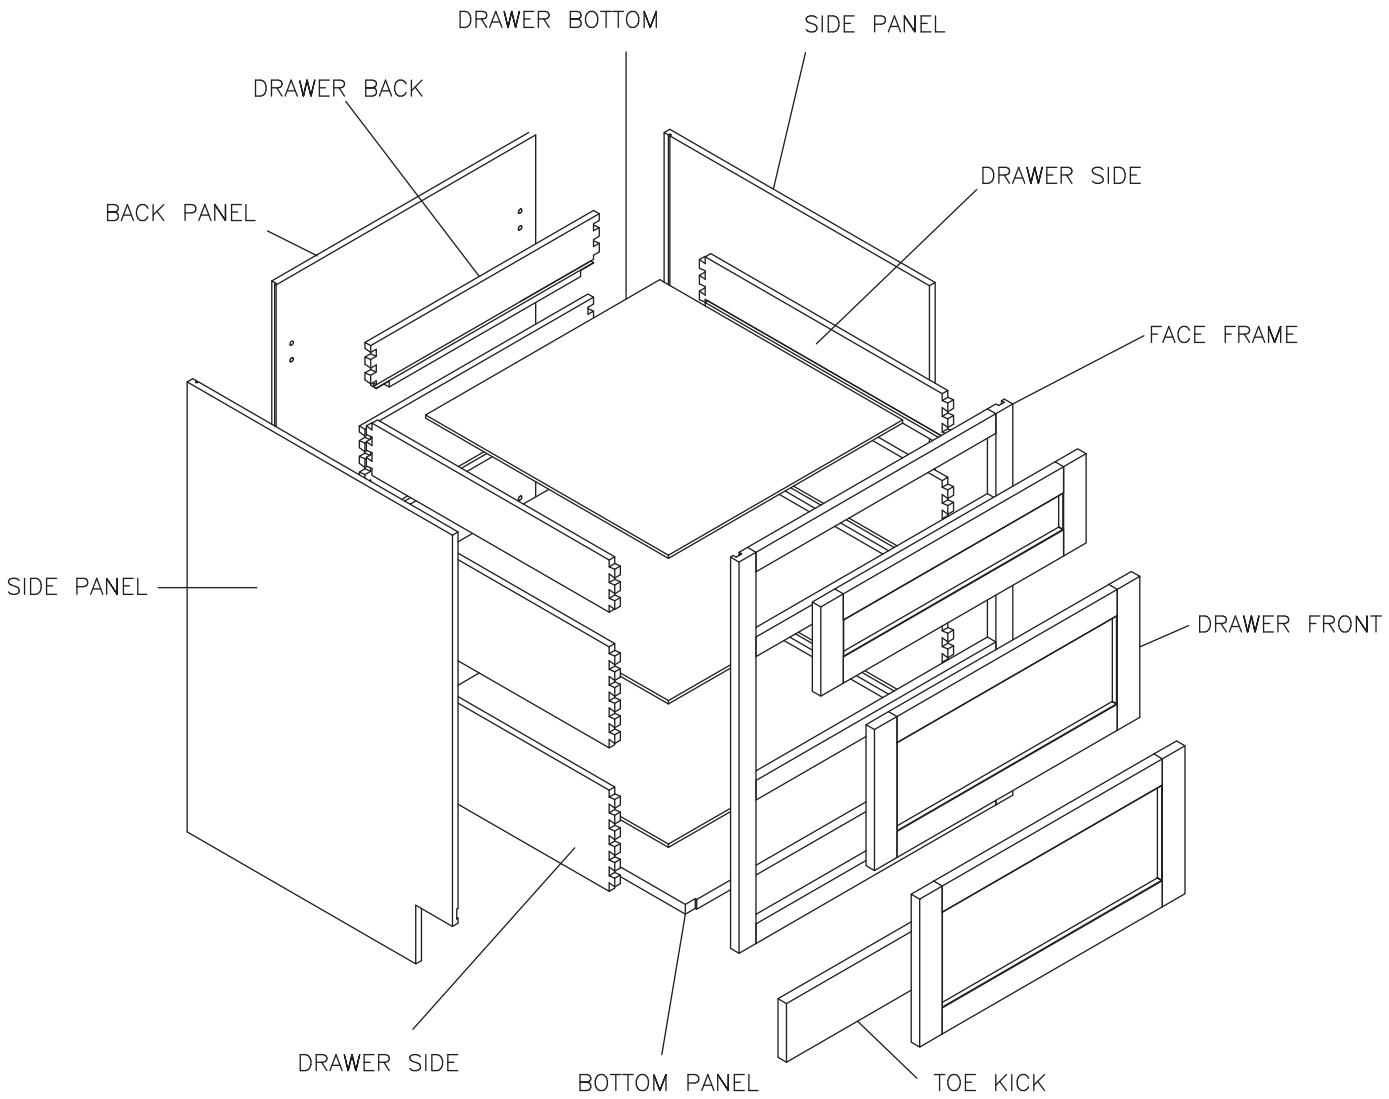

<p>GLIDES</p>	<p>METAL BRACKETS</p>	<p>SCREWS</p>	<p>GLIDE SUPPORTS</p>
---------------	-----------------------	---------------	-----------------------


TOOLS					
<p>WOOD GLUE</p>	<p>SCREW DRIVER</p>	<p>RUBBER Mallet</p>	<p>NAIL GUN</p>	<p>STAPLER</p>	<p>SPOTNAILS XC1008</p>

JARLIN


CABINETS

BASE 3 DRAWERS


STEP 1

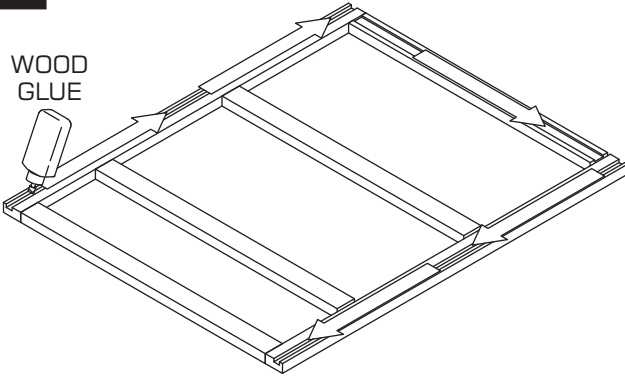


STEP 2

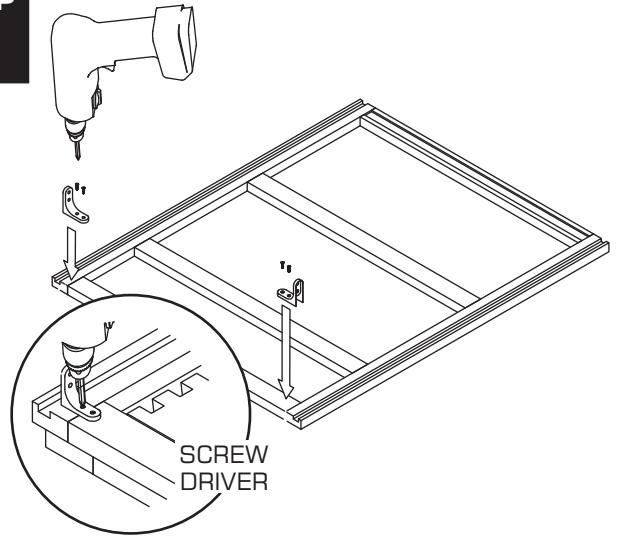


STEP 3

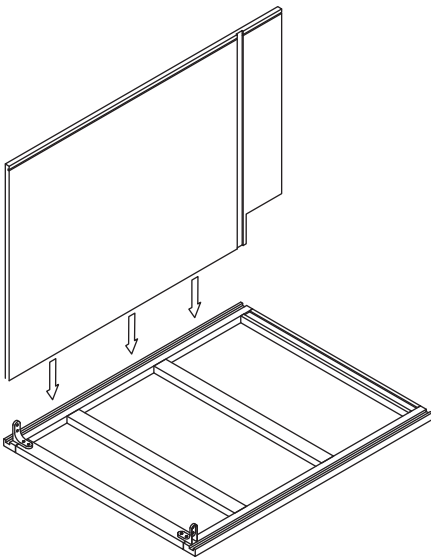


STEP 4

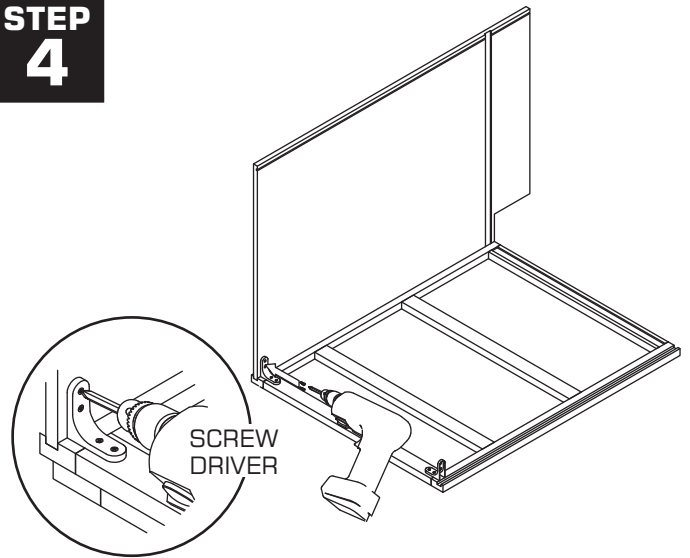

STEP 5

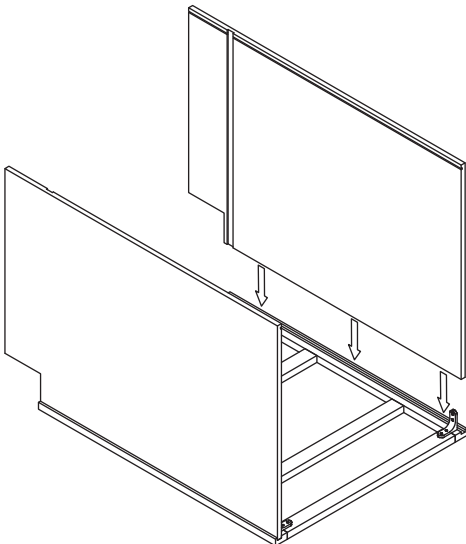


STEP 6

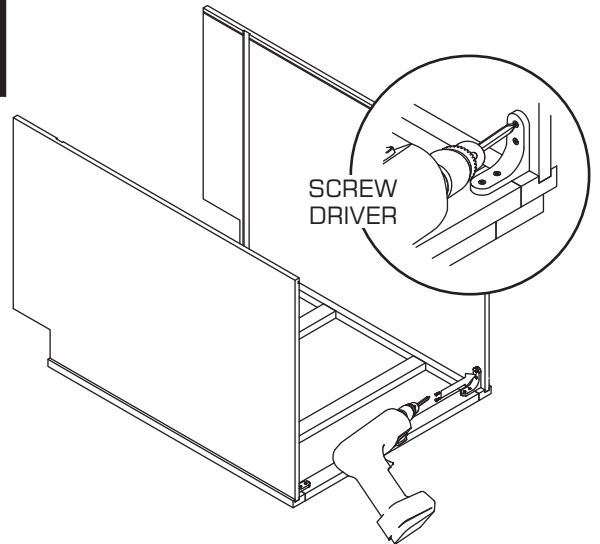


JARLIN CABINETS

BASE 3 DRAWERS


**STEP
7**

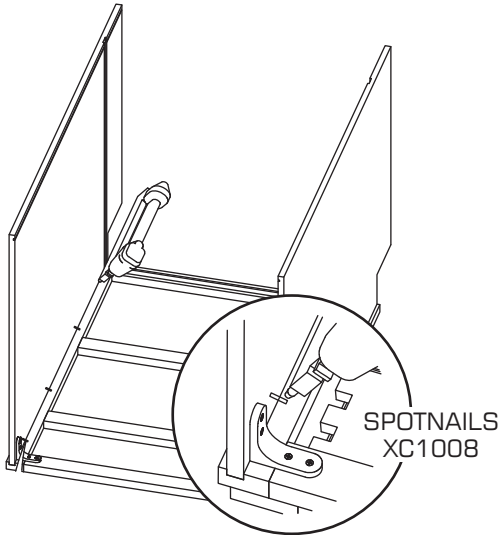


**STEP
8**

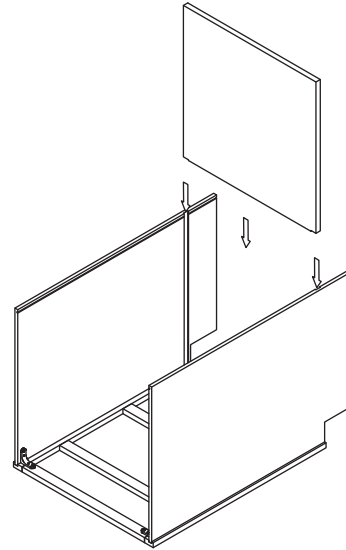


**STEP
9**

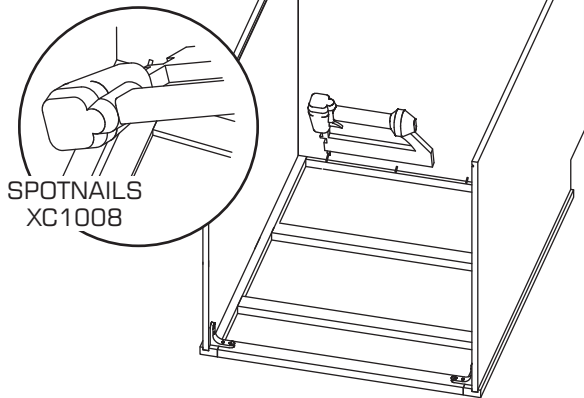

**STEP
10**

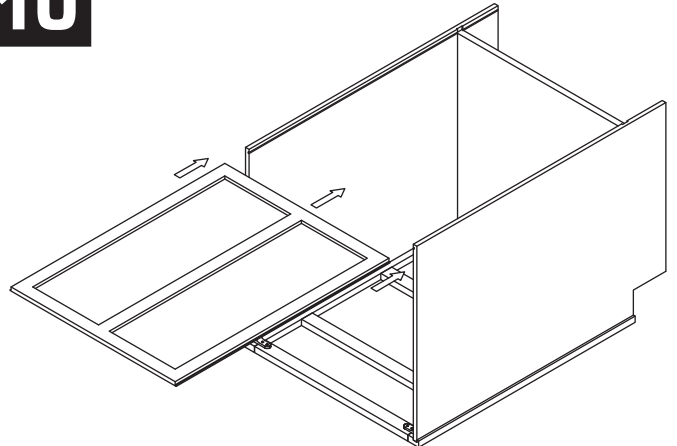

**STEP
11**

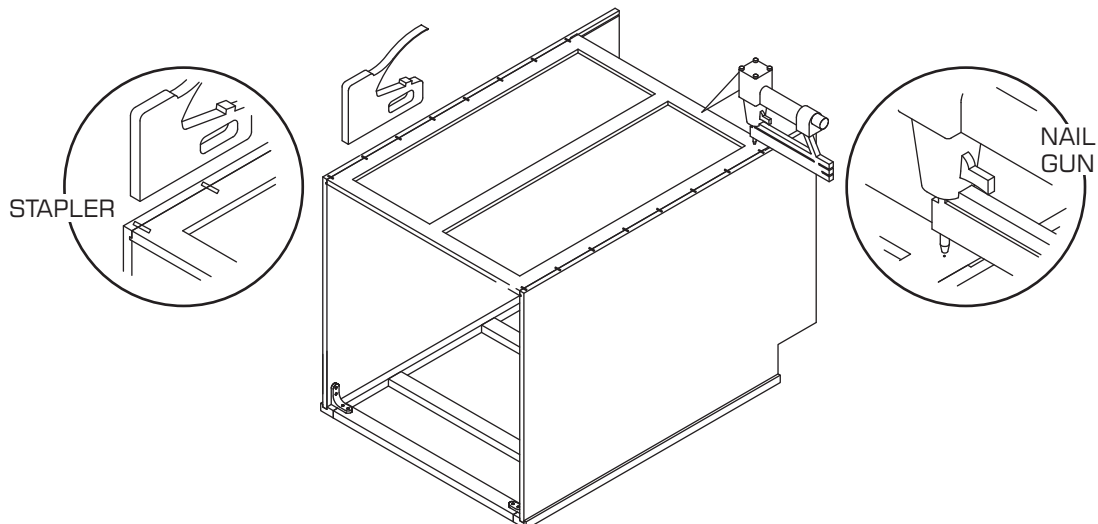


JARLIN


CABINETS

BASE 3 DRAWERS


STEP 12

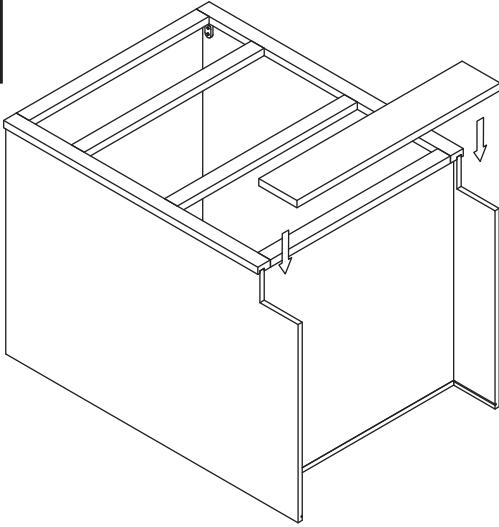


STEP 13

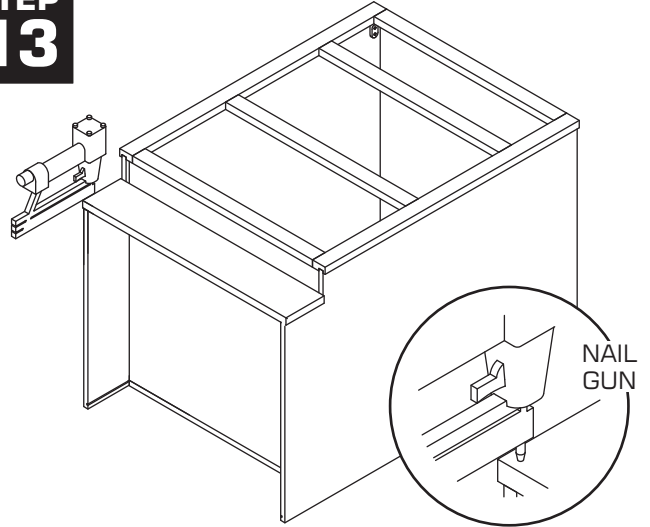


STEP 14

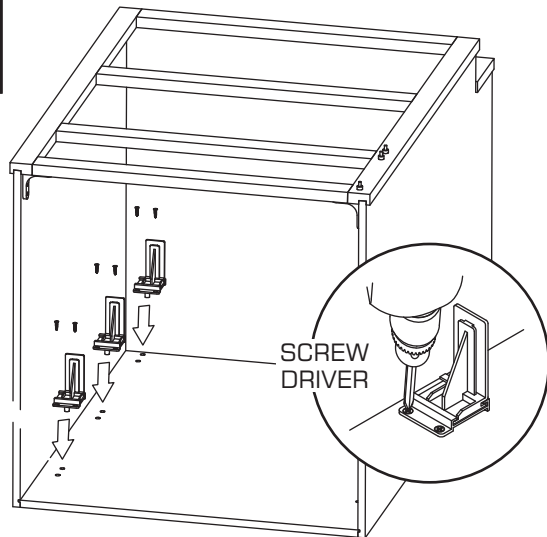


STEP 15

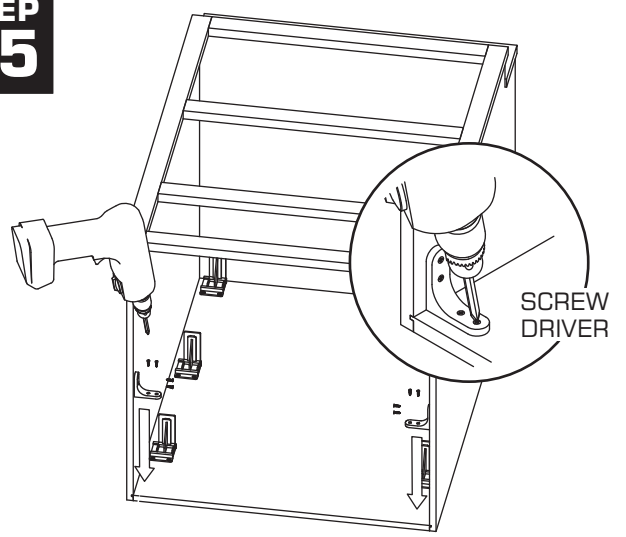

STEP 16

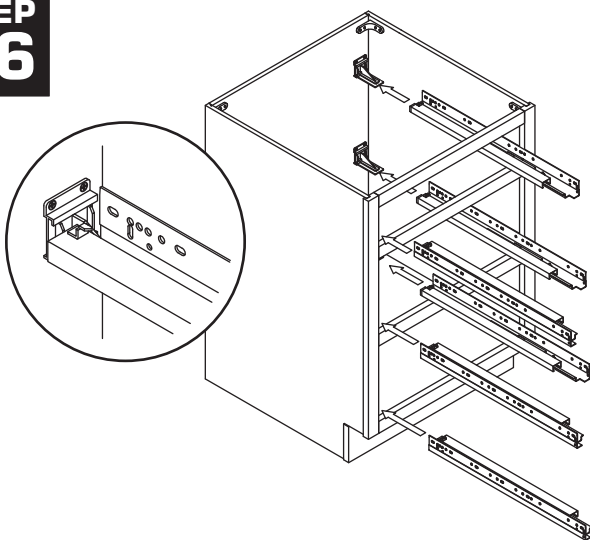


STEP 17

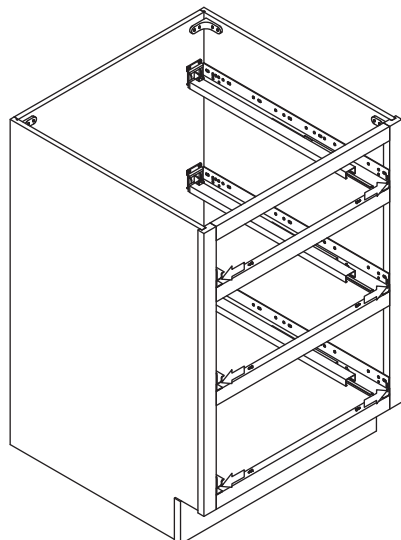


JARLIN CABINETS


**STEP
18**

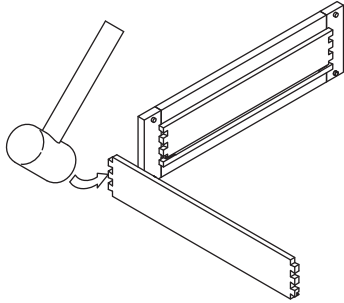


**STEP
19**

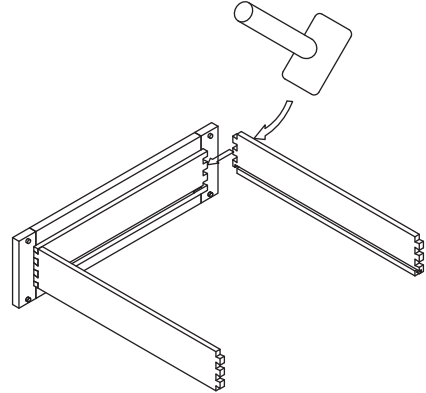


**STEP
20**

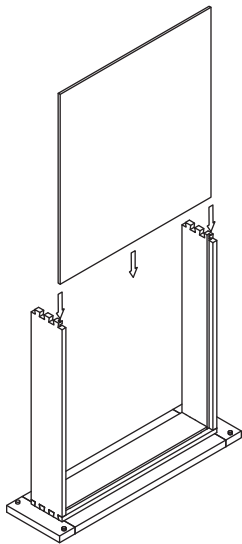

**STEP
21**

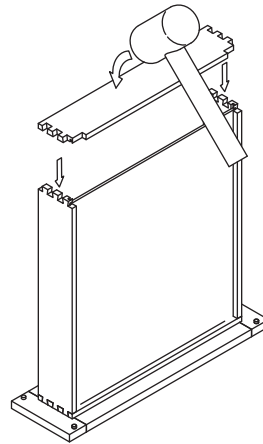


**STEP
22**

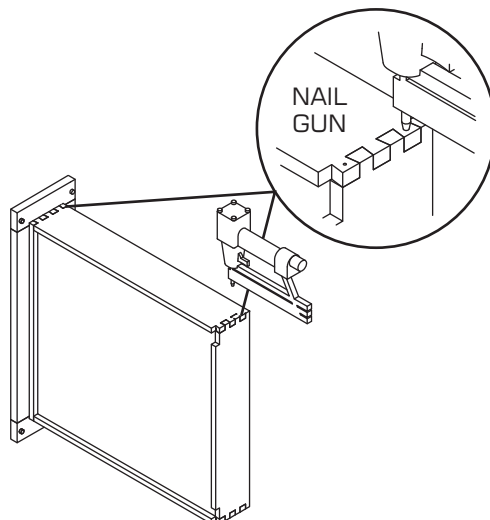


BASE 3 DRAWERS

STEP
23

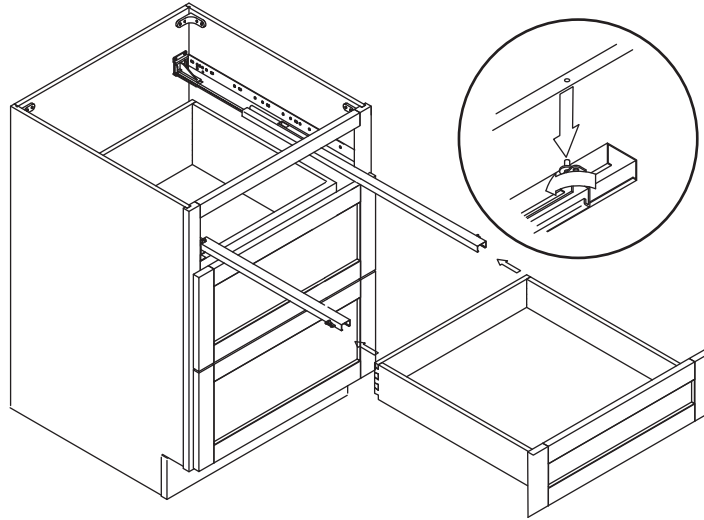


BASE 3 DRAWERS

STEP
24



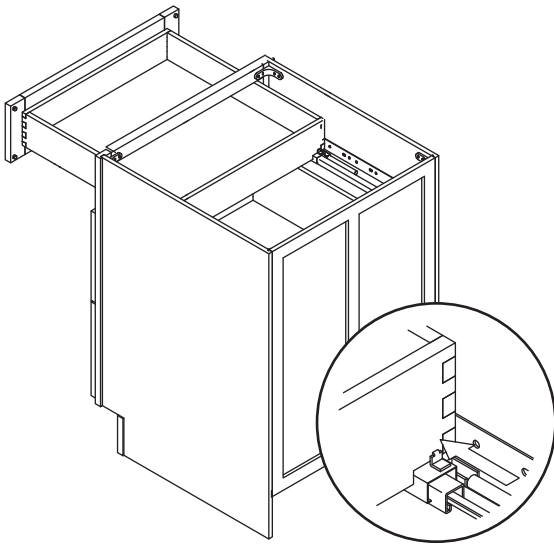


STEP
25

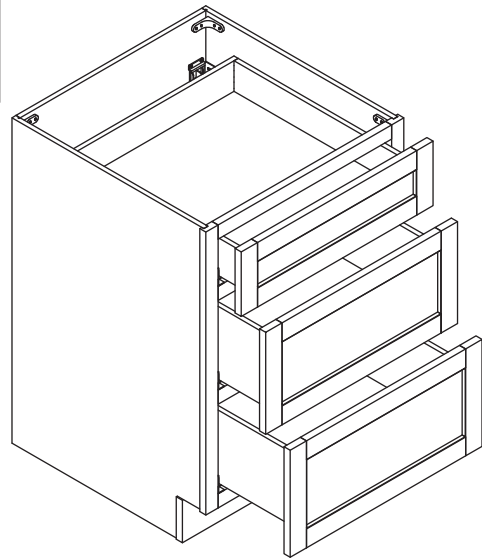

ASSEMBLING INSTRUCTIONS - WALL CABINET


WALL CABINET

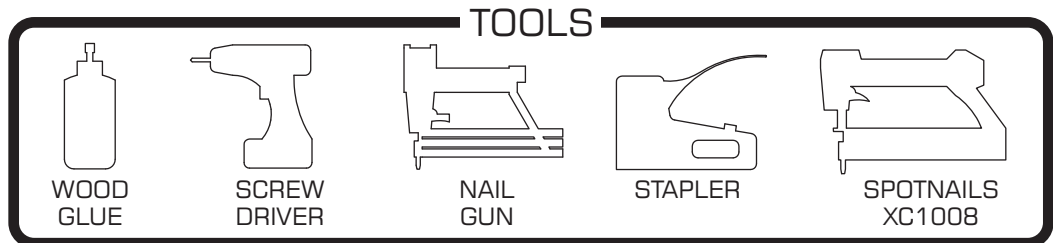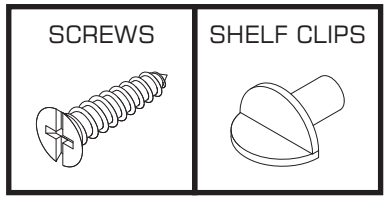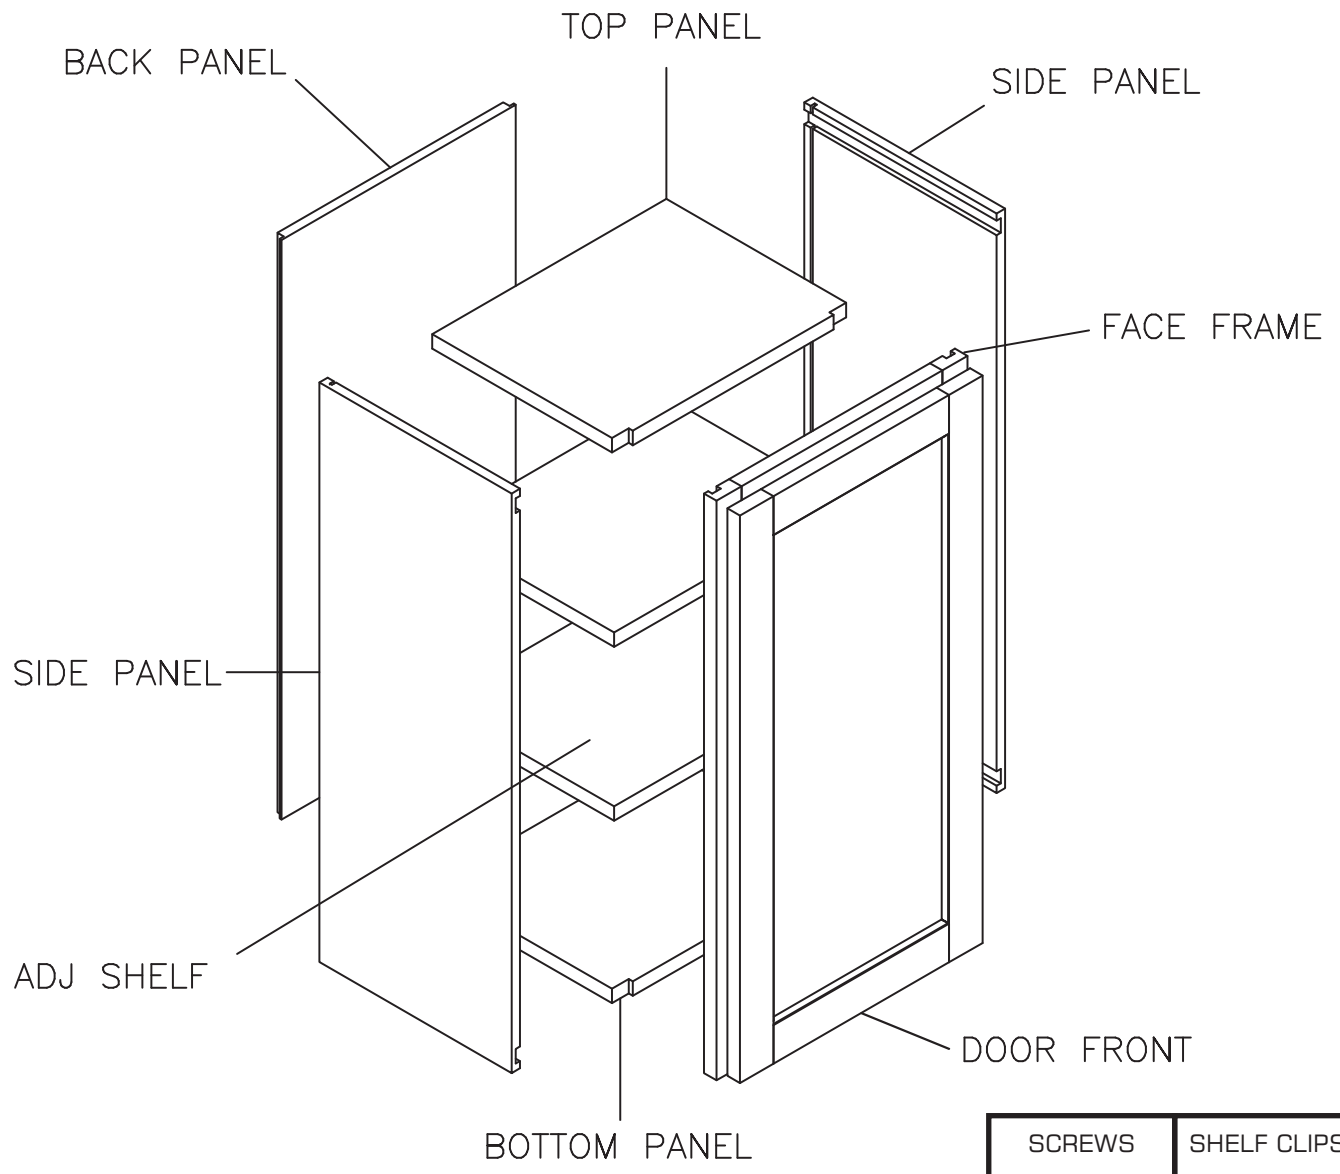


JARLIN CABINETS

WALL CABINET


STEP
1

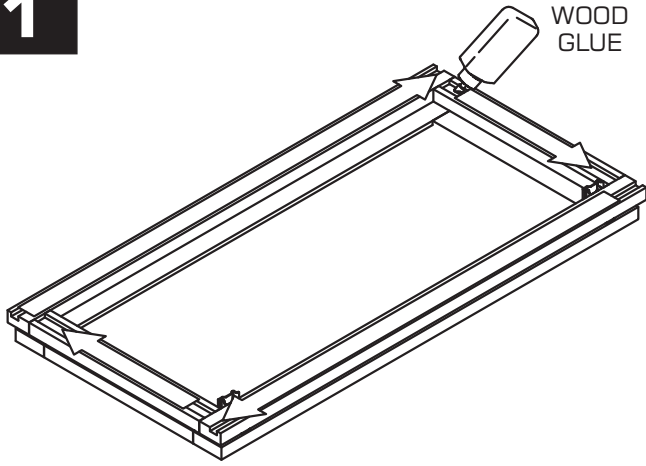


STEP
2

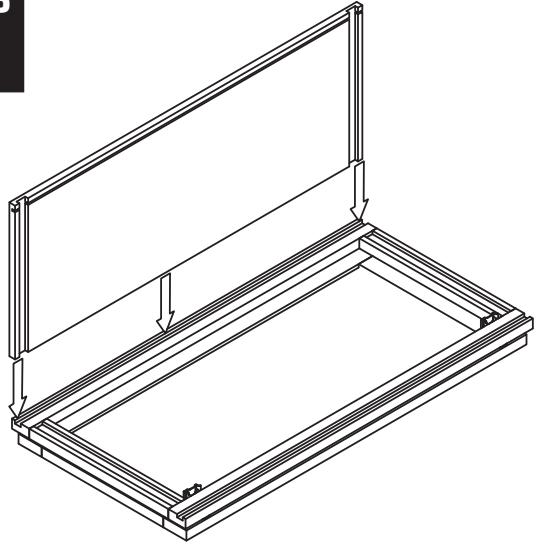


STEP
3

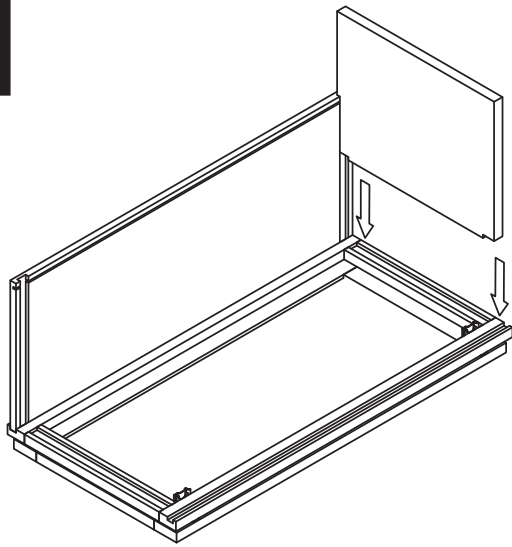


STEP
4

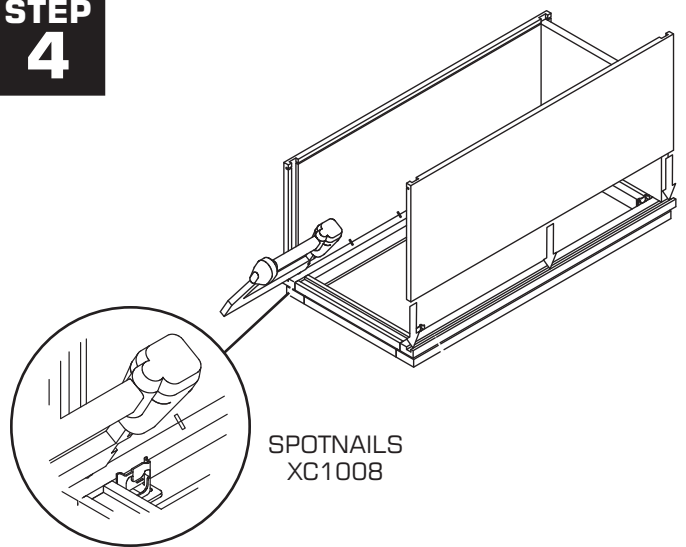

STEP
5

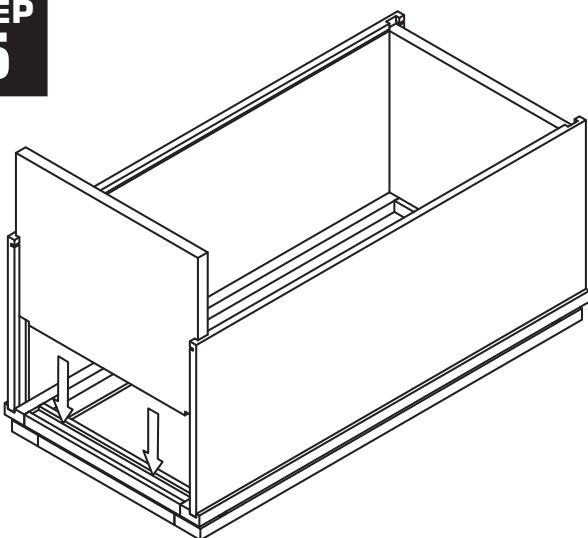

STEP
6

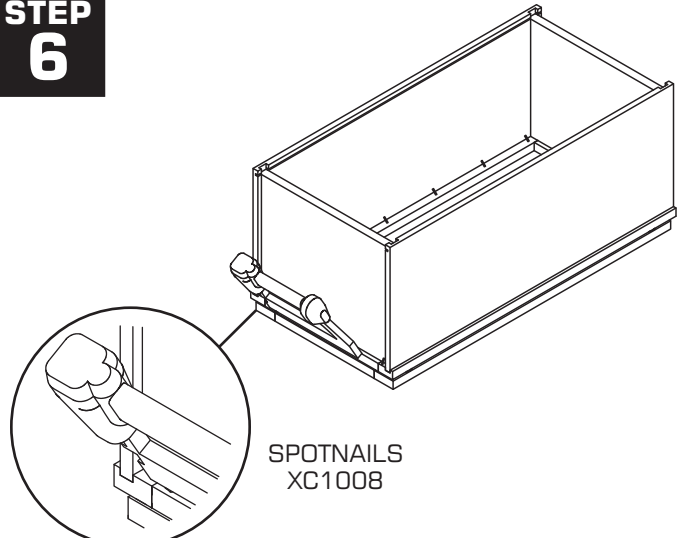


JARLIN


CABINETS

WALL CABINET


STEP 7

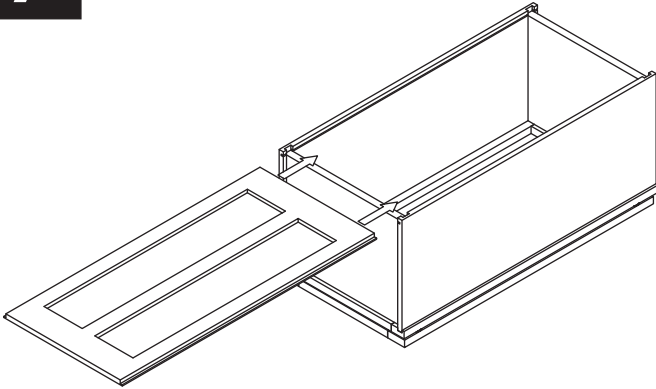


STEP 8

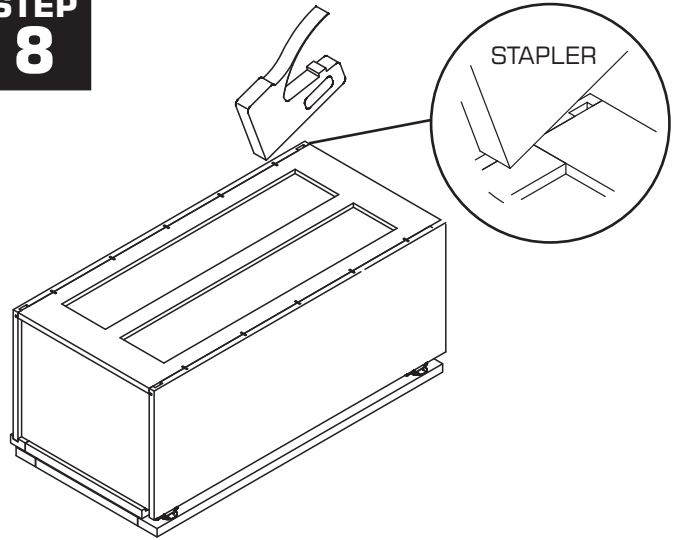


STEP 9

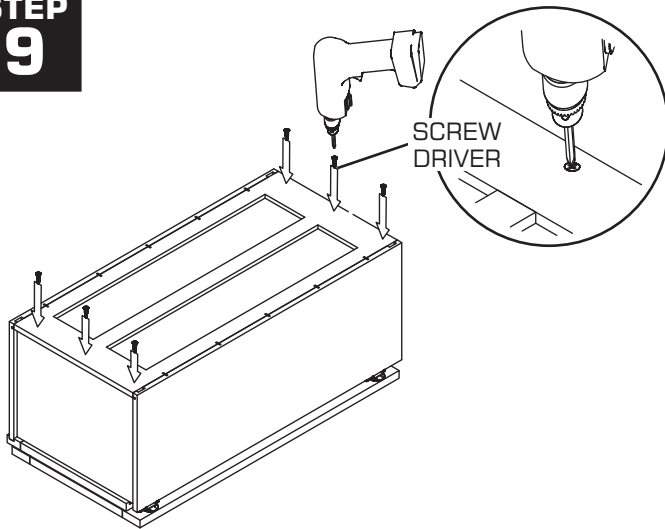

STEP 10

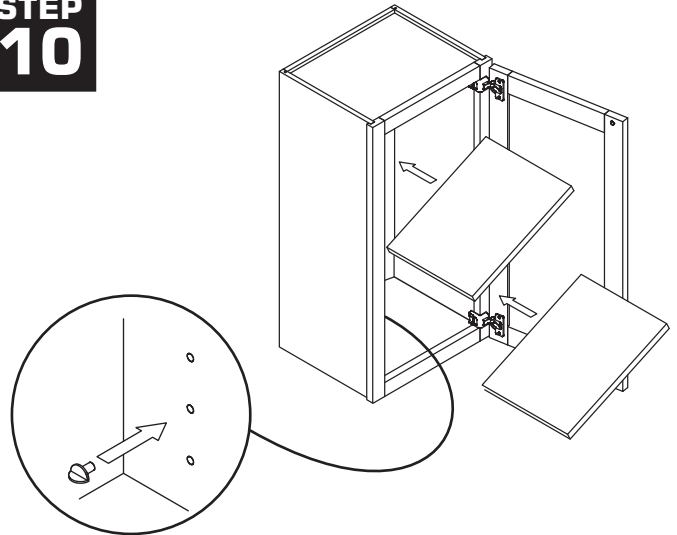


STEP 11

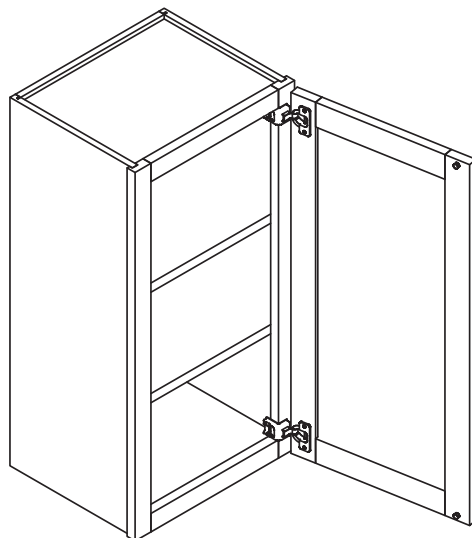

ASSEMBLING INSTRUCTIONS - WALL DIAGONAL CORNER CABINET

WALL DIAGONAL CORNER CABINET

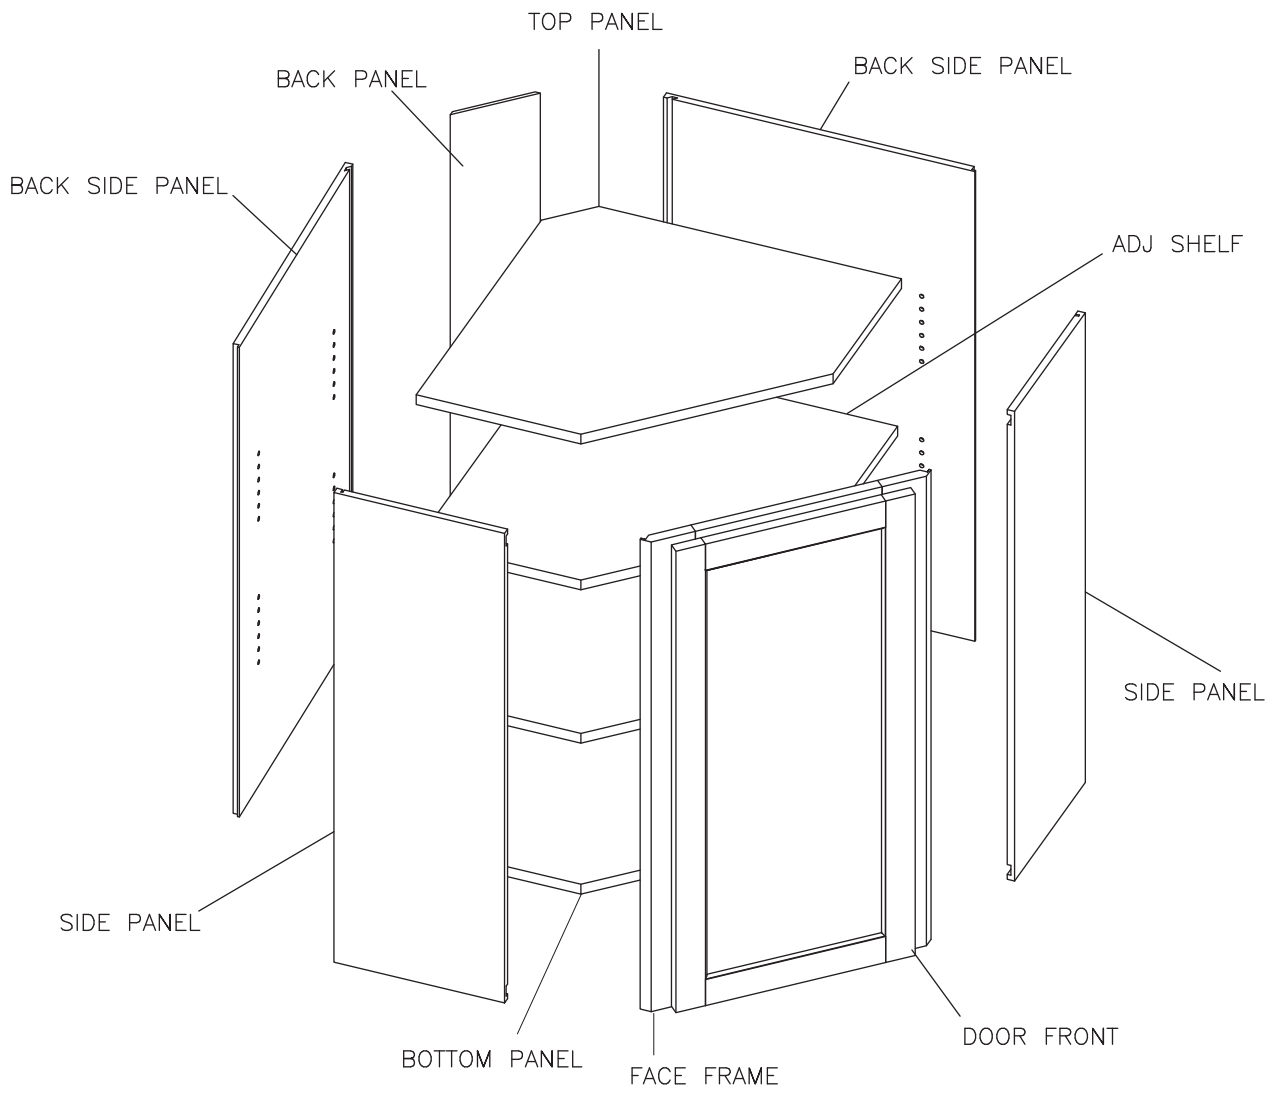

<p>METAL BRACKETS</p>	<p>SCREWS</p>	<p>SHELF CLIPS</p>
-----------------------	---------------	--------------------

TOOLS


<p>WOOD GLUE</p>	<p>SCREW DRIVER</p>	<p>NAIL GUN</p>	<p>STAPLER</p>	<p>SPOTNAILS XC1008</p>
------------------	---------------------	-----------------	----------------	-------------------------

JARLIN


CABINETS

WALL DIAGONAL CORNER CABINET


STEP 1

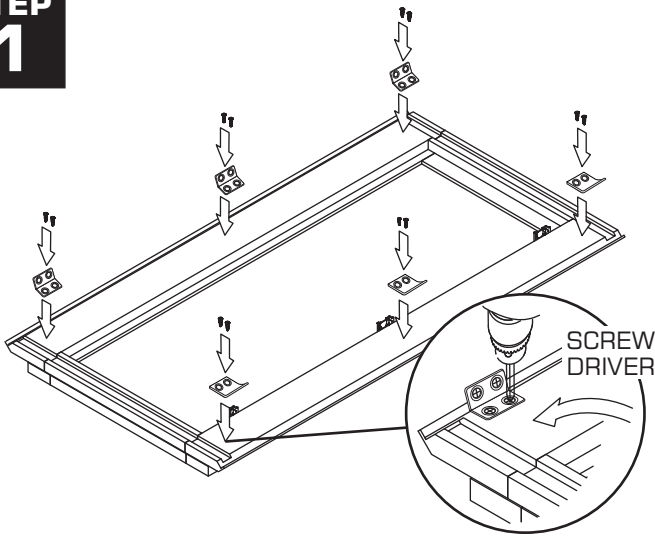


STEP 2

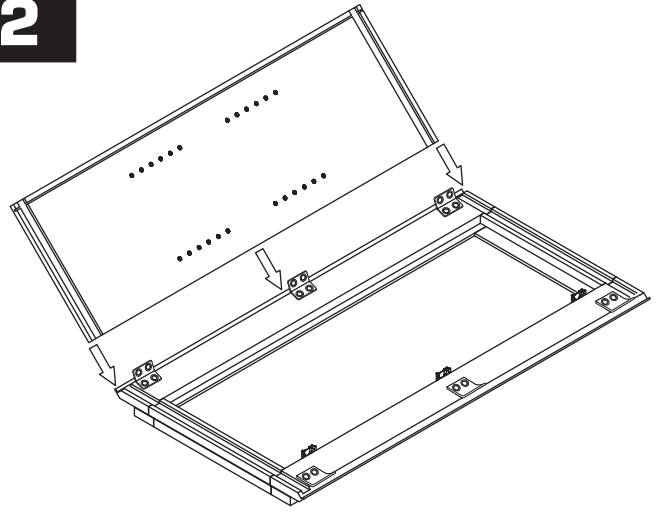


STEP 3

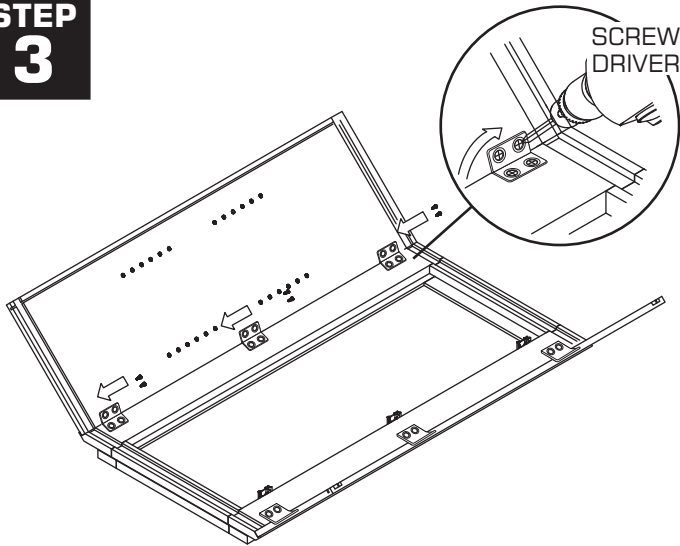


STEP 4

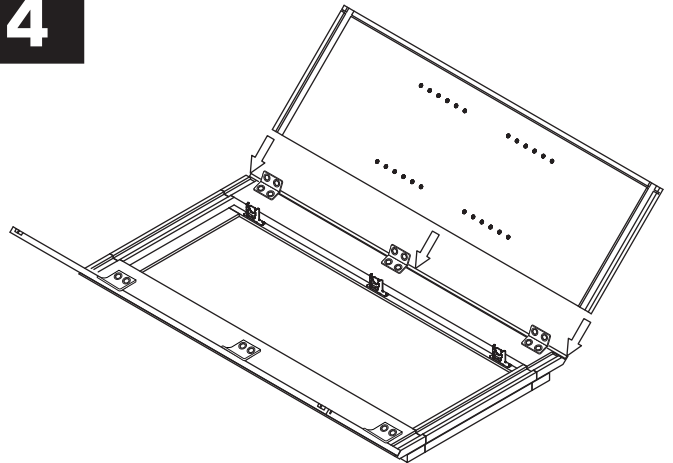

STEP 5

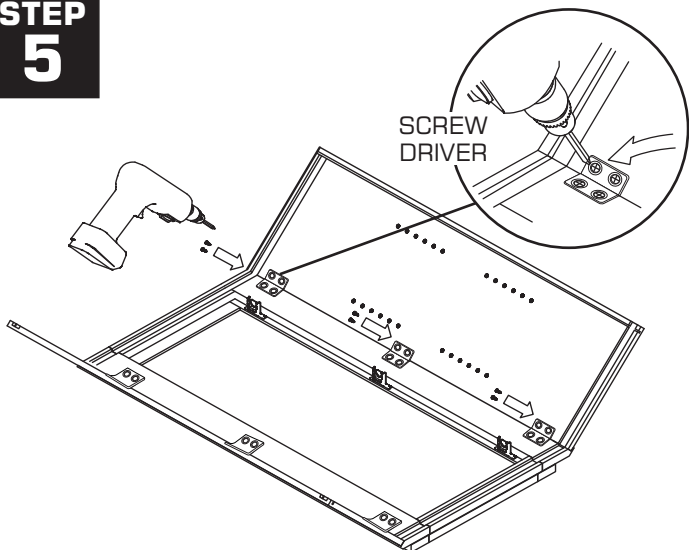


STEP 6

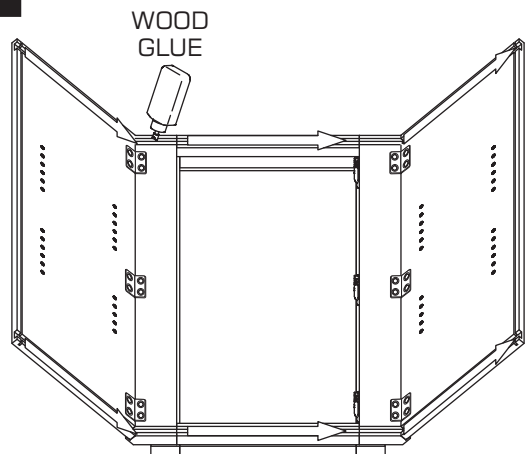


JARLIN CABINETS


**STEP
7**

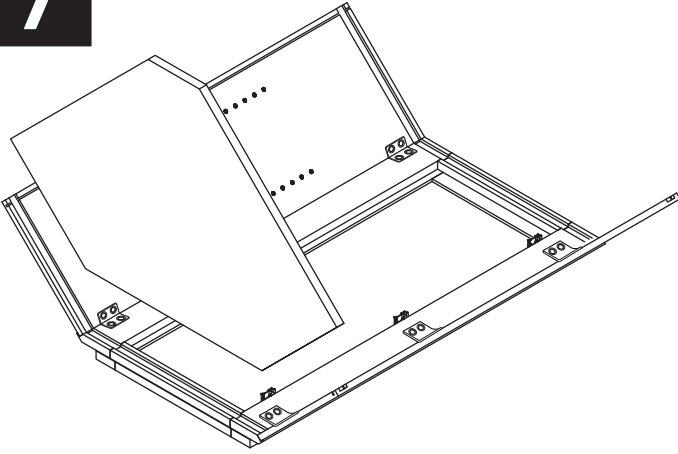


**STEP
8**

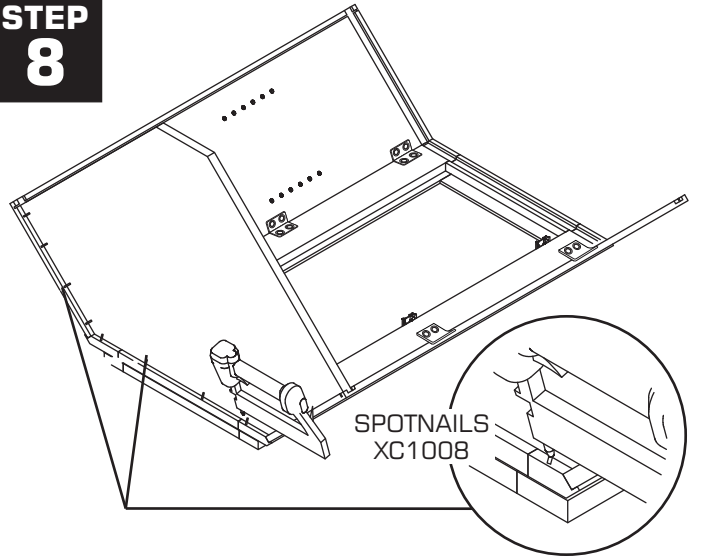


**STEP
9**

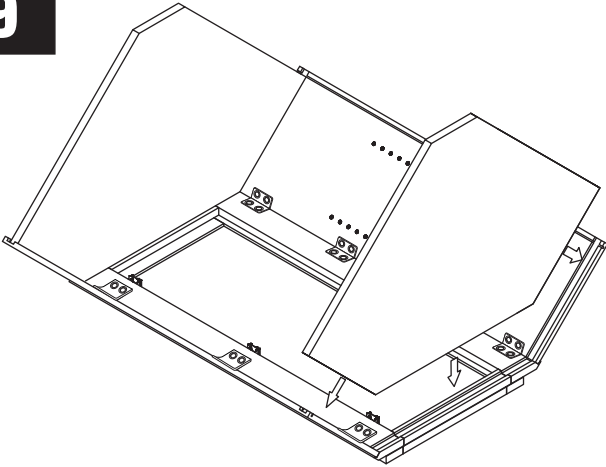

**STEP
10**

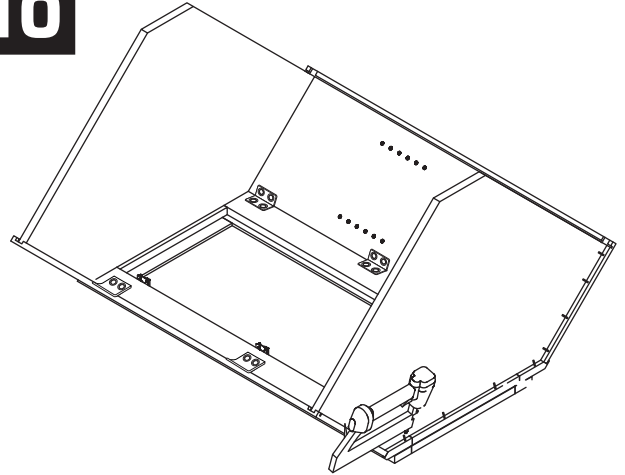

**STEP
11**

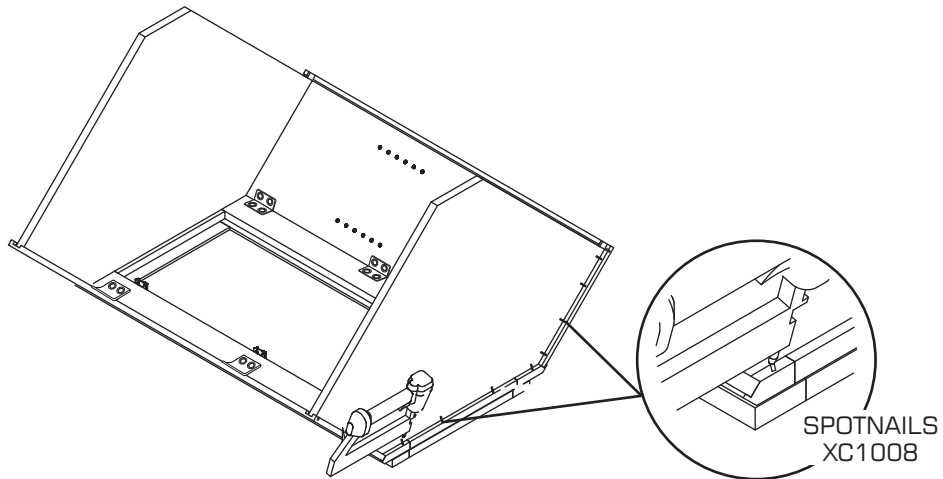


WALL DIAGONAL CORNER CABINET


JARLIN

CABINETS


STEP 12

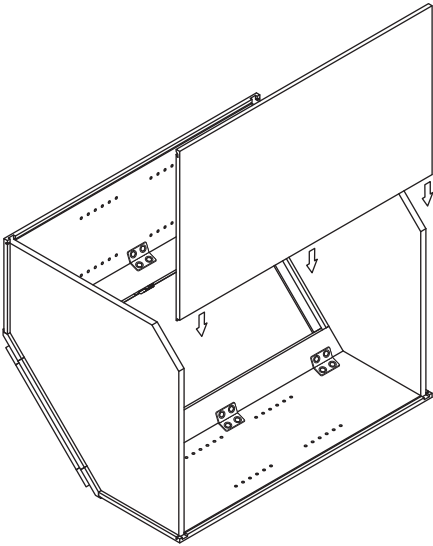


STEP 13

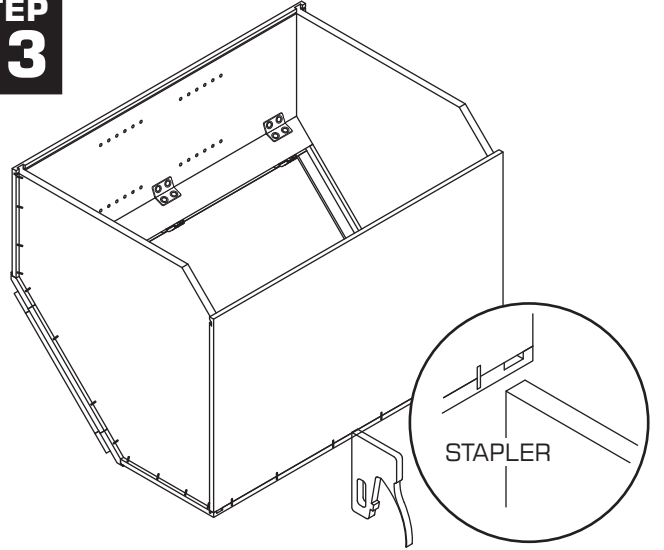


STEP 14

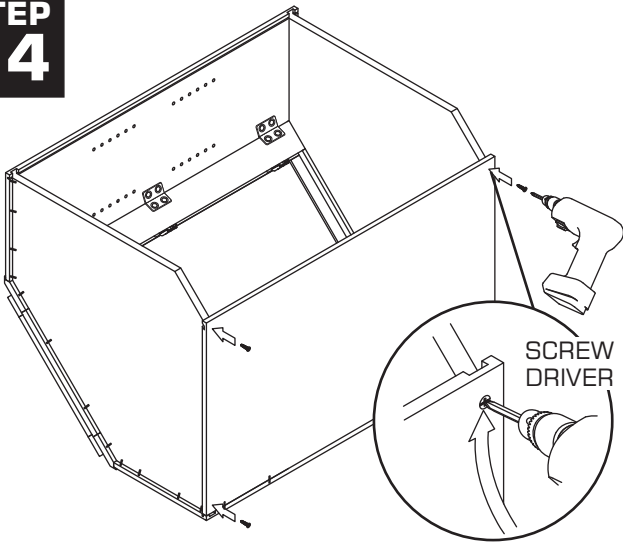


STEP 15

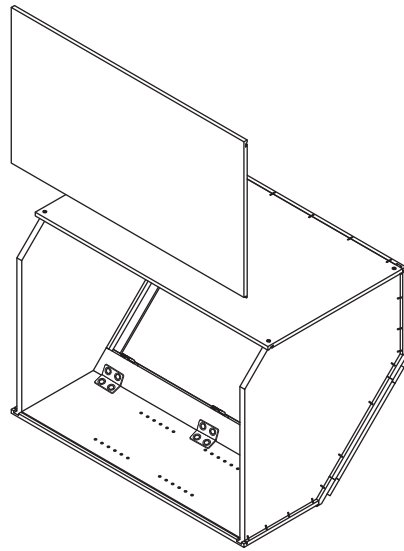

STEP 16

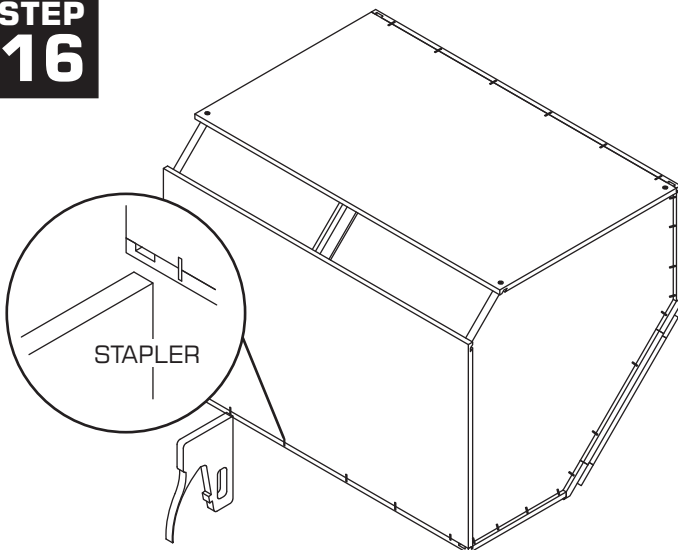


STEP 17

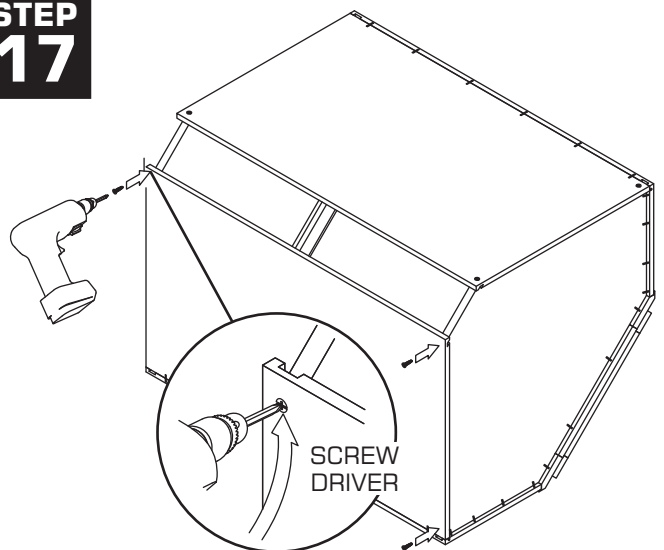


WALL DIAGONAL CORNER CABINET

JARLIN CABINETS


**STEP
18**

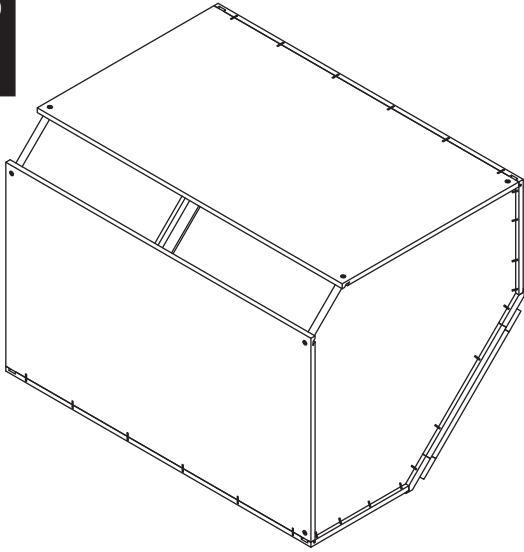


**STEP
19**

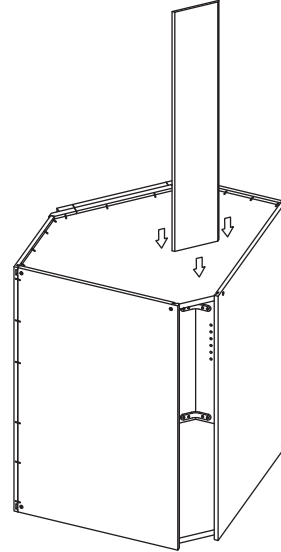


**STEP
20**

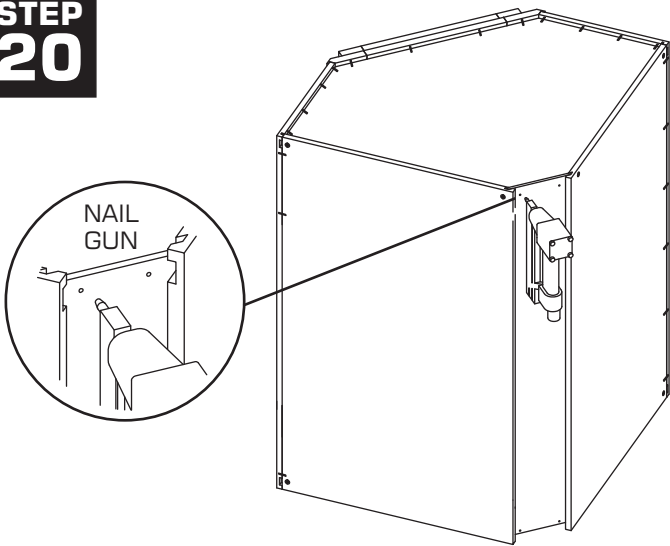

**STEP
21**

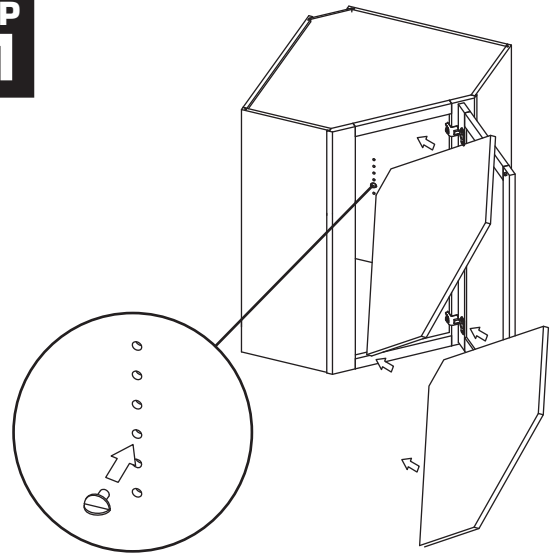


**STEP
22**

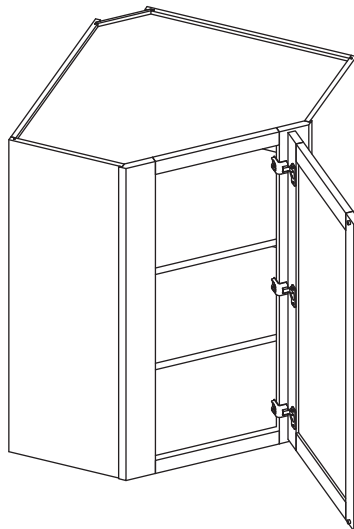

WALL DIAGONAL CORNER CABINET

ASSEMBLING INSTRUCTIONS - TALL PANTRY

PANTRY

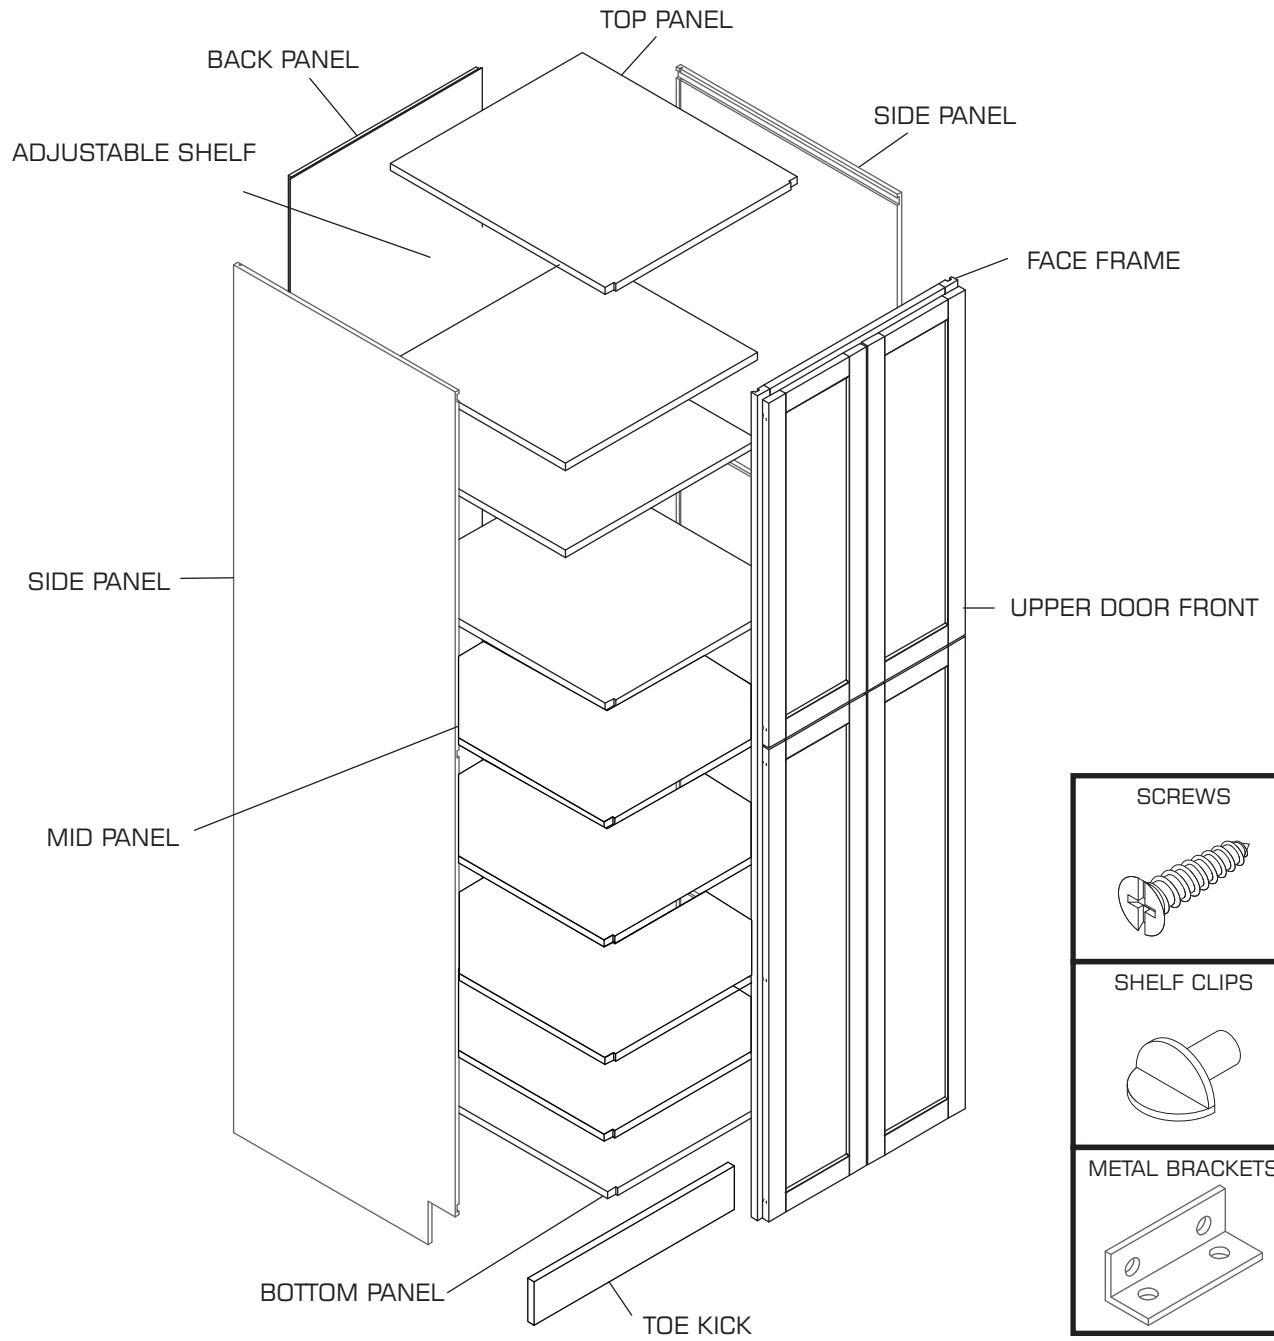

- SCREWS
- SHELF CLIPS
- METAL BRACKETS


TOOLS

- WOOD GLUE
- SCREW DRIVER
- RUBBER Mallet
- NAIL GUN
- STAPLER
- SPOTNAILS XC1008


JARLIN CABINETS

PANTRY


STEP
1

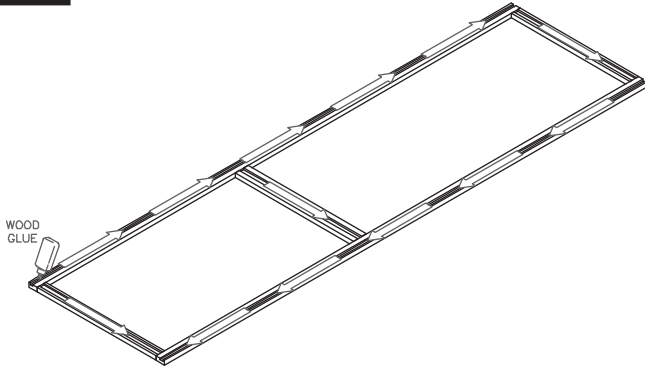


STEP
2

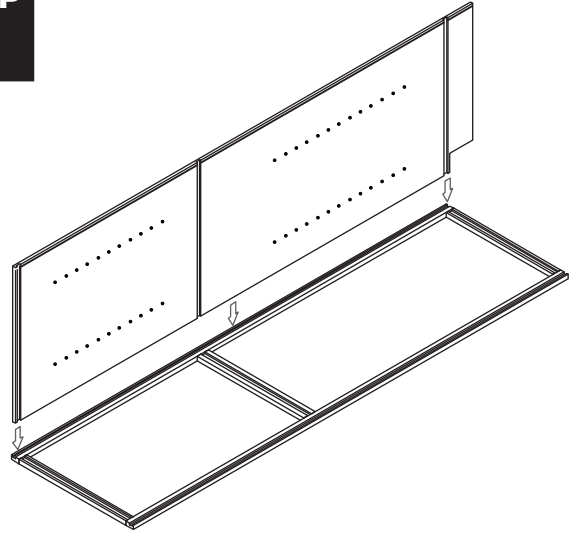


STEP
3

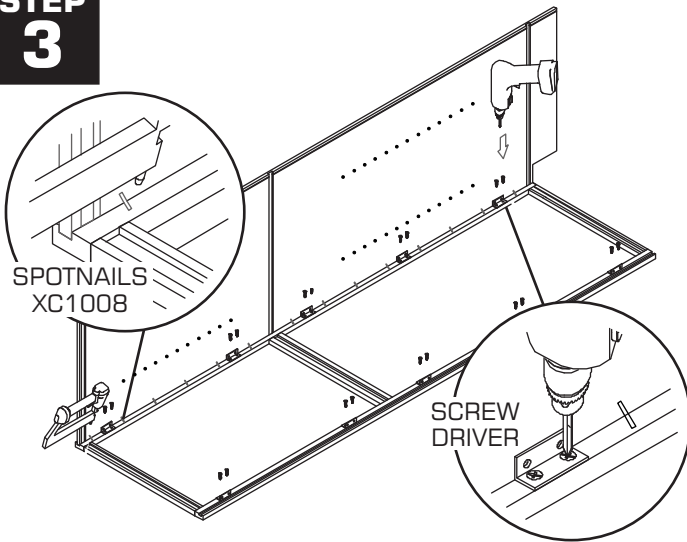


STEP
4

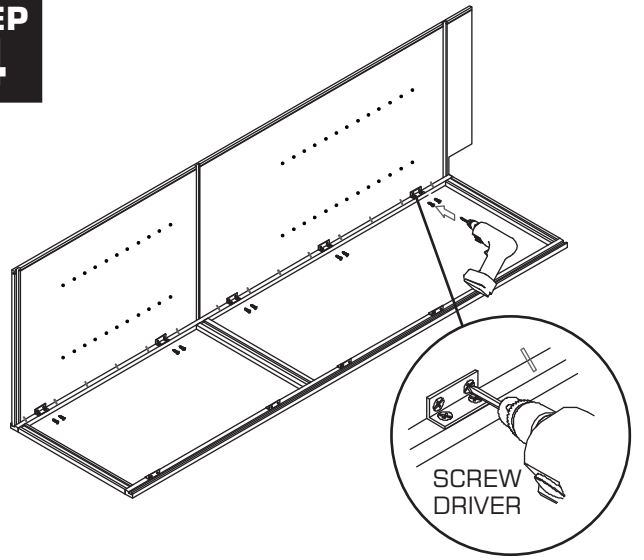

STEP
5

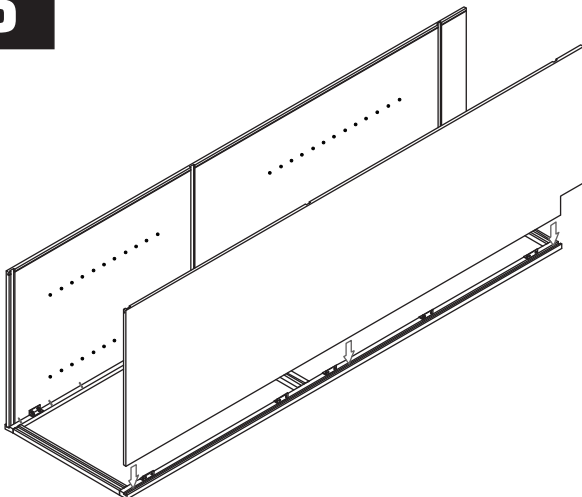


STEP
6

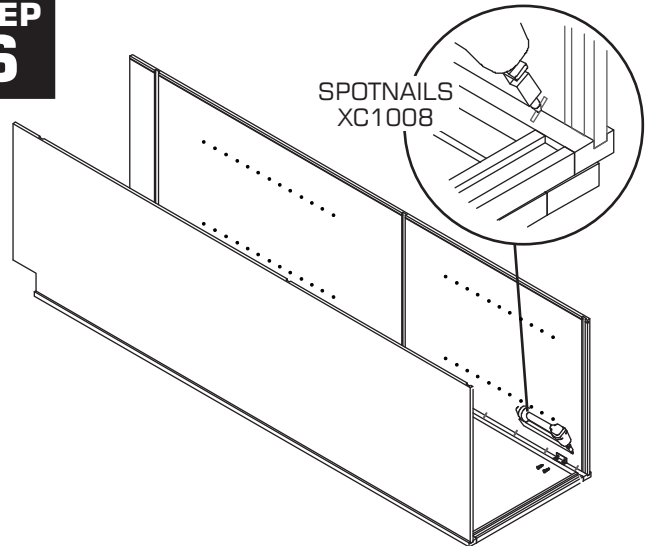


JARLIN CABINETS

PANTRY


STEP
7

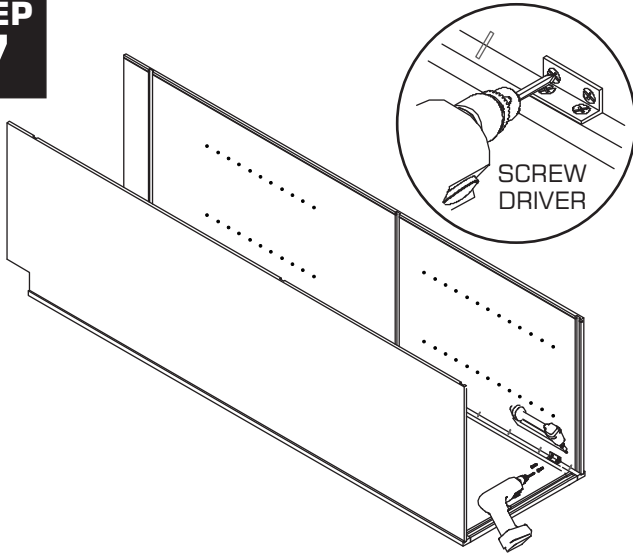


STEP
8

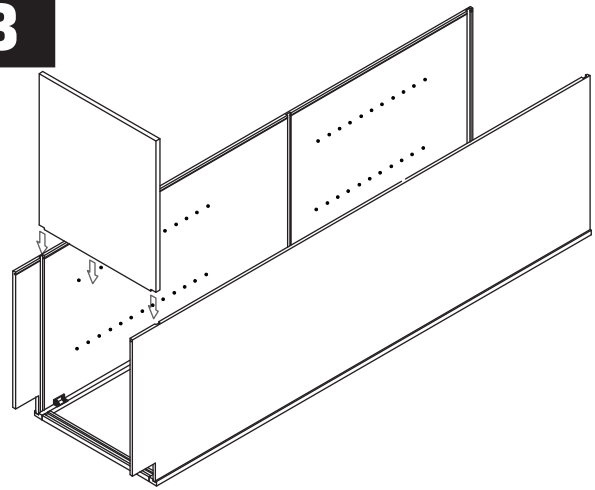


STEP
9

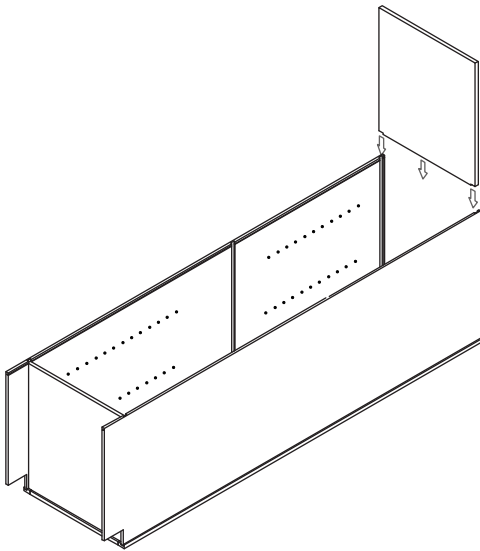

STEP
10

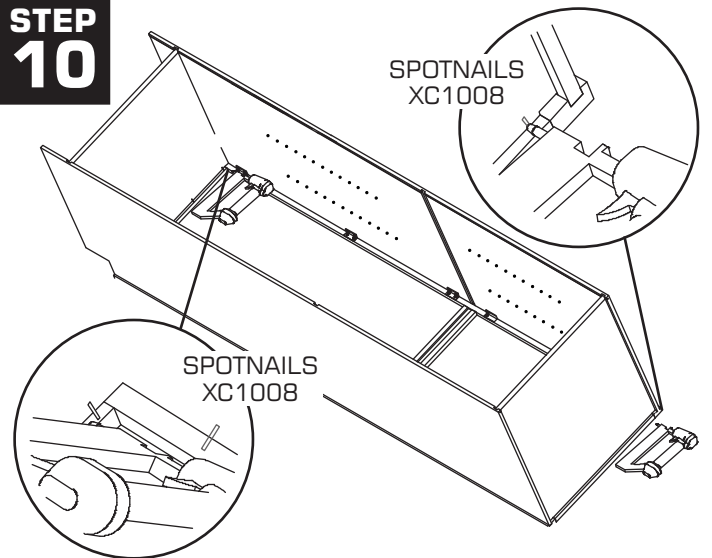

STEP
11

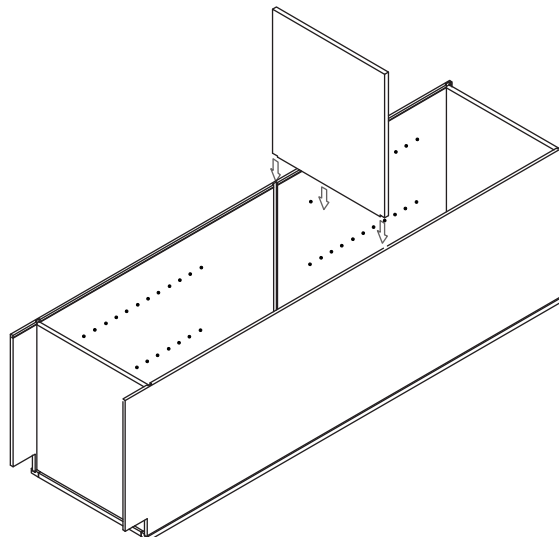


JARLIN


CABINETS

PANTRY


STEP
12

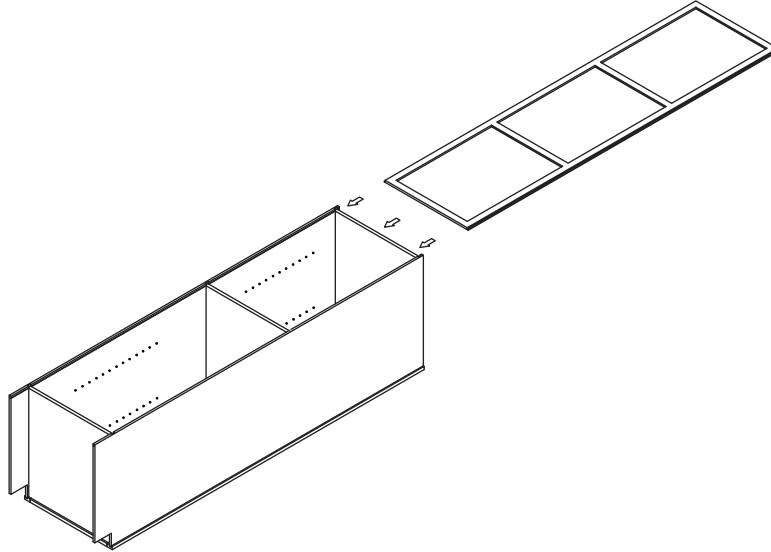


STEP
13

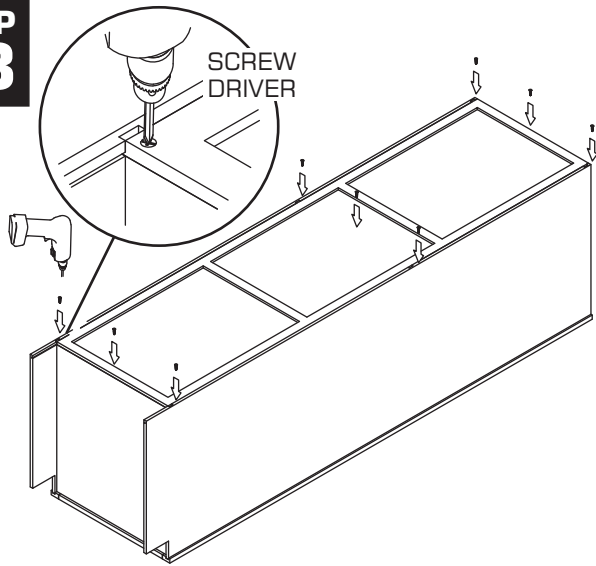


STEP
14

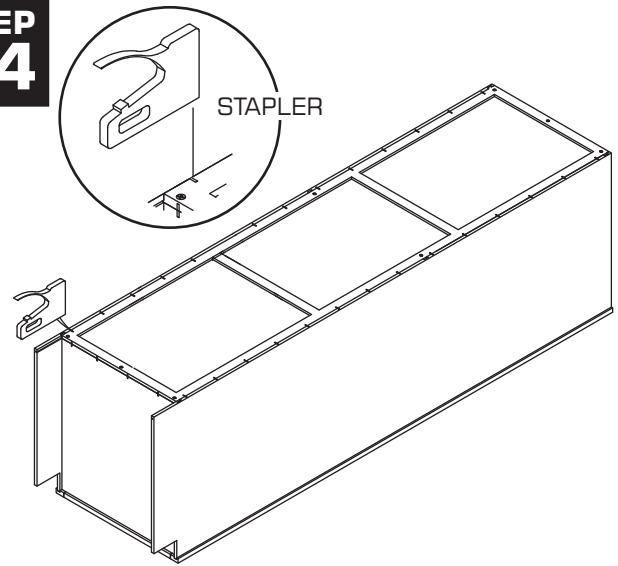

STEP
15

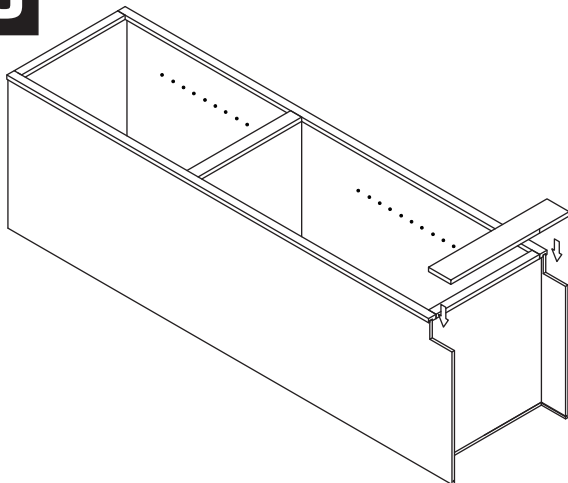


STEP
16

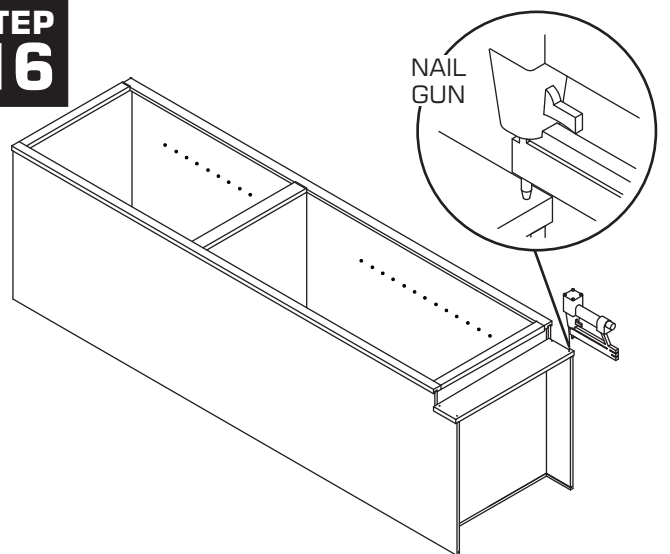


JARLIN CABINETS

**STEP
17**

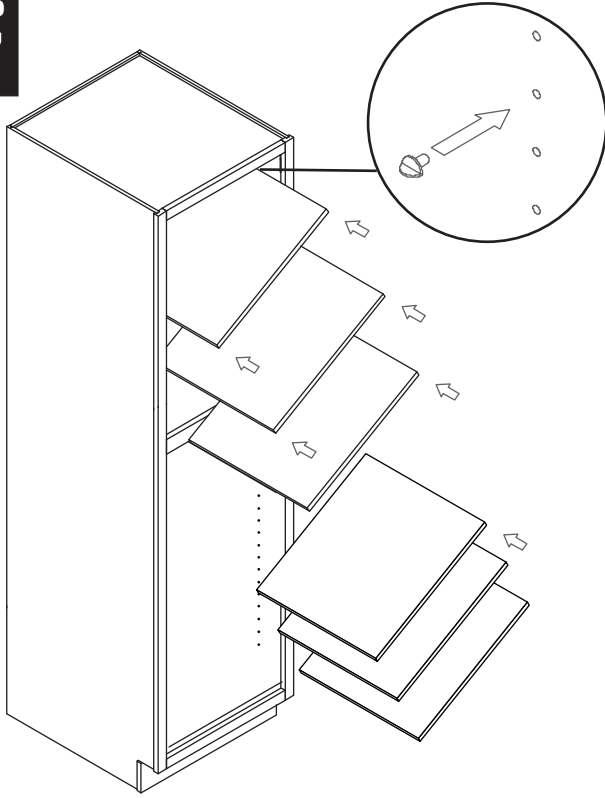


**STEP
18**

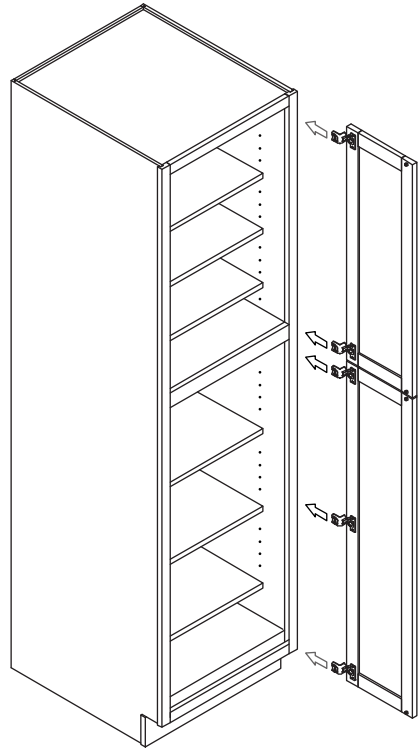


PANTRY

**STEP
19**

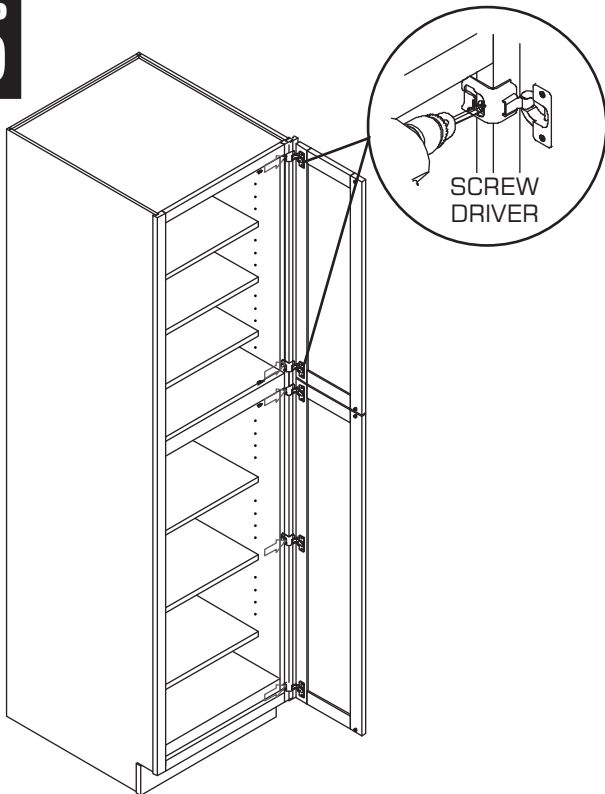


**STEP
20**

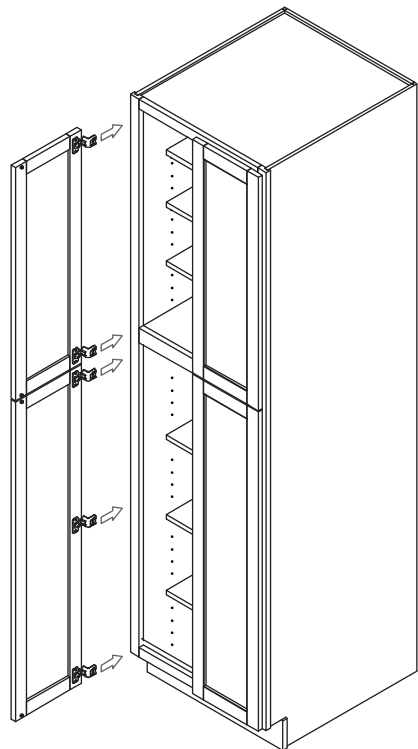


JARLIN CABINETS

**STEP
21**

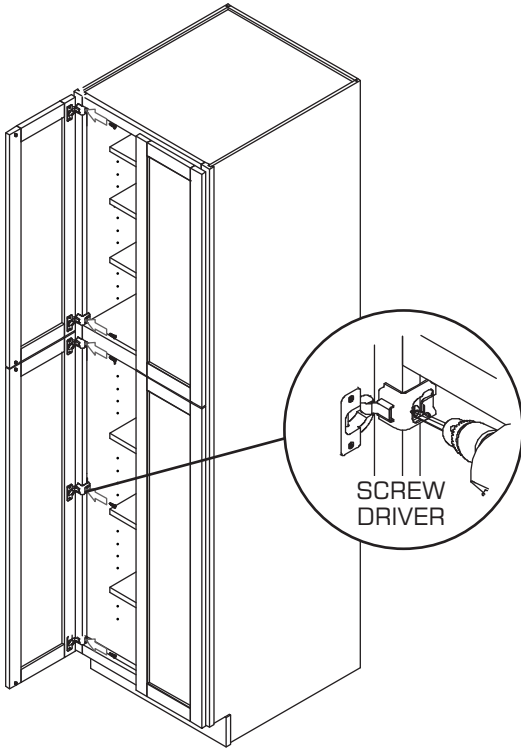


**STEP
22**

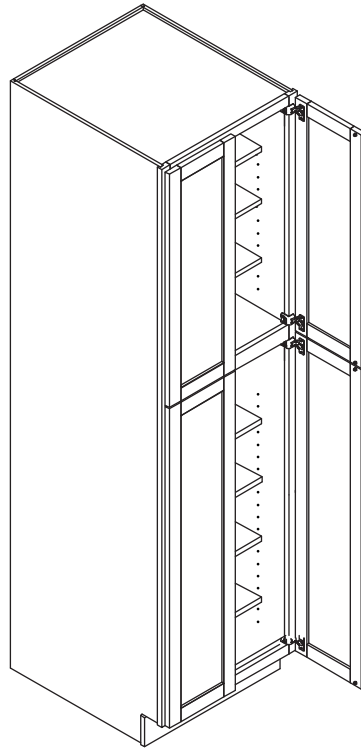

PANTRY

ASSEMBLING INSTRUCTIONS - OVEN CABINET

OVEN CABINET

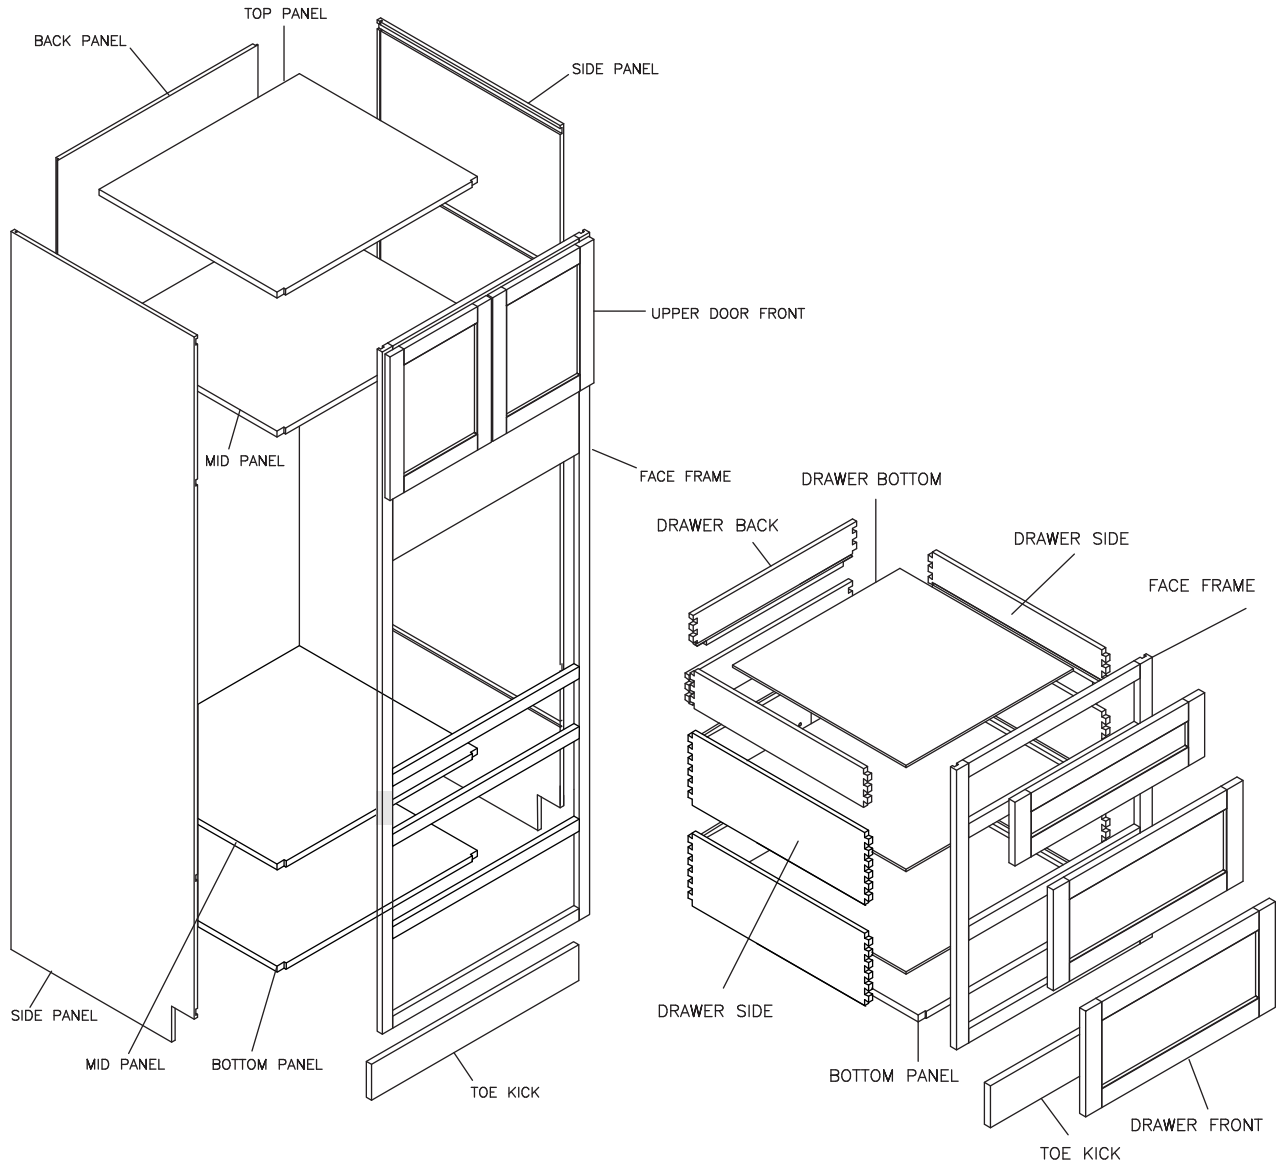


<p>GLIDES</p>	<p>METAL BRACKETS</p>	<p>SCREWS</p>	<p>GLIDE SUPPORTS</p>
---------------	-----------------------	---------------	-----------------------

TOOLS					
<p>WOOD GLUE</p>	<p>SCREW DRIVER</p>	<p>RUBBER Mallet</p>	<p>NAIL GUN</p>	<p>STAPLER</p>	<p>SPOTNAILS XC1008</p>


JARLIN CABINETS

OVEN CABINET


STEP
1

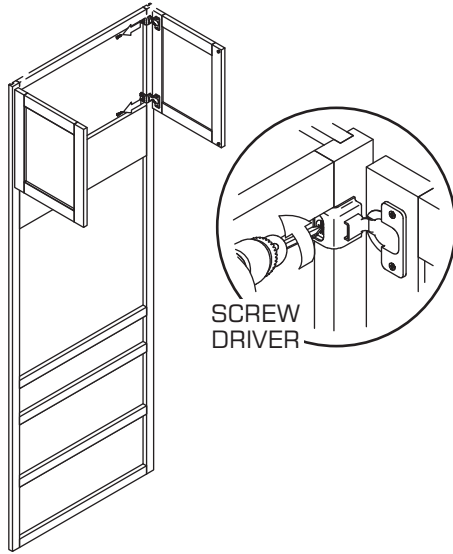


STEP
2

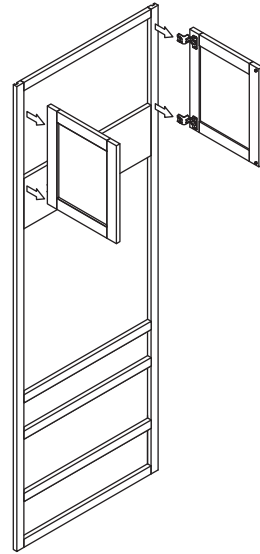


STEP
3

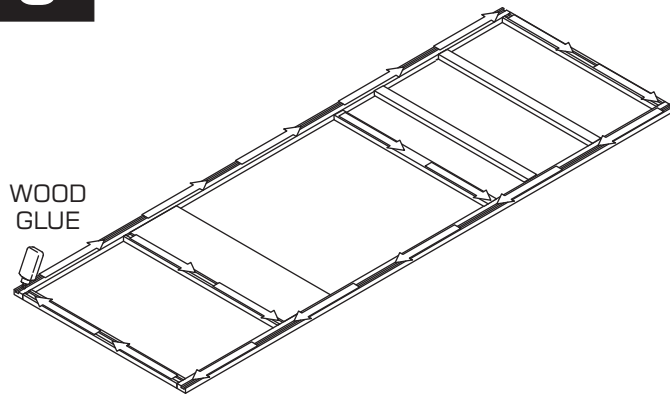


STEP
4

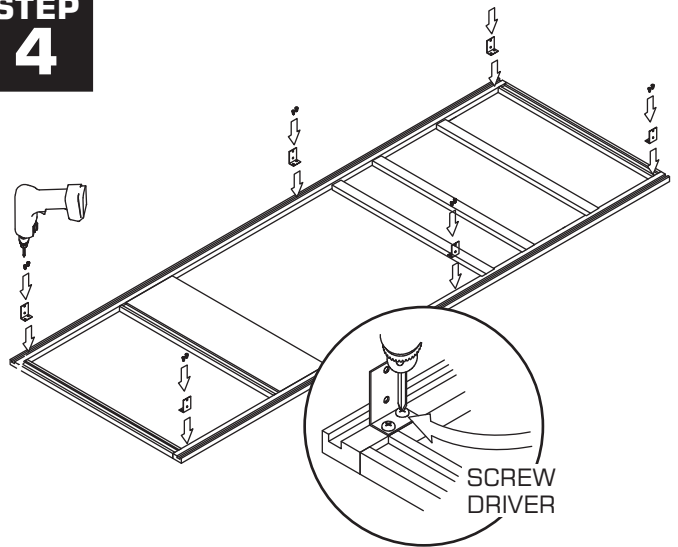

STEP
5

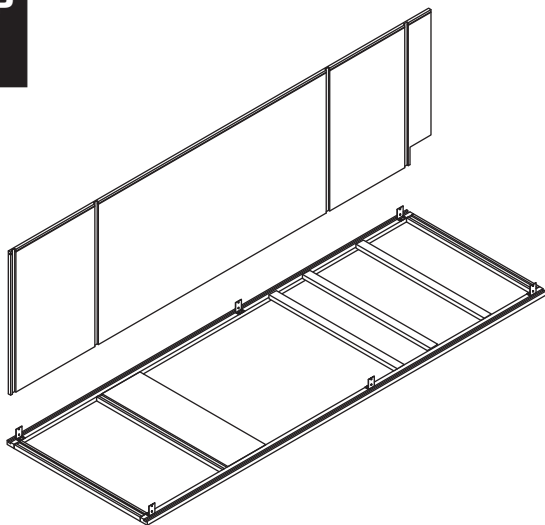


STEP
6

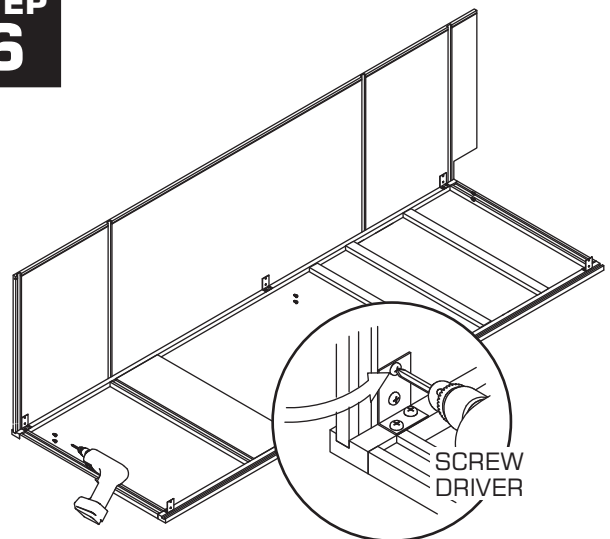


JARLIN CABINETS

OVEN CABINET


STEP
7

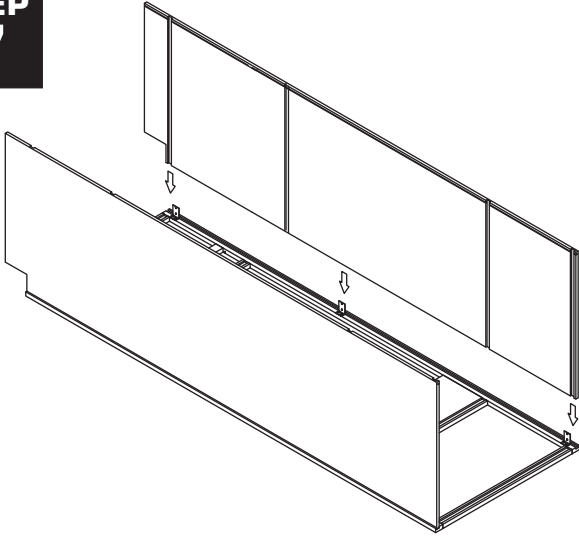


STEP
8

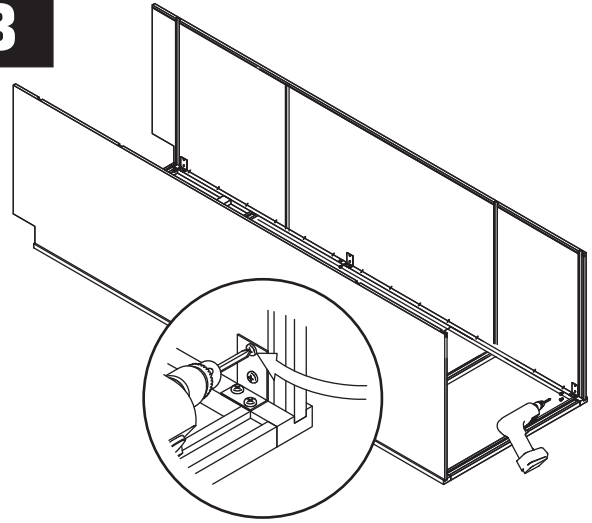


STEP
9

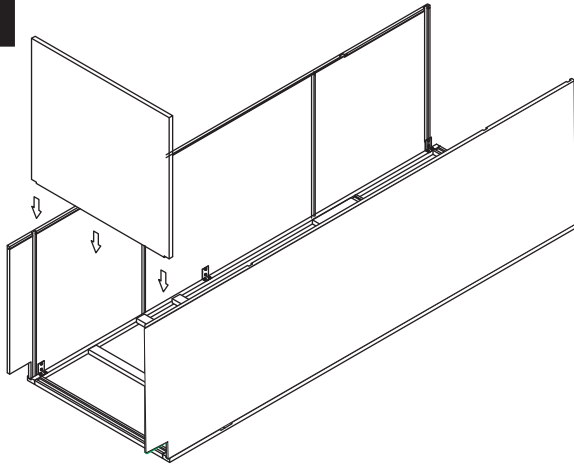

STEP
10

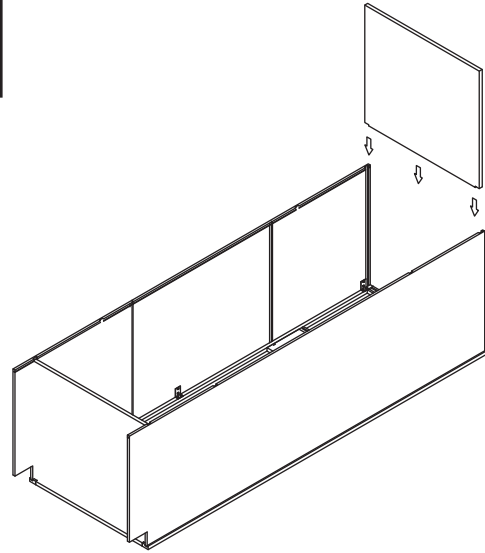


STEP
11

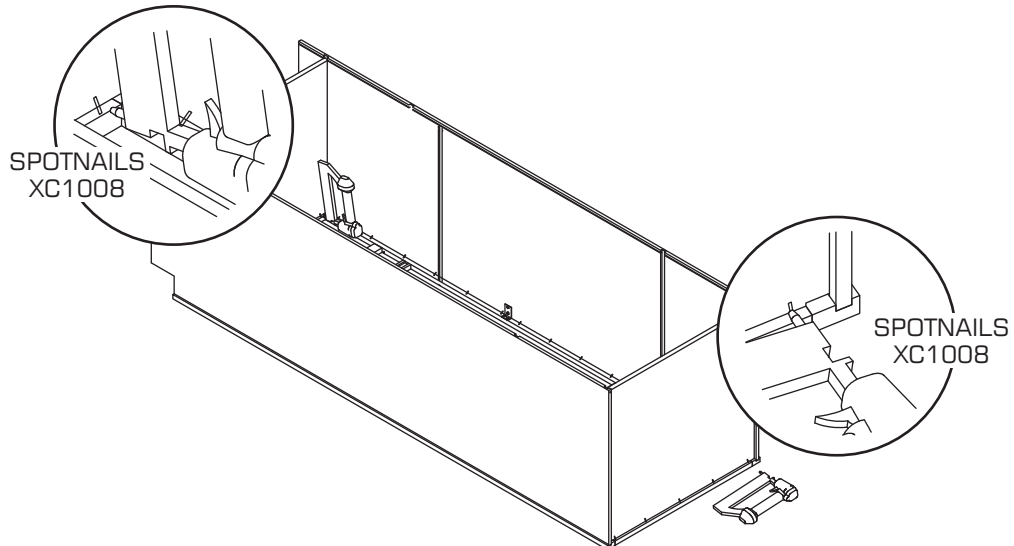


JARLIN CABINETS

**STEP
12**

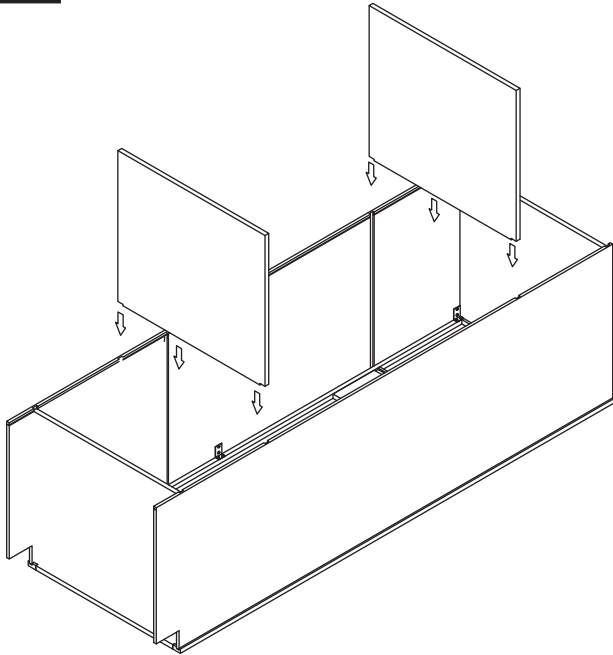


**STEP
13**

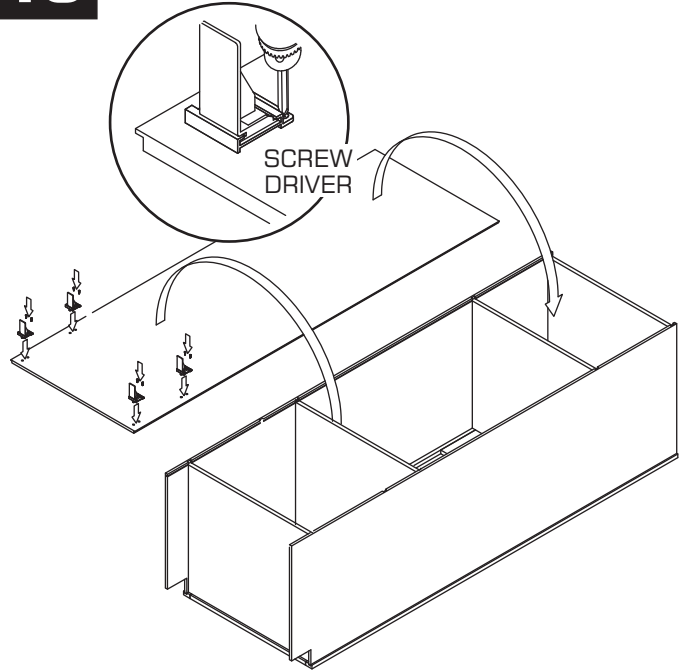


OVEN CABINET

**STEP
14**

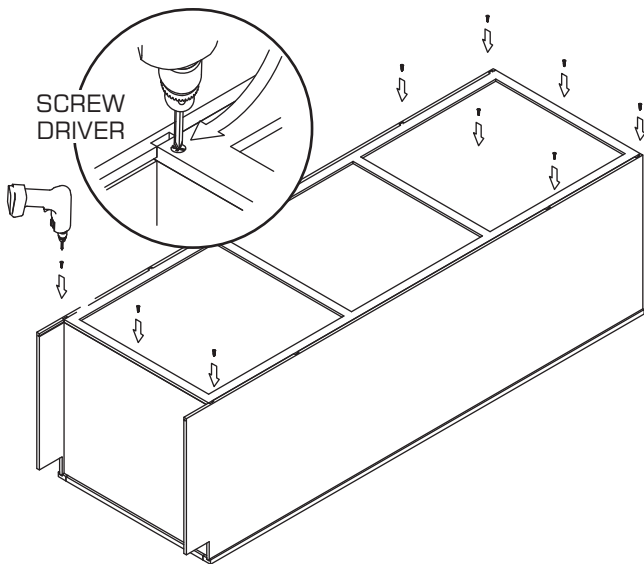


**STEP
15**

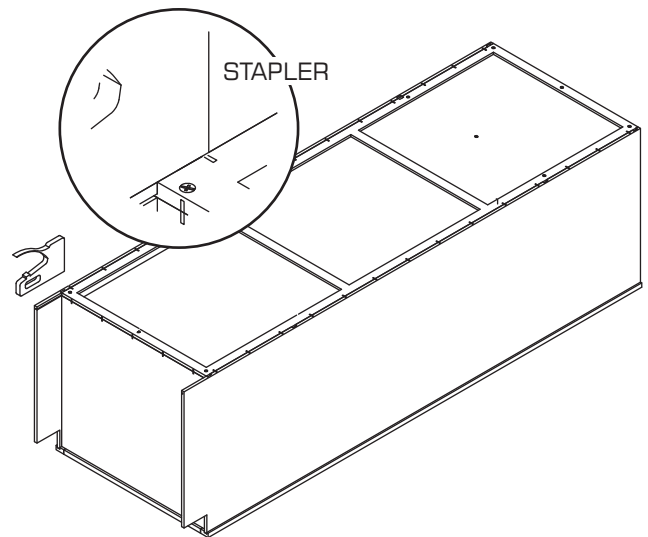


JARLIN CABINETS


STEP 16

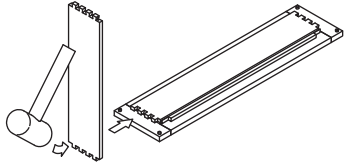


STEP 17

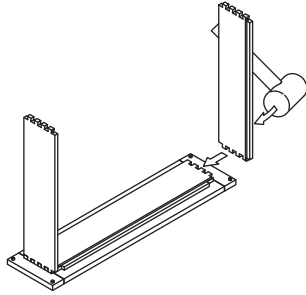


STEP 18

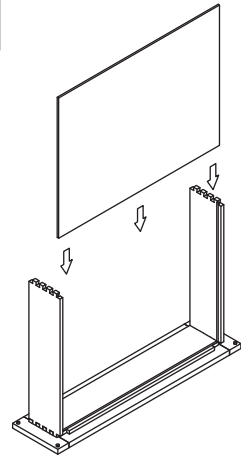


STEP 19

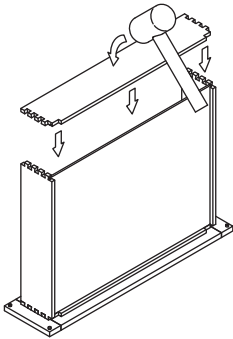


STEP 20

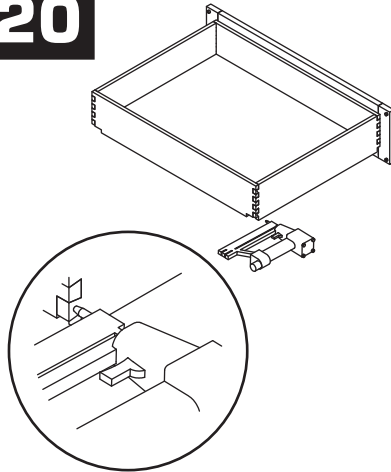


STEP 21

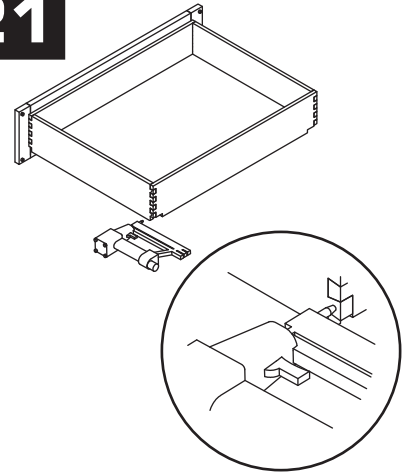

STEP 22

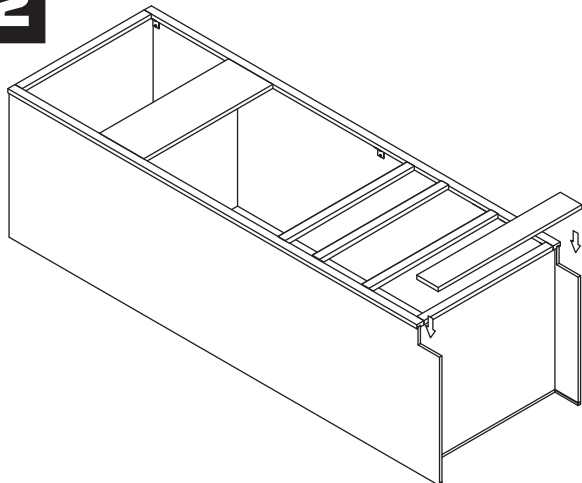


STEP 23

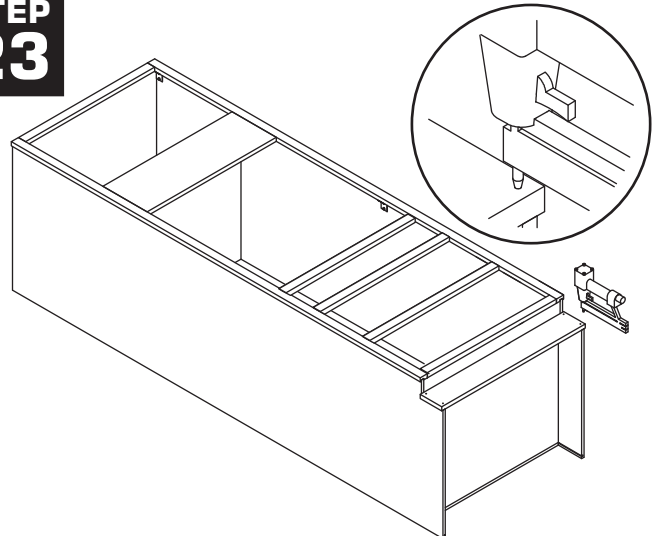


OVEN CABINET

JARLIN CABINETS

**STEP
24**

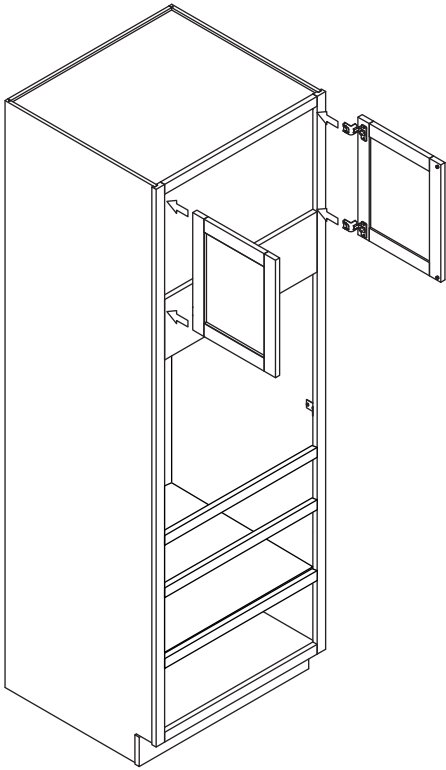


**STEP
25**

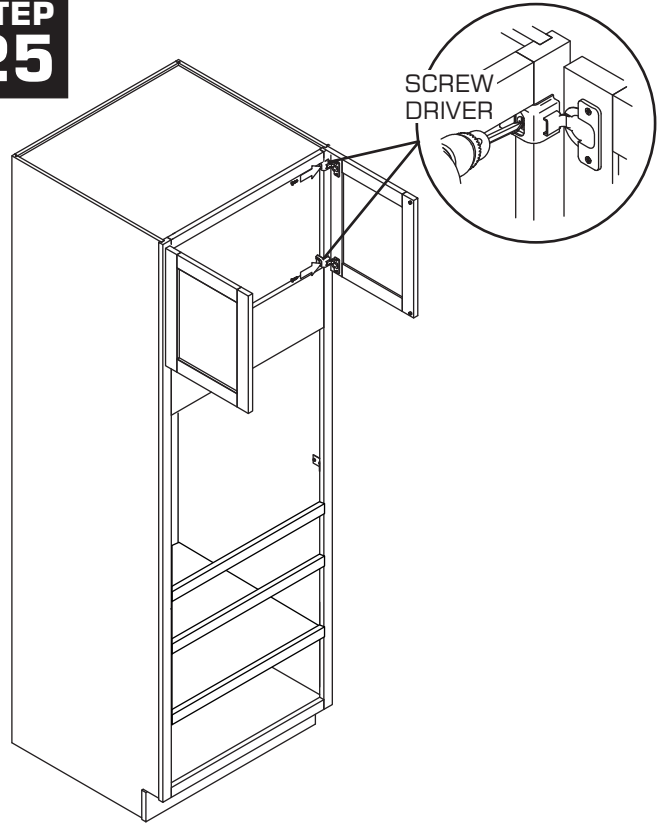


OVEN CABINET


**STEP
26**

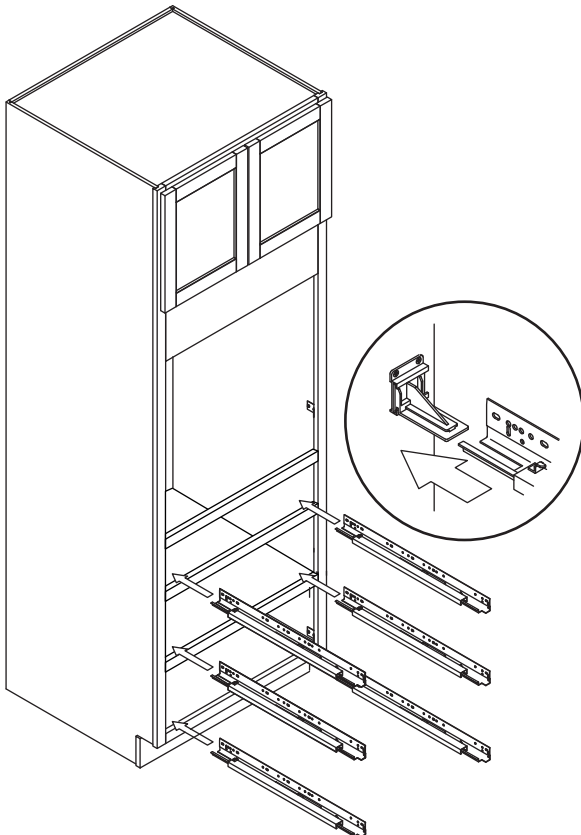


**STEP
27**

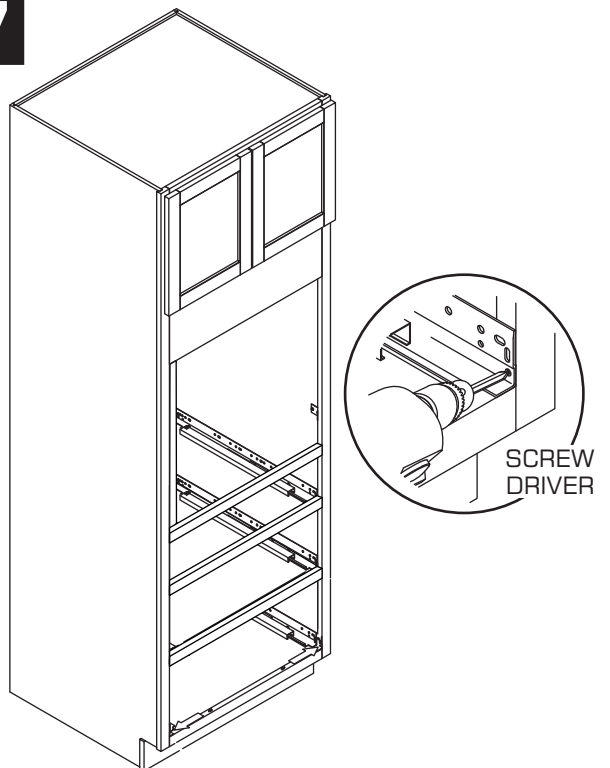

STEP
28

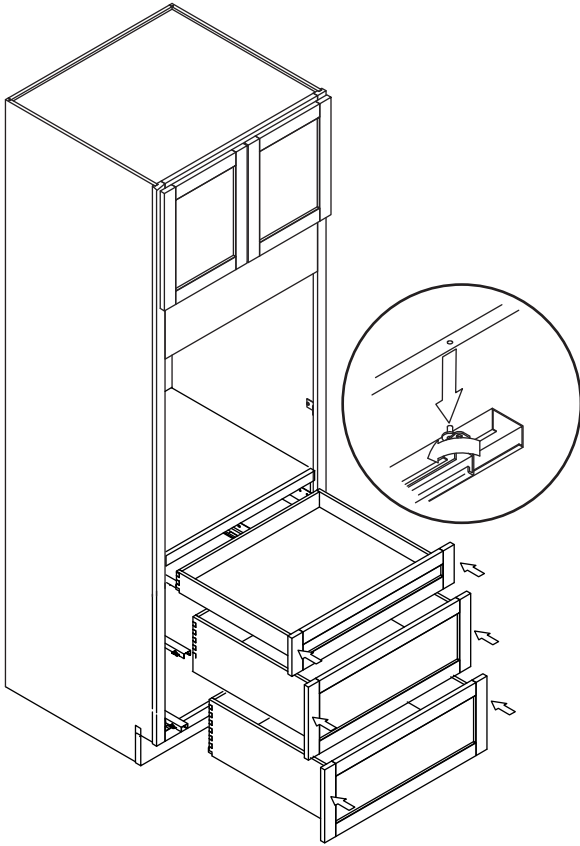


STEP
29

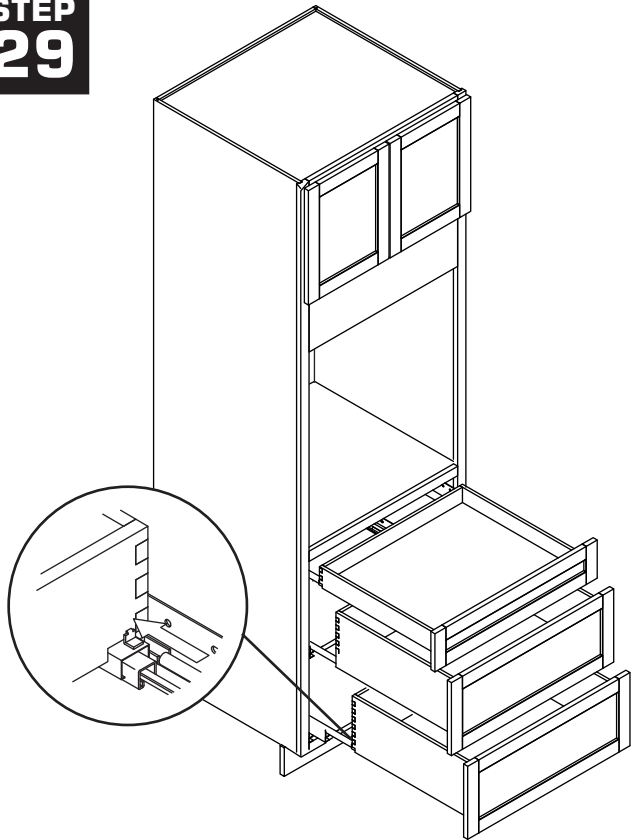


OVEN CABINET

STEP
30


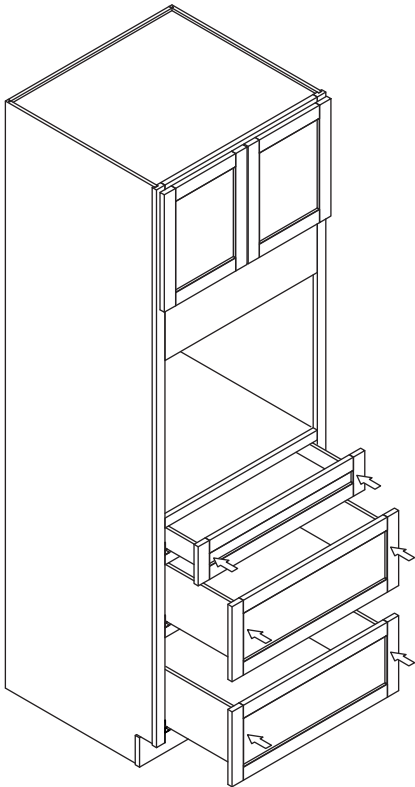


STEP
31

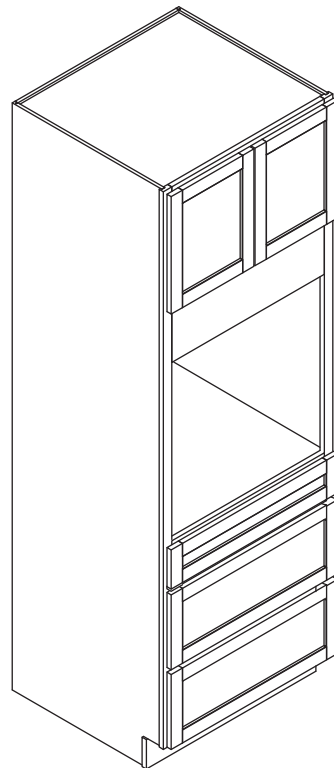

ASSEMBLING INSTRUCTIONS - VANITY CABINET


VANITY CABINET

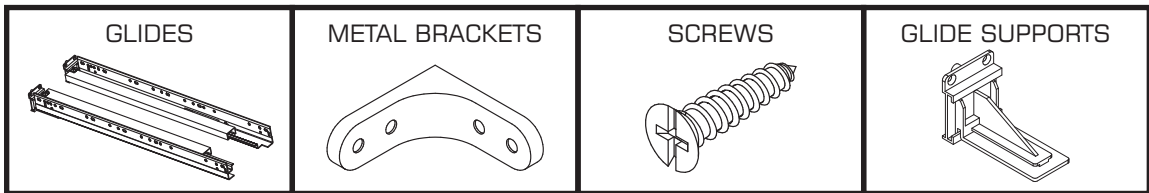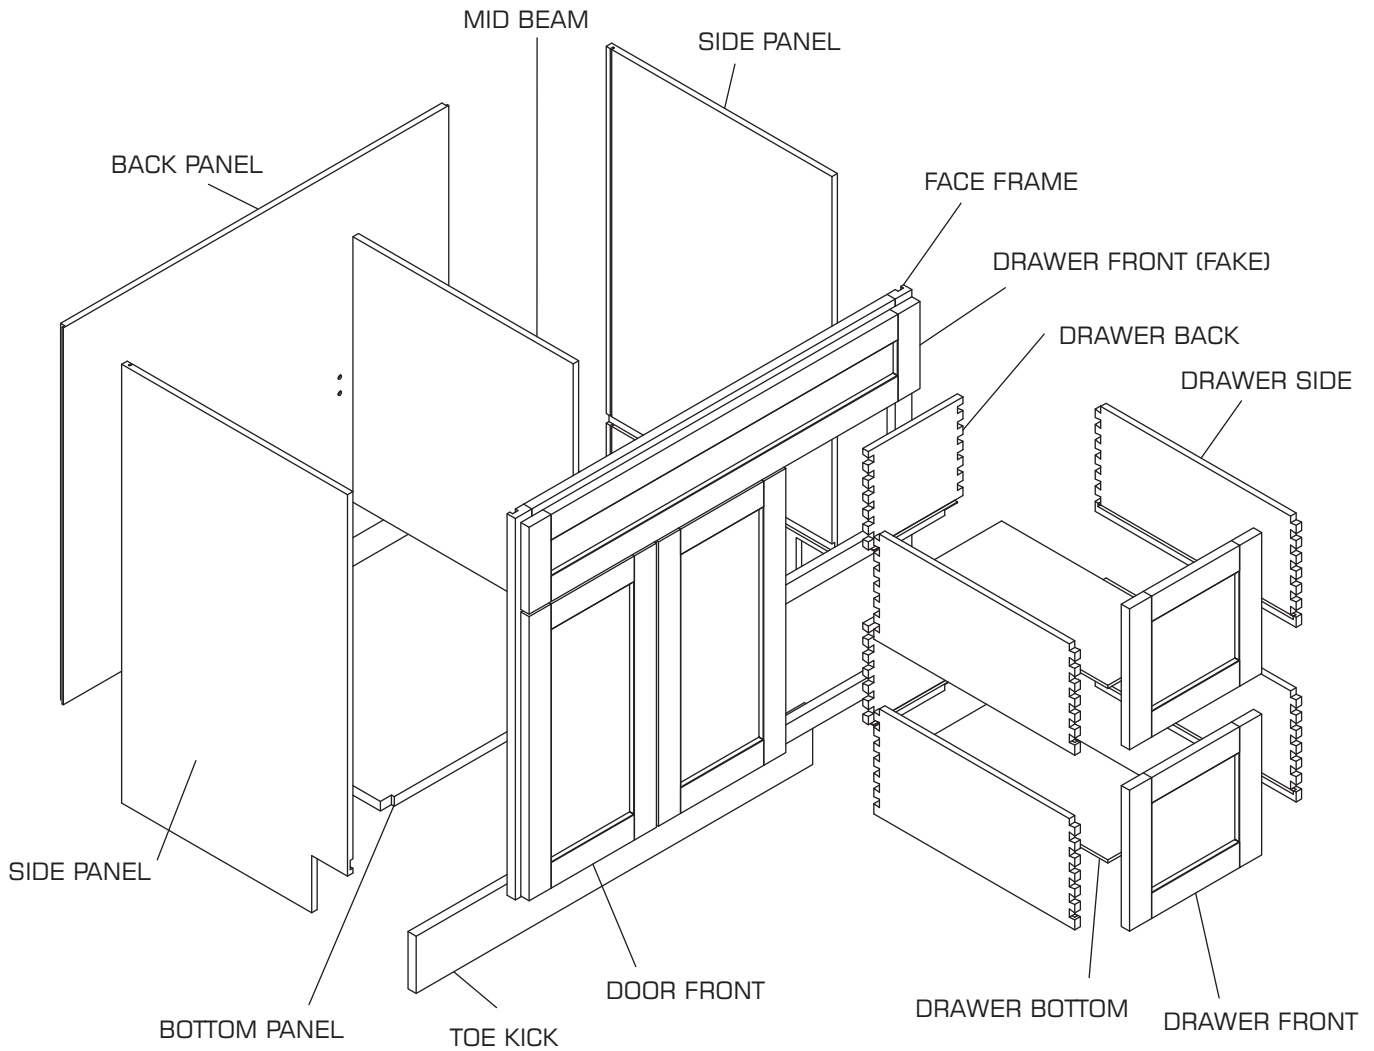


JARLIN CABINETS

VANITY CABINET


STEP 1

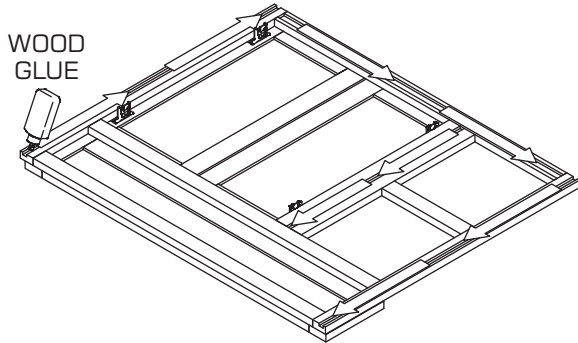


STEP 2

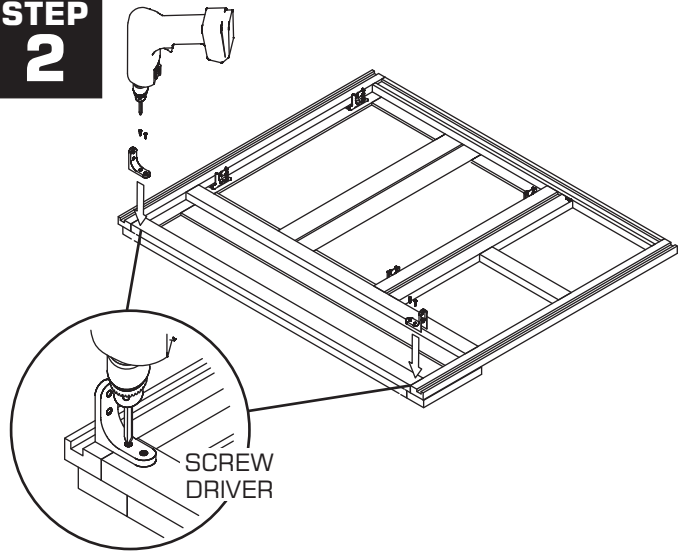


STEP 3

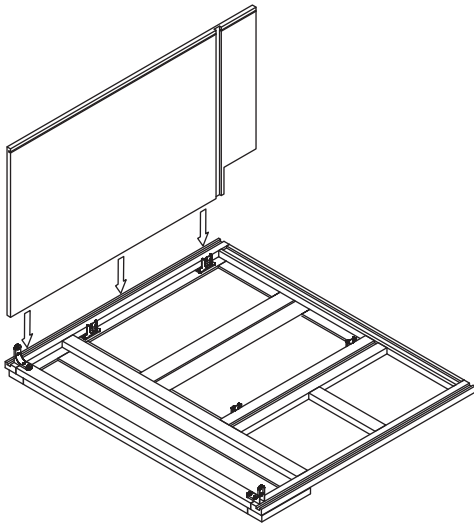


STEP 4

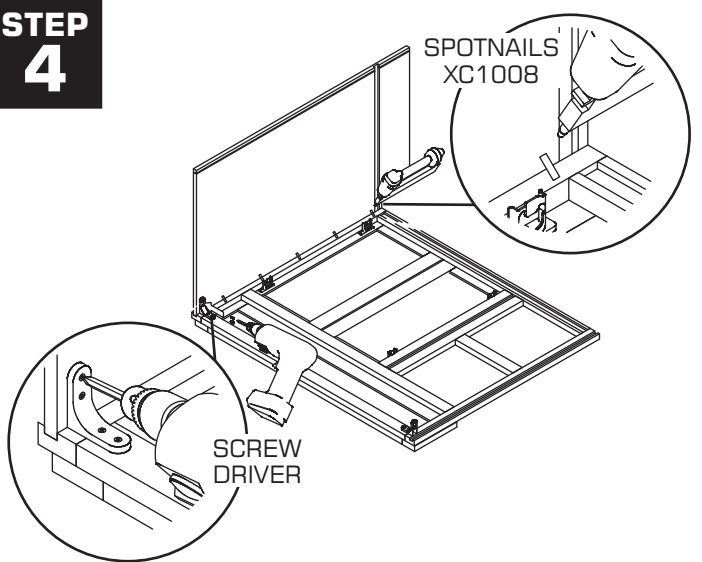

STEP 5

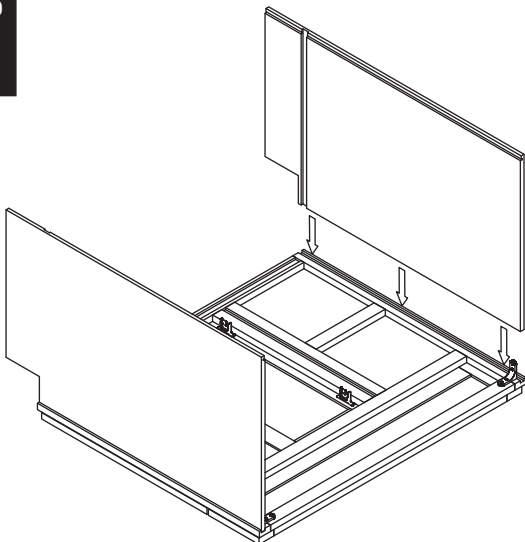


STEP 6

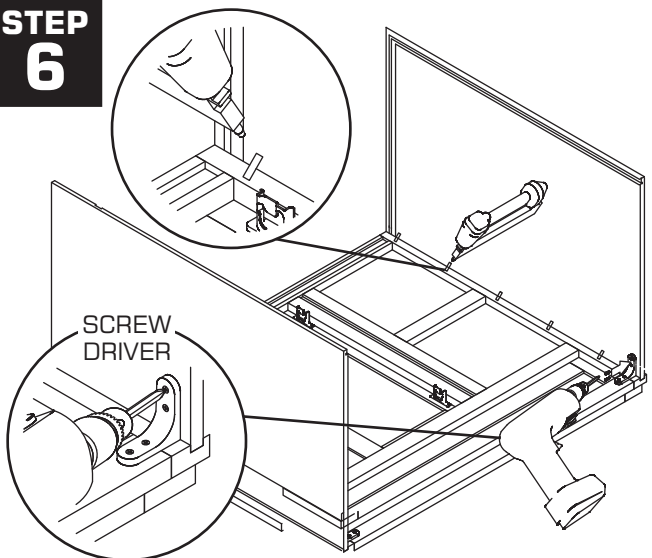


JARLIN CABINETS


**STEP
7**

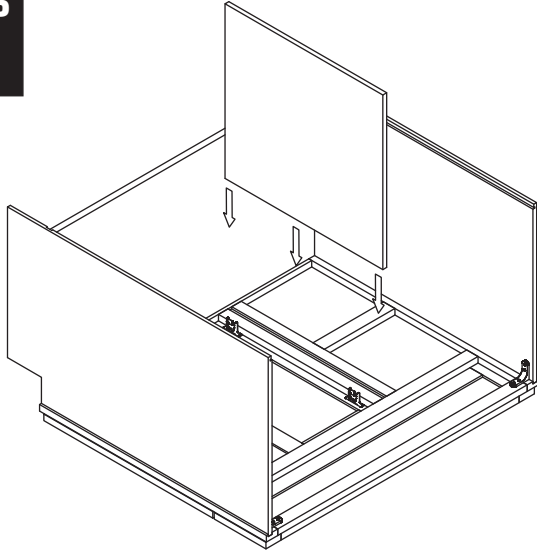


**STEP
8**

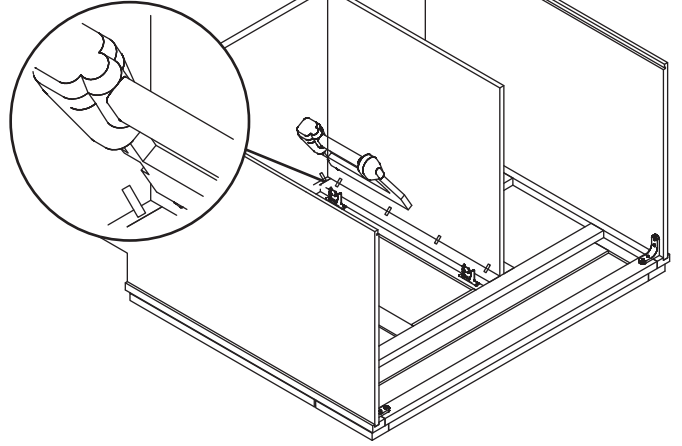

**STEP
9**

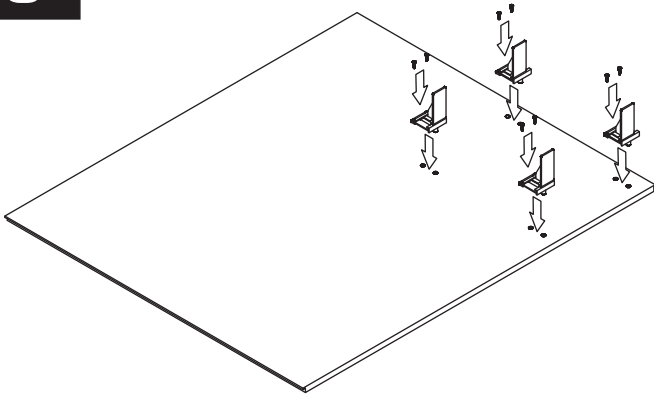

**STEP
10**

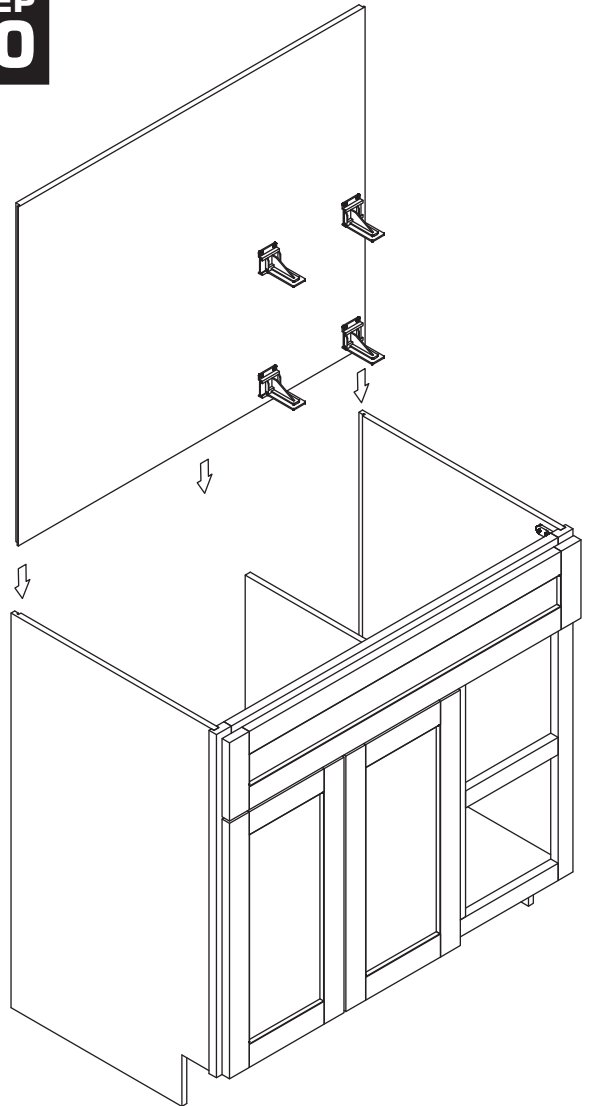


VANITY CABINET

JARLIN


CABINETS

VANITY CABINET


STEP 11

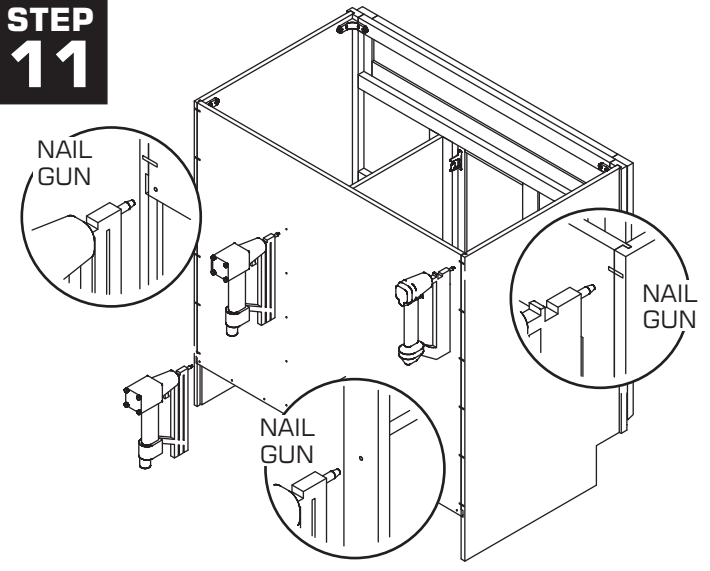


STEP 12

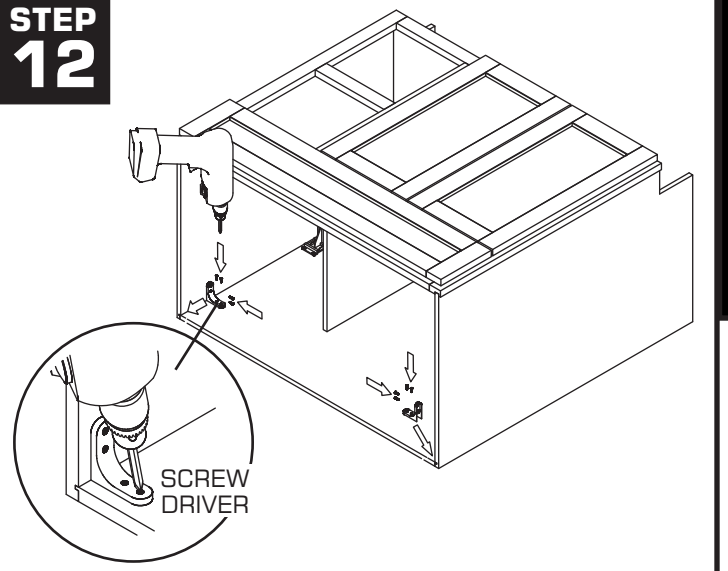


STEP 13

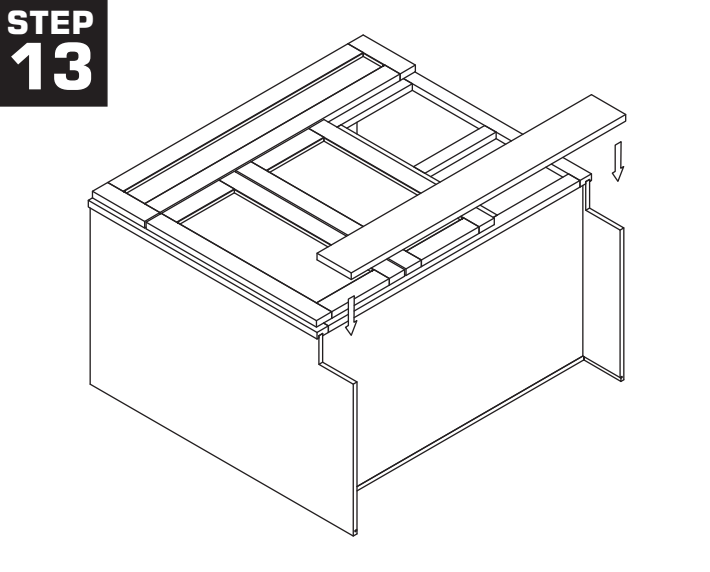


STEP 14

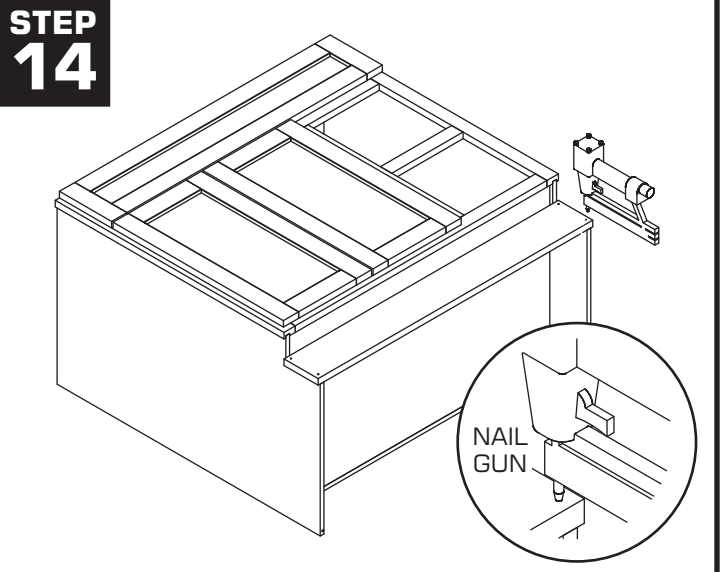

STEP 15

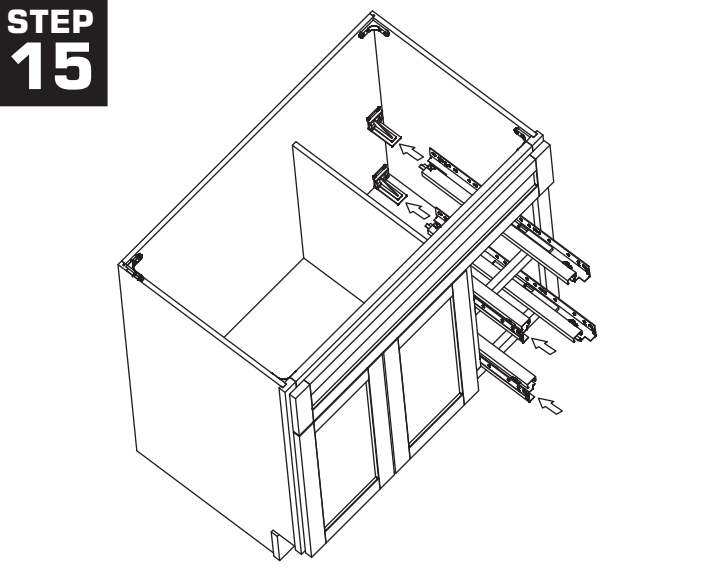


STEP 16

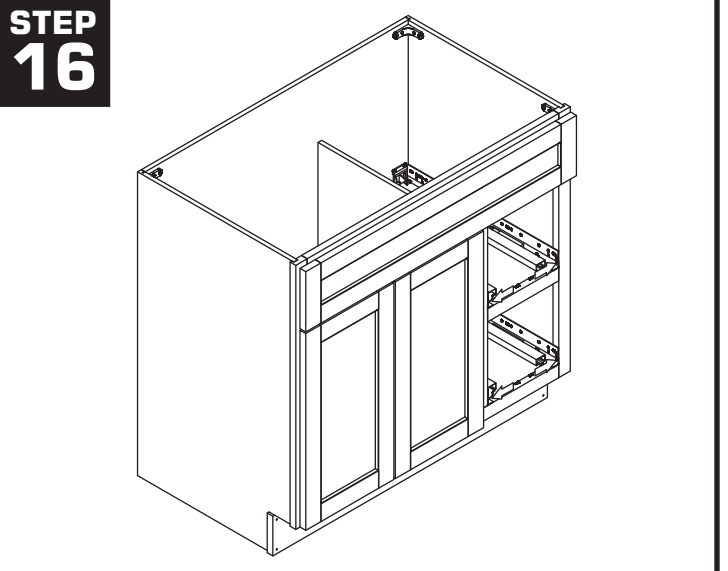


JARLIN CABINETS


**STEP
17**

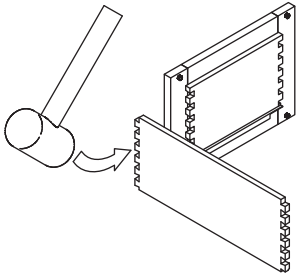


**STEP
18**

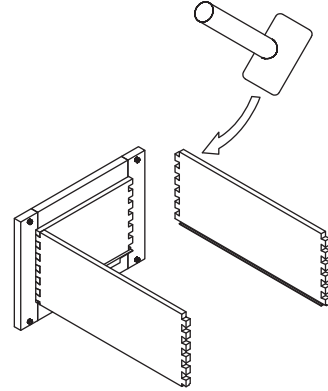


**STEP
19**

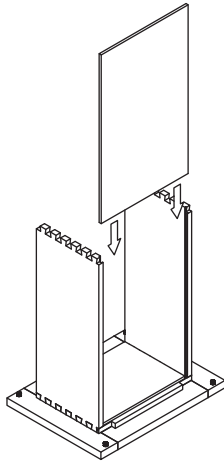

**STEP
20**

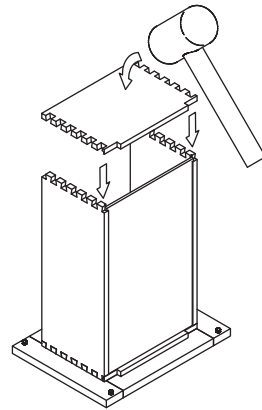


**STEP
21**

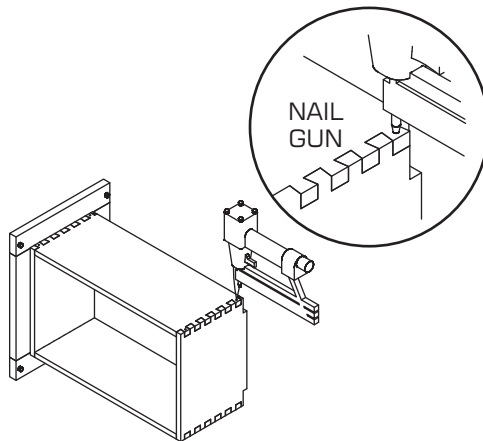


VANITY CABINET

JARLIN CABINETS

**STEP
22**

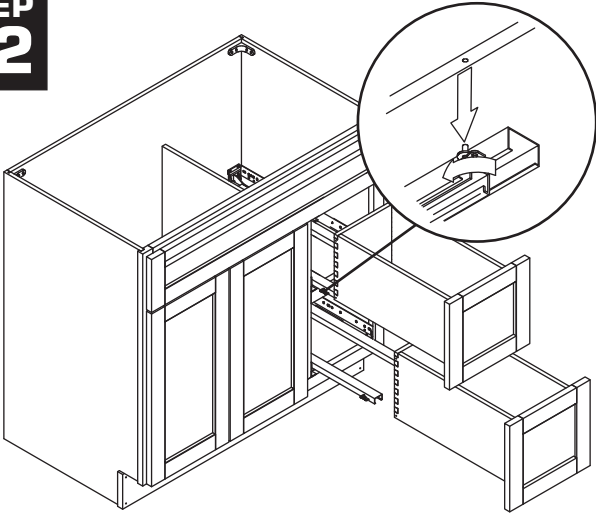

**STEP
23**

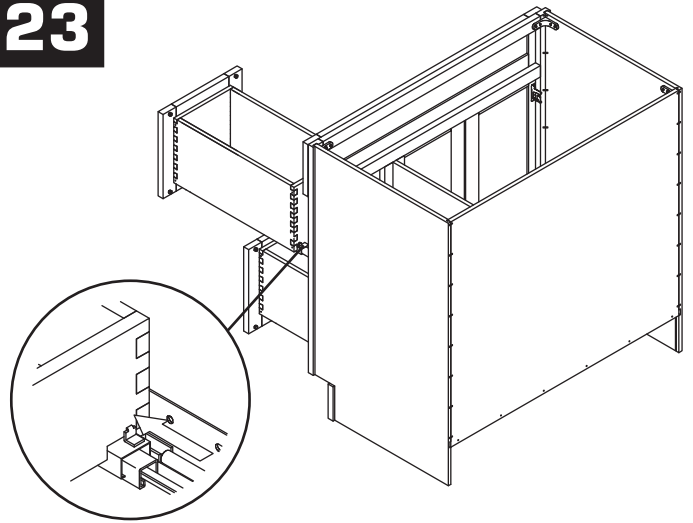

VANITY CABINET

**STEP
24**

